AD-A100 69	AP	PLICAT	ION OF	OMAS IN- AN IN- DONNELL	LINE C	ONTAMIN ROBERTS	MOITAN		RING UN NODIA	117 TO 10-80-C	F/6 1 THF -0053	₩/Z· ETC(I
0F 2	-											
					*** **(*** *1	Ŕ						
41.1								¥ .	:			
IPV 1		 									4.0	
							<del>Za</del> t		,		1 82	
	4.9				€	der Frag		-	17 T SE	*		
. e.				馬爾		# p :						



LAKEHURST, N.J 08733

## NAYAL AIR ENGINEERING CENTER

NAEC-92-146






**්** ුත

APPLICATION OF AN IN-LINE CONTAMINATION MONITORING UNIT TO THE AHT-64 HYDRAULIC TEST STAND

Handling and Servicing/Armament Division Support Equipment Engineering Department Naval Air Engineering Center Lakehurst, New Jersey 08733

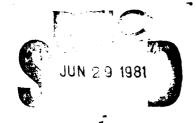

4 JUNE 1981

Final Report for Period 13 Mar 1978 - 30 Sep 1980 Airtask No. A3400000/051B/5F41461400 W.U. #17

APPROVED FOR PUBLIC RELEASE: DISTRIBUTION UNLIMITED

Prepared for

Commander, Naval Air Systems Command AIR-340E Washington, DC 20361

THIS DOCUMENT IS BEST QUALITY PRACTICATION
THE COPY FURNISHED TO DDC CONTAINED A
SIGNIFICANT NUMBER OF PAGES WHICH DO NOT
HEPRODUCE LEGIBLY.

81 6 29 013



# APPLICATION OF AN IN-LINE CONTAMINATION MONITORING UNIT TO THE AHT-64 HYDRAULIC TEST STAND

Prepared by:

E.W. Rotat

E.W. Roberts

P.M. O'Donnell

Advanced Technology Section Handling & Servicing/Armament

Division (927)

Approved by:

F./E. Evans
Support Equipment Engineering Department

Superintendent

### NOTICE

Reproduction of this document in any form by other than naval activities is not authorized except by special approval of the Secretary of the Navy or the Chief of Naval Operations as appropriate.

The following espionage notice can be disregarded unless this document is plainly marked CONFIDENTIAL or SECRET.

This document contains information affecting the national defense of the United States within the meaning of the Espionage Laws, Title 18, U.S.C., Sections 793 and 794. The transmission or the revelation of its contents in any manner to an unauthorized person is prohibited by law.

6/4/81 161

# **DISCLAIMER NOTICE**

THIS DOCUMENT IS BEST QUALITY PRACTICABLE. THE COPY FURNISHED TO DTIC CONTAINED A SIGNIFICANT NUMBER OF PAGES WHICH DO NOT REPRODUCE LEGIBLY.

REPORT HOUSE	READ INSTRUCTIONS BEFORE COMPLETING FORM
MAEC 146 AD-104	
APPLICATION OF AN IN-LINE CONTAMINATION MONITING UNIT TO THE AHT-64 HYDRAULIC TEST STAND	ETMAL TO MAD 100
P.M./O'Donnell E.W./Roberts*	8 CONTRACT OR GRANT NUMBER 1/2 N00140-80-C-0053
PERFORMING ORGANIZATION NAME AND ADDRESS NAVAL AIR ENGINEERING CENTER Lakehurst, New Jersey 08733 Support Equipment Engineering Department (92)	10 PROGRAM ELEMENT PROJECT TAG
Controlling office name and address  Commander, Naval Air Systems Command	12. REPORT DATE 4. June 1981
AIR-340E Washington DC 20361 MONITORING AGENCY NAME & ADDRESS(II different from Controlling OF	13 NUMBER OF PAGES 115 ((Ice) 15 SECURITY CLASS of this septim
11 +4146±1	Unclassified
17 7141401401	158. DECLASSIFICATION DOWNGRADING SCHEDULE
	<u> </u>
DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different	rent from Report)
	rent from Report)
* SUPPLEMENTARY NOTES  * SANDERS AND THOMAS, INC. Div. STV, Inc. Pottstown, PA 19464	
* SANDERS AND THOMAS, INC. Div. STV, Inc. Pottstown, PA 19464  * KEY WORDS (Continue on reverse side If necessary and identify by block in the continue on the	Hydraulic Systems Upport Equipment Ute Measuring Equipment

DD 1 FORM 1473

EDITION OF 1 NOV 65 IS OBSOLETE S/N 0102-LF-014-6601

SECURITY CLASSIFICATION OF THIS PAGE (When Date Entered)

### PREFACE


Vibration sensitivity, which appeared as a major shortcoming of in the hydraulic system monitors in a previous RDT&E 6.2 program, is a neglective parameter to be included in the development of a procurement specification for hydraulic contamination monitors. The report NAEC-GSED-105 (Development of a Procurement Specification for an In-line Contamination Monitoring Unit) proposes a free-standing, two-wheeled cart for the contamination monitor; however, because of a desire to avoid further proliferation of Ground Support Equipment (GSE), the NAVAIRSYSCOM opted for a test-stand-mounted in-line contamination monitor. Mounting on a hydraulic test stand requires the monitor to withstand the vibration signature of the test stand making vibration sensitivity of monitors a critical factor.

This report establishes vibration parameters for contamination monitors which will withstand the vibration levels experienced on the AHT-64 hydraulic test stand. In comparison with other current inventory test stands, the AHT-64 emits the highest levels of vibration because it is a diesel-powered pump unit. Vibration tests of the AHT-64 indicate normal vibration amplitude to be 2 G at a critical frequency of 360 Hz.

A search of available commercial in-line contamination monitors and subsequent testing of candidate models at the vibration signature levels of the AHT-64 revealed a monitor which functions with no distortion. The concept of employing an in-line contamination monitor on a hydraulic test stand is feasible and vibration sensitivity data for the report NAEC-GSED-105 is established.

Consideration is given to application of the contamination monitor to the AHT-64 test stand. This consideration examines requirements for the physical package, location on the stand, piping, electrical and structural changes to accommodate the monitor package plus incorporates portability to allow movement from stand to stand. A listing of drawings affected in the application of the monitor to the test stand is included plus a general statement of changes to these drawings.

This report recommends development of the in-line contamination monitor concept in its application to the Portable Hydraulic Test Stand, AHT-64.

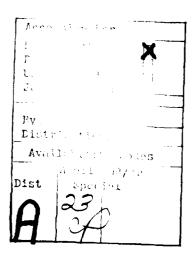

### TABLE OF CONTENTS

Section	Subject
	PREFACELIST OF TABLESLIST OF ILLUSTRATIONS
I	INTRODUCTION  A. BACKGROUND.  B. OBJECTIVE.  C. APPROACH.
11	EQUIPMENT AND PROCEDURES  A. LOCATION OF MONITOR ON AHT-64 TEST STAND
	B. INVESTIGATION OF AVAILABLE MONITORS
	2. MONITOR PARTICULARS. C. SIZING OF CONTAMINATION MONITOR COMPONENTS. 1. SIGNAL ANALYZER. 2. TRANSDUCER OR SENSOR. 3. MOTOR PUMP FOR HYDRAULIC FLUID. 4. 28 VDC TO 120 VAC INVERTER.
	5. DEBUBBLER D. SIZING AND ARRANGEMENT OF CONTAMINATION MONITOR
	PACKAGE  E. REMOVAL AND REPLACEMENT CAPABILITY  1. ELECTRICAL CONNECTION
	F. ELECTRICAL INTERCONNECTION WITH TEST STAND
	2. POWER CABLEG. HYDRAULIC INTERCONNECTION WITH TEST STAND
	H. PHYSICAL ADAPTATION TO TEST STAND STRUCTURE
	I. EVALUATION OF CANDIDATE MONITORS
	J. VIBRATION SIGNATURE DETERMINATION OF TEST STAND
	K. VIBRATION TOLERANCE OF MONITORS
III	CONCLUSIONS

### TABLE OF CONTENTS (CONT'D)

Section	Subject
IV	RECOMMENDATIONS
٧	REFERENCES
	APPENDIX A - MANUFACTURERS' DATA
	APPENDIX B - VIBRATION SIGNATURE
	APPENDIX C - VIBRATION RESPONSE
	LIST OF TABLES
Table	Title
I	COMMERCIAL PORTABLE CONTAMINATION MONITOR SEARCH
ΙΙ	TEST STAND PARTS CHANGES FOR MONITOR
III	CANDIDATE MONITOR EVALUATION
	LIST OF ILLUSTRATIONS
Figure	Title
1	IN-LINE CONTAMINATION MONITOR UNIT ON AHT-64 HYDRAULIC TEST STAND
2	CONTAMINATION MONITOR ARRANGEMENT ON AHT-64 TEST STAND
3	MOUNTING LUGS AND ATTACHING POINTS TO CHASSIS
4	MOUNTING ARRANGEMENT FOR MONITOR ON AHT-64 TEST STAND
5	AHT-64 VIBRATION TEST POSITIONS

### I. INTRODUCTION

- A. BACKGROUND. NAEC-GSED-105 (reference (a)) established the feasibility of an in-line hydraulic system contamination monitor to provide a "go-no go" type indication of hydraulic fluid particulate contamination for directaft hydraulic systems. Vibration sensitivity, indicated as a shortcoming in NAEC-GSED-105, became a critical factor when the Naval Air Systems Command (NAVAIRSYSCOM) rejected the free-standing, two-wheeled cart concept proposed for the monitor and opted for an AHT-64 hydraulic test stand (reference (b)) mounted monitor. An in-line monitor thus mounted must withstand the vibration of the AHT-64, a diesel powered test stand with a nine-piston axial hydraulic pump experiencing high levels of vibration.
- B. OBJECTIVE. This report provides engineering data establishing the vibration signature of the AHT-64 hydraulic test stand. The report also provides data indicating the ability of candidate contamination monitors to operate satisfactorily at the vibration signature levels of the test stand. Further objectives are the examination of locations on the test stand for an in-line contamination monitor, selection of the optimum location and investigation of the various factors involved in the development, fabrication and application of a monitor package to the test stand. This application objective is to provide a suitable monitor with simple operation and "go-no go" indication of hydraulic fluid particulate contamination. The application also examines the feasibility of interchange of the monitor package from one test stand to another.

### C. APPROACH.

- 1. In order to fulfill the foregoing objectives, the feasibility for locating an in-line monitor on the test stand was investigated. When NAVAIRSYSCOM opted for a hydraulic test stand mount for the contamination monitor, a study of possible locations on the test stand was initiated. Evaluation of possible locations on the AHT-64 hydraulic test stand, the selected test vehicle for a stand-mounted contamination monitor, indicated a rear-mounted monitor location to be most feasible. Rough sketches of a proposed concept for this location are included in the body of this report.
- 2. Examination of requirements to satisfactorily locate the monitor on the rear of the AHT-64 indicates a modification of the test stand piping, electrical system and support structure is necessary. Modifications are detailed in Section II.
- Ref: (a) NAVAIRENGCEN Technical Report NAEC-GSED-105 of 14 Jun 1977:
  Development of a Procurement Specification for an In-line
  Contamination Monitoring Unit, Final Report (Prepared by
  J.J. Coyle for NAVAIRENGCEN).
  - (b) NAVAIRSYSCOM Technical Manual NAVAIR 17-15BF-66 of 1 Nov 1977: Portable Hydraulic Test Stand, Diesel Engine Driven, Operation and Maintenance Instructions with Illustrated Parts Breakdown (Teledyne Sprague Engineering).

### NAEC-92-146

- 3. A literature search of available commercial particle contamination monitors was conducted and characteristics compared and evaluated. Support requirements for these monitors revealed the necessity for providing a motor pump unit, an inverter to provide 120 VAC of sufficient wattage to power both motor pump unit and monitor, and a debubbler to extract entrained air from the return line of the aircraft prior to passage through the monitor transducer or sensor.
- 4. With required components established, selection and packaging of these components in a minimum size package was investigated. Component arrangement was developed, and a package design concept formulated. A listing of primary components of the monitor package is as follows:
  - a. Transducer
  - b. Electronic Signal Analyzer
  - c. Hydraulic Oil Pump
  - d. Electric Motor
  - e. 28 VDC to 120 VAC Inverter
  - f. Debubbler Unit

Assembling these components into a package 18 inches wide by 18 inches high by 12 inches deep appears feasible. Figure 1 is a representation of the contamination monitor concept as applied to the rear location of the AHT-64 hydraulic test stand.

- 5. The package concept requires hydraulic quick-disconnect type fittings and flexible loses and an electrical harness with Cannon-type connectors in order to be readily removed and reconnected to another test stand. All of the six primary components are contained within the  $18'' \times 18'' \times 12''$  package.
- a. External hydraulic connections to disconnects on the test stand, which effect a bypass from the return line from the aircraft (within the piping in the stand directly behind the suction return connection port) to the package oil pump, thence through the debubbler, to the transducer, and then return through flexible hose to the test-stand disconnect and into the return line downstream from the pickup point.
- b. The external electrical connections from the contamination monitor package to the test stand employ flexible cable with Cannon plugs on each end. This cable brings in the 28 VDC from the test-stand altenator to the inverter, the 120 VAC output of which operates the transducer light source, electronic signal analyzer, and the pump motor. An output signal from the signal analyzer operates a "go-no go" indicator light when desired hydraulic decontamination level is achieved. The "on-off" switch for the monitor and the "go-no go" light may either be located adjacent to each other on the test-stand control panel or elsewhere within clear view of the operator. Both "on-off switch and "go-no go" right may be mounted directly on the monitor package as long as the view path and access is clear from the test-stand control panel.

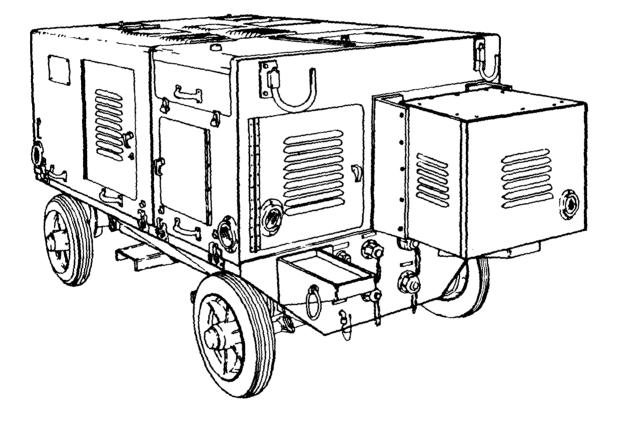


Figure 1. In-line Contamination Monitor Unit on AHT-64 Hydraulic Test Stand

### NAEC-92-146

- 6. A search of available oil contamination monitors adaptable to in-line monitoring has been made and a tabulation compiled indicating features such as size, weight, adaptability for this application, estimated cost per unit and chron-logical data. Discussions of the various monitors appear in Section II and brochures of specifications for each are included in Appendix A. The candidate in-line monitors from Table I, Page 12, have individually varying characteristics. Generally, they are sensitive to entrained particulate contaminants ranging on the small end of the scale between 10.0 and 0.5 microns, sense entrained air as particulates, and because they use light attenuation and reflection as a means of measure, do not provide a good indication of the presence of water in the oil-based fluids. Monitors having very small flow passages in the sensing area of the transducer are subject to blockage by large particles and require reverse flow capability to clear the transducer. For this reason, only those monitors capable of exceeding a minimum flow rate of 3 gpm through the transducer appear to be suitable for the "go-no go" type indication and for providing the relatively low maintenance desired. The Mean Time Between Failures (MTBF) due to contaminants in transducers is unknown and would need to be determined for the candidate monitors selected.
- 7. Resolution of the critical factor of vibration sensitivity raised in NAEC-GSED-105 has been accomplished by a two-step effort. These investigative steps are detailed in Section II.
- a. The first step, determination of the vibration signature of the equipment on which the in-line monitor is to be mounted, has been established and is reported in Appendix B. The AHT-64 hydraulic test stand, during operation, has a normal amplitude of 2 G at a critical frequency of 360 Hz as determined by test.
- b. With vibration levels of the test-stand platform for a monitor established, the second step required is to find a monitor capable of satisfactory operation in such a vibrational environment. An in-line contamination monitor has been found which does operate satisfactorily in the  $\Delta HT-64$  vibration environment. A test report of this determination is included in Appendix C.

### II. EQUIPMENT AND PROCEDURES

- A. LOCATION OF MONITOR ON AHT-64 TEST STAND. Subsequent to a NAVAIRSYSCOM decision to locace a contamination monitor on the AHT-64 hydraulic test stand, occasioned by a desire to avoid proliferation of Ground Support Equipment (GSF) in aircraft environments, investigation into location possibilities for a typical monitor package revealed five possible locations on the test stand: three on the top, one aft within the hose stowage area, and one below between the fork pockets in a heavy steel enclosure.
- 1. TOP LOCATIONS. The three top locations were eliminated primarily because of the undesirable feature of added height to the test stand but also because of structural complexity required to provide adequate support, plus the disadvantage of relatively long hydraulic lines through areas where the lines will hamper maintenance. For some models of the available contamination monitors, hydraulic lines must be as short as possible because monitor response lags with increase of line length.
- 2. <u>BETWEEN FORK POCKETS LOCATION</u>. Investigation of the space between the fork pockets eliminated same as a location for a monitor for the following reasons:
- a. Insufficient depth to accommodate components of the monitor package.
- b. Vulnerability to fork times even with a relatively heavy steel closure to the monitor package space between the test-stand fork pockets.
- c. If sealed against road dirt and water, heat dissipation of motor, pump, inverter and electronics would be a problem.
  - d. Difficult access to the monitor for maintenance.
- e. Such a location would greatly impair ease of transfer of the monitor to another test stand.

### 3. REAR PANEL LOCATION

- a. The location aft within the hose stowage area is most advantageous for the following reasons:
  - (1) Easy access to the monitor package.
- (2) Easily mounted onto aft pipe frame and bedplate of trailer chassis.
- (3) Readily configured for short hose quick disconnects for both hydraulic and electric lines, thus simplifying the change kit for adapting AHT-64 stands to receive a contamination monitor.
- (4) The high visibility of this location from the operator's position at the control panel allows both "on-off" switch for the monitor and the "go-no go" light indication of state of oil decontamination to be mounted directly on the contamination monitor package.

b. A disadvantage appears for this rear location - vulnerability to damage by having the monitor package extend aft beyond the chassis of the test stand. This disadvantage may be resolved by either extension bumpers in the area of each rear tie-down ring or by stiffening all support structure members for the monitor package. The extension bumpers appear to be the most feasible resolution.

### B. INVESTIGATION OF AVAILABLE MONITORS.

- 1. MONITOR SEARCH. A search of available particle contamination monitors revealed eight companies that produce monitors of varying degrees of applicability for contaminant monitoring on hydraulic test stands. Of these, two monitors were actually subjected to tests and only one of these operated satisfactorily.
- a. Cost Range, Volume and Weight. Known costs of monitors investigated ranged from a low of \$3,500.00 to a high of \$17,000.00. There is also a rather large variance in the size and weight, the smallest and lightest of these with a volume and weight of 0.37 cubic foot and 10.5 pounds respectively. The other extreme is over 12 cubic feet and approximately 150 pounds and has the highest cost. Because of a desire to assemble the smallest possible contamination monitor package, only those units on the low end of the size scale were tested.
- b. Equipment Presentations. Representatives of the following monitor suppliers have brought their equipment to the Naval Air Engineering Center (NAVAIRENGCEN) and/or discussed the application with NAVAIRENGCEN Support Equipment Engineering Department (SEED) and Sanders and Thomas personnel at the NAVAIRENGCEN: Environment/One Corp.; Leeds and Northrup Co.; Gam Rad, Inc.; Micro Pure Systems, Inc.; and Millipore Corp.
- c. Monitor Suppliers. The eight monitor suppliers contacted for data applicability to the AHT-64 are as follows (those who gave equipment presentations are preceded by an asterisk):
  - \*(1) Environment/One Corp.
    2773 Balltown Road, Schenectady, NY 12309
    Attn: W. W. Aker (518) 346-6161
  - \*(2) Leeds and Northrup Co., Microtrac Division Dickerson Road, North Wales, PA 19454 Attn: F. Dempsey/R. Snyder (215) 643-2000
  - \*(3) Gam Rad, Inc. 46101 Grand River, Novi, MI 48050 Attn: W. E. Helke (313) 348-1005
  - \*(4) Micro Pure Systems, Inc. 2 Oakwood Place, Scarsdale, NY 10583 Attn: Tonis Oja (914) 723-0896/(401) 231-9429
    - (5) HIAC Instrument Division, Pacific Scientific Co. 4719 W. Brooks St., Montclair, CA 91763 Attn: G. Shinbrot (516) 543-1310/(714) 621-3965

- (6) Spectrex Corp., 3594 Haven Ave., Redwood City, CA 94063, Attn: J.M. Hoyte (415) 365-6567
- \*(7) Millipore Corp., Ashby Rd., Bedtord, MA 01730, Attn: R.W. Schaefer (800) 225-1380/(617) 275-9200
- (8) Royco Instruments, Inc., 141 Jefferson Drive, Menlo Park, CA 94025, Attn: S.P. LaVallee (617) 891-5320/(415) 325-7811
- 2. MONITOR PARTICULARS. Table I lists the eight contamination monitor manufacturers, physical characteristics, model data, cost where known, and pertinent chronological data relating to the investigation.
- a. HIAC Particle Counter Availability. HIAC Instrument Division, Pacific Scientific Company particle counter PC-120 is owned by NAEC and used at the Franklin Institute and NAEC Tribology Laboratory. HIAC PC-120 was made available for consideration a set for the test stand application. Model PC-120 has been replaced by to a "go-no go" type indication set of oil contamination.
- b. Static Bottled Fluiticle counter is configured to a as beer), laser scans a static a Spectrex did not appear interest this application, however, did fo

Spectrex Corporation laser parminants in bottled fluids (such requires a 15-second cycle, ination of their product to suit diterature on their product.

- ture very sensitive particle counters. Lable for particulates as small as .5 microns, capable of determining particle concentrations, and providing digital readout for simultaneous automatic counting of multiple particle size ranges. The Royco unit is extremely sensitive to vibration as evidenced by the experience at NAEC in the Tribology Laboratory, and could not be adapted to an AHT-64 mounted monitor package. Vibration sensitivity of the Model 220 required mounting on a vibration isolation table even within the Tribology Laboratory because of structure-borne disturbance by machinery located at a considerable distance but in the same hangar building.
- C. SIZING OF CONTAMINATION MONITOR COMPONENTS. NAEC-GSED-105 indicated that the contamination monitor proposed for the wheeled-cart concept would have dimensions of 18" by 18" by 43" high including handles, wheels and storage space for connecting electric cable and hydraulic hoses. By locating a contamination monitor on the AHT-64 test stand, the electric cable and hydraulic hoses are reduced to a minimum, requiring either a very small or no internal stowage space and the steering handle and wheels are eliminated. With these reductions in required volume and by optimum or anging of the components, a package 18" x 18" x 12" deep appears feasible, with both the electrical cable and hydraulic hoses normally remaining connected to the test stand. Individual components are examined for size, weight and compatibility in the following paragraphs.

TABLE I. COMMERCIAL PARTICLE CONTAMINATION MONITOR SEARCH

COMPANY	MONITOR	COST	CHRONOLOGICAL DATA
Environment/One Corp. Schenectady, NY 12309	Transducer Cat #D-1012N-007, S/N 130 2.38" x 2.38" x 4.50", 2.0 Lb Signal Conditioner Cat #B-101-0000262, S/N 00013 6.5" x 8.5" x 11", 8.5 Lb	\$3,500	\$3,500 Displayed equipment in Trib Lab 12 Jun 1979. Equipment on loan to Franklin Institute for test Nov 1979.
HIAC Instrument Div., Pacific Scientific Co. Montclair, CA 91763	Analog Particle Counter Model PC-120 6" x 8" x 14", 20 Lb Sensor Cat CMB-1.0 2" x 2" x 5.8", 2 Lb	<del>•</del>	NAVAIRENGCEN-owned Model PC-120 on loan to Franklin Institute 'or test Nov 1979.
Leeds & Northrup Co. No. Wales, PA 19454	L&N Microtrac SSM Cat #C4.7123-DS 25" w x 11" h x 7-1/4" d, 50 Lb	\$4,600	\$4,600 l9 Dec 1978 meeting in Trib Lab displayed and discussed Microtrac SSM - Principle applicable to AHT's but package is much too large. 3 Oct 1979, Demo and seminar at Travel Lodge, Mt Laurel, NJ - same conclusions prevailed as on 19 Dec 1978.
Millijore Corp. Bedford, MA 01730	Millipore Micro Scan-2 7" x 10" x 14", 12 Lb	\$8,000	\$8,000 28 Mar 1979 meeting at Trib Lab discussed adaptation of Millipore monitor to in-line monitoring and degree of sensitivity. No info as of Nov 1979. At best 4 micron detection in H20 - Sensing reaction to hyd fluid unknown.
Royco Instruments Inc Menlo Park, CA 94025	Sensor & Flow Controller Model 220 10-1/2" h x 16-3/4" w x 18-1/2" d 32 Lb (Optics too vibration-sensitive for this application)	l ₩	Royco construction too sensitive to vibration per experience in Trib Lab with Model 220 - Optical system is not rigid enough for any but Lab conditions.

TABLE I. COMMERCIAL PARTICLE CONTAMINATION MONITOR SEARCH (CONTINUED)

COMPANY	MONITOR	COST	CHRONOLOGICAL DATA
Spectrex Corp. Redwood City, CA 94063	Laser Particle Counter Model ILI 1000 Cat #67000 18" h x 12" w x 24" d , 31 Lb	\$7,600	\$7,600 Unit configured to monitor contami- nants in bottled fluids or trans- parent pipes. Laser light source not employed as continuous monitor.
Gam Rad, Inc. Novi, MI 48050	Enviro Monitor Fluid Analyzer Model 260 FA-128A Sensor, PN 2576 11" x 11" x 9" (approx), 12 Lb FA-166 Control Station PN 2575 8" x 8" x 12" (approx) 15 Lb (approx)	\$3,150	\$3,150 Demo in pit at Trib Lab   May 1979, returned unit 23 May 1979. Model 260 fluid analyzer with control station was demonstrated by Bill Helke on setup with small pump. Sensitivity of unit was immediately evident with introduction of 2 mg/l AC fine dust into system. If light source will withstand vib levels of AHT-64, can adequately monitor oil contamination from aircraft - readily adaptable to "go-no go" type indication for use on stand. Light source is incandescent. Vibration characteristics unknown.
Micro Pure Sys: المادية الماد	Micro Pure Systems and Micro Contaminant Monitor Scarsdale, NY 10583 Model 1100 - \$16,000 Fluid Line Inspection Chamber - \$1,000	\$17,000	\$17,000 Units displayed and described in Trib Lab Nov 1979. Indications are that this equipment is satisfactory for Laboratory use only.

- 1. SIGNAL ANALYZER. Of the eight monitors listed in Table I, three appear to be suitable for possible application to the AHT-64 package. These are:
  - a. Environment/One Corp.
    Signal Conditioner Cat # B-101-00002G2, S/N 00013
    Dimensions 6.5" x 8.5" x 11"
    Weight 8.5 Lb
  - b. HIAC Instrument Div., Pacific Scientific Co. Analog Particle Counter, Model PC-120 Dimensions 6" x 8" x 14" Weight 20 Lb
  - c. Gam Rad, Inc. Enviro Monitor Fluid Analyzer, Model 260 FA-166 Control Station PN 2575 Dimensions 8" x 8" x 12" Weight 15 Lb
- 2. TRANSDUCER OR SENSOR. The pickup sensor or transducer for use in conjunction with each of the above three models follow. Of these the Gam Rad Inc., FA-128A Sensor PN 2576 is least desirable because of size and weight, requiring more volume and weighing nearly as much as its matching electronic control station. It can, however, be made to fit into a projected monitor package.
  - a. Environment/One Corp.
    Transducer Cat #D-1012N-007, S/N 130
    Dimensions 2.38" x 2.38" x 4.50"
    Weight 2.0 Lb
  - b. HIAC Instrument Div., Pacific Scientific Co. Sensor Cat CMB-1.0 Dimensions 2" x 2" x 5.8" Weight 2 Lb
  - e. Gam Rad, Inc.
    Enviro Monitor Fluid Analyzer, Model 260
    FA-128A Sensor PN 2576
    Dimensions 11" x 11" x 9"
    Weight 12 Lb (Approx)
- 3. MOTOR PUMP FOR HYDRAULIC FLUID. Of the three remaining candidate monitors, the Environment/One Corp. unit requires the greatest flow rate, a minimum of 3 gpm. The pump unit selected for the monitor package for sizing purposes will deliver 5.46 gpm at 100 psi and 1,200 rpm. Typical pumps operating a this rang can be purchased flange mount coupled directly to end cap of motor. A typical motor for this pump requirement is 1/3 hp, 1,200 rpm and provides a package within the limiting dimensions of the proposed monitor package size. If the motor is 28 VDC, frame size would have to be larger to accommodate the additional copper in windings but the inverter requirement would not then need be sized to accommodate the motor load. Motor pump size projection of 9" x 9" x 18" is predicated on use of Vickers Pump Model No. V210-5-1C-12-5214, flange mounted on a motor of NEMA frame size 182 or 184.

Estimated weight of this motor pump unit is 45 pounds. See Appendix A for reprints of pump and motor data extracted from the Vickers Catalogue.

- 4. 28 VDC TO 120 VAC INVERTER. Sizing of the inverter required to operate the monitor package is based on a demand for 115 VAC by three units in the monitor: the circulator pump motor, the signal analyzer and the transducer or sensor. In each case of the three candidate monitors the transducer or sensor is powered through the signal analyzer. The maximum wattage is 150 for Gam Rad's "Enviro Monitors", the minimum 10 watts for Environment/One. Allowance for the 115 VAC pump motor and the analyzer transducer package of 500 watts total, with a 2-to-1 surge capability for starting the motor, is planned. For planning purposes a DC-to-AC inverter, Model 1172 heavy-duty 500-watt square-wave inverter, manufactured by Wilmore Electronics Co. Inc. (see EEM/1980, 81 p. 3495, Vol. 2), is selected with dimensions of 7" x 8-1/2" x 11" and weighing 32 pounds. A reprint from the EEM catalog is included in Appendix A.
- 5. DEBUBBLER. During particulate decontamination of an aircraft hydraulic oil system, entrained air in the return line is read as particulate matter by contamination monitors; thus any gasses must be removed before the oil passes through the transducer or sensor. To accomplish this, a debubbler installed in the line upstream between the return line and the sensor will vent trapped gasses. A typical debubbler or deaerator requires a vertical cylinder approximately 4 inches in diameter by 14 inches high and weighs approximately 14 pounds (with system full).
- D. SIZING AND ARRANGEMENT OF CONTAMINATION MONITOR PACKAGE. An estimated size for the monitor of 18" x 18" x 12" deep appears reasonable based on the size of commercially available components. Packaging of these components within this space is tight; however, by mounting units on bottom and back only, with front, sides, and cover removable, access to components will be adequate. All vertical faces of the container, including the door, will be louvered in order to dissipate heat buildup from motor, pump, inverter, and debubbler. Figure 2 shows an arrangement whereby the components may be contained in the proposed package as well as a representation of the monitor package as applied to the AHT-64 test stand.
- E. REMOVAL AND REPLACEMENT CAPABILITY. In order to provide a monitor package that can be easily removed and replaced on the AHT-64 test stand, a change kit needs to be developed for attachment to the test stand. A typical change kit provides a mount for the monitor package which rests on and is bolted to the bedplate of the chassis and is bolted to mounting lugs welded to the component assembly bridge. Figure 3 shows the location for the mounting lugs on the component assembly bridge and the area for bolting the support to the chassis bedplate. In order to provide ventilation from the parameter area of the test stand, the mount employs vertical angles as stand-ofs to allow for this ventilation and also to provide space to bring out lines for electrical and hydraulic connections. Figure 4 shows a conceptual arrangement of this mounting method on the AHT-64.

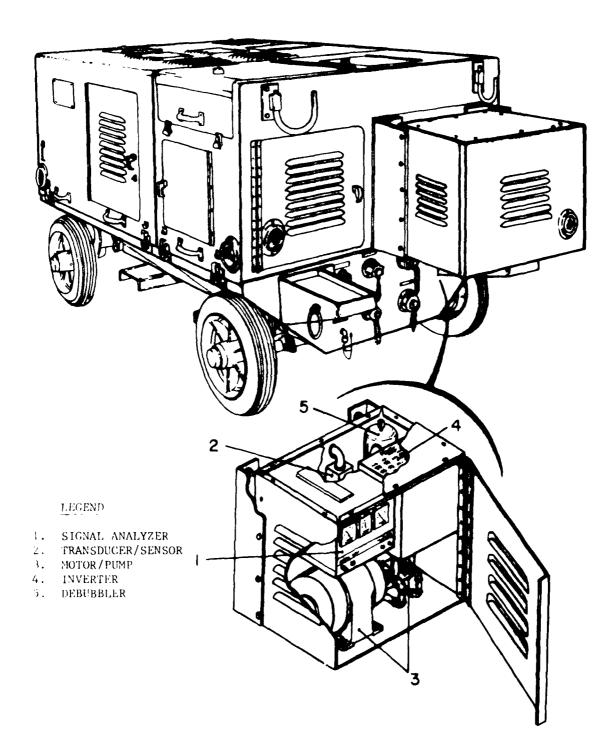


Figure 2. Contamination Monitor Arrangement on AHT-64 Test Stand


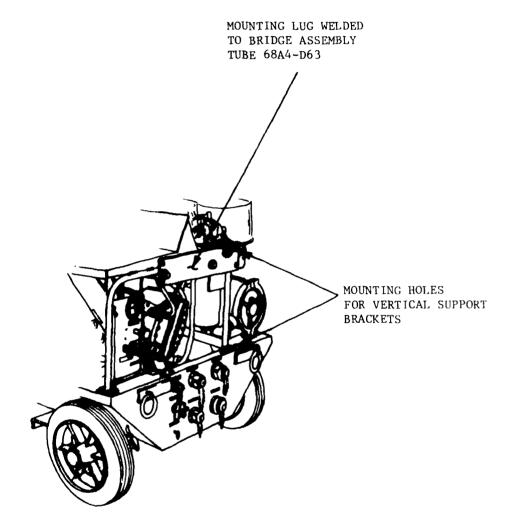


Figure 3. Mounting Lugs and Attachment Points to AHT-64 Chassis

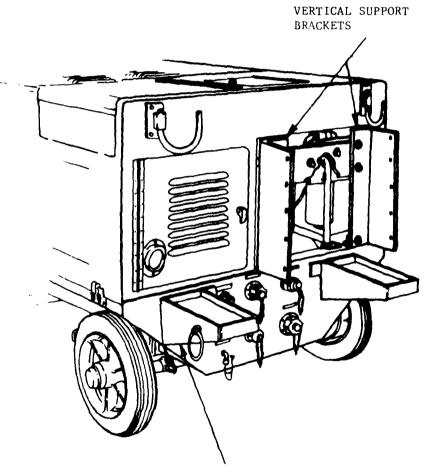

BUMPER EXTENSION

Figure 4. Mounting Arrangement for Monitor on AHT-64 Test Stand

- 1. <u>ELECTRICAL CONNECTION</u>. The change kit necessarily includes a wire harness to connect the 28 VDC output from battery/alternator system to a Cannon plug on the exterior of the stand behind the location of the contamination monitor. A mating connector from the contamination monitor then connects the monitor to the stand.
- 2. MONITOR-STAND HYDRAULIC CONNECTION. Hydraulic connections from the test stand to the monitor include two hydraulic lines tapped from tees in the hydraulic return line within the test stand (behind the return connector from the aircraft) to quick disconnects on the stand behind the monitor package. Short flexible lines extend from the monitor couple to these disconnects for the pickup and return flow through the transducer. The return flow from the monitor transducer is to the downstream tee in the low-pressure return line.

### F. ELECTRICAL INTERCONNECTION WITH TEST STAND

- 1. 28-VDC POWER SOURCE. Electrical power needed for the contamination monitor is provided by a line from the positive side of the battery and alternator as shown on electrical schematic diagram, Figure 1-10 of NAVAIR 17-15BF-66; the line runs through the ignition switch to a Cannon plug on the back of the test stand, thence to an "on-off" switch in the monitor package. The monitor "on-off" switch is connected to the 28-VDC to 120-VAC inverter and thence to ground. The 120-VAC 500-watt output from the inverter connects to the pump motor and signal analyzer. An interconnection from the signal analyzer powers the transducer or sensor.
- 2. POWER CABLE. To provide an easy electrical disconnect capability, a short flexible cable extends from the rear of the monitor package for connection to the Cannon plug on the test stand. When the monitor package is removed from its mount on the hydraulic test stand, the connecting electrical cable may be stowed within the package.
- G. HYDRAULIC INTERCONNECTION WITH TEST STAND. Interconnection with the test stand may be made by incorporating a pickup tee and tube in tube assembly-5 of piping installation Part No. 68A4-J800-1 (Figure 9-4 of NAVAIR 17-15BF-66). This pickup tube extends to a point behind the mounting area of the monitor and terminates in a coupling half. The mating half to this coupling connects with the inlet side of the monitor package pump through appropriate hose, couplings, fittings and tubing. After passage through the components in the monitor package, a discharge line passes through appropriate tubing, fittings, and hose back to another coupling half on the test stand. The mating coupling half on the test stand discharges into tube assembly-6 of Part No. 68A4-J800-1 through appropriate tube and fittings. The interconnecting hoses may be removed from respective couplings on the test stand and monitor package and stowed with the monitor package when the monitor is to be transit red to another test stand.
- H. PHYSICAL ADAPTATION TO STAND STRUCTURE. Previous discussion and evaluation has established the location on the rear of the test stand as optimum for the monitor package. Paragraphs II.E.1 and II.E.2, when considering removal and replacement capability from the rear location, refer to mounting the monitor

package on the tube (68A4-D63-1) of the bridge assembly (68A4-J614 or 68A5-J610) and to the rear panel-assembly top surface (68A4-F31 or 68A4-J607) of the chassis assembly (68A4-J20 or 68A4-J903). Lugs welded to the tube (68A4-D63-1) will absorb horizonta' forces imposed at the top of monitor mounts, and vertical loads will be absorbed by the top flange of the rear panel assembly (68A4-F31 or 68A4-J607). A mounting structure as represented in Figure 4 will be bolted to the lugs on the bridge assembly tube and to the rear panel assembly. This mounting structure is fabricated from structural angles and steel plate. A cutout in the rear end housing (68A4-F17) will enable the end housing to be removed without removal of monitor mounts. The cutout portion will be secured to the monitor mount to maintain present closure and ventilation. An external box shown on some models of the rear panel assembly, presumably added for stowage of the fill system outlet hose, will be removed. Other stowage for this hose may be readily accomplished.

- 1. MAINTENANCE CONSIDERATIONS. The foregoing modification and structural additions to the AHT-64 test stand will not impair any operations of the stand, and added structural members for the monitor may be readily removed if disassembly is required. Mounting lugs welded to the bridge assembly tube do not interfere with any assembly/disassembly procedures of the stand. Other supports are belted to the chassis. Unions at the connection points to the hydraulic suction return line tube assemblies will make added piping above the chassis bedplate removable if required during any major teardown of the test stand.
- 2. OPERATION AND MAINTENANCE CHANGES. Maintenance and operations are less convenient with the addition of the monitor package to the stand. The high-pressure filter will be more difficult to change and attachment of the coupling end to the suction return connection port will require the operator to secure same from a squatting position. The present stowage arrangement on the test stand for pressure outlet and suction return hose is not compromised by the addition of the monitor package. The hose storage manifold and valve will be more convenient to use if rotated 90° with the valve handle extended after ather than down. Provision of bumpers on the after panel of the chassis and location of the monitor package will negate vulnerability occasioned by this valve rotation.
- 3. TEST-STAND PARTS AFFECTED. A listing of test-stand components requiring change to accommodate the in-line monitor and a description of the change is indicated in Table II. The part number column lists those part numbers for Teledyne Models 68A4-J600 and 68A4-J800. Where duplication items appear in the description column, these are to accommodate the differences between models.

TABLE II. TEST-STAND PARTS CHANGES FOR MONITOR

DESCRIPTION	TELEDYNE PART NO.	CHANGE TO DRAWING
Bridge Assembly* " * " *	68A4-J54 68A4-J55-1 68A4-J614	Add welded lug for monitor support
Chassis Assembly	68A4-J20-9 68A4-J607 68A4-J903-1	и и и и и
Component Assy Bridge	68A4-J613 68A4-J902	Show welded mounting lug on drawing
Component Assy Rear Housing	68 <b>A4-</b> F612	Show cutout, remove reflector and hose storage
Hyd Test Stand Assy	68A4-J600/ -J800	Modify sheets of assy to show monitor
Internal Component Assy	68A4-J2 68A4-J601 68A4-J901	Change view sheets 4, 5 and 6 " " 2, 4, 5, 6 and 7 Change B/M and view sheets 3, 4, 5 and 6
Piping Installation """"""""""""""""""""""""""""""""""""	68A4-H731 68A4-H731 68A4-H913 68A4-H913	Add tee in tube 68A4-D4O4-29 for pickup " " " 68A4-D571-23 for return Change elbow MS51521820 to tee for pickup Add tee in tube 68A4-C921-1 for return
Rear End Housing	68A4-F17-1	Make cutout for clearing supports, remove hose storage box 68A4-Cl6-1, remove right hand reflector from housing
Rear Housing Assy	68A4-F610	Change view to show changes on 68A4-F17-1
Rear Panel Assy	<b>68A4-</b> F31-1	Add bolt hole for mounting bracket on top flange of -11, add bumper extension brackets and relocate tie-downs
Right-Hand Side Panel Assy	68A4-F21-1	Add mounting bolt hole to 68A4-608-1 top rear
Wiring Installation	68A4-D741-1 68A4-D586	Add connecting able to monitor switch

<sup>\*</sup> These 3 assemblies have lug welded to tube, bridge assy 68A4-D63.

### EVALUATION OF CANDIDATE MONITORS

- 1. GENERAL. In paragraphs II.B and II.C, investigation of the eight candidate monitors revealed in a data search eliminated all but three models. Betails of all eight candidates are listed in Table I and reasons for rejecting five discussed. The remaining three were considered for their size, weight and compatibility in a proposed monitor package. Of the three candidate monitors, the Environment/One Corp. signal conditioner and transducer were the only units which had been flight certified and had seen service in the Navy's A-7 aircraft. Also the Environment/One unit is the smallest and lightest. Pertinent data of these three candidate monitors appear in Table III.
- 2. AUXILIARY COMPONENTS AND PARAMETERS. Each of the three monitors require an auxiliary circulator pump, a 28-VDC to 120-VAC inverter, and a debubbler to extract entrained air from the hydraulic fluid in order to be adaptable to the AHT-64 test stand.
- a. Power requirements for each of these monitors is of relatively slight significance in light of the fact that the pump motor starting torque demands an inverter capable of providing an estimated 500 watts at 120 VAC.
- b. Contamination monitor package size and weight are very nearly the same for each of these three monitors since the motor pump unit, debubbler and inverter account for approximately 65% of the package volume and approximately 85% of the weight.
- c. Operating pressure for these monitors in the AHT-64 aircraft return line environment will always be less than the lowest rated pressure of the three monitors.
- d. Shock will not be a critical factor for this application because the mass of the test stand will effectively attenuate imposed shocks below critical levels of monitor components. Any revealed sensitivity to shock may be readily cushioned for such small components as employed in the monitor package. Vibration as a factor influencing performance of in-line contamination monitors is discussed in the following paragraphs.
- J. VIBRATION SIGNATURE DETERMINATION OF TEST STAND. The vibration sensitivity pointed out as a deficiency of in-line contamination monitors in report NAEC-GSED-105 has been overcome through a two-step process. The first step of the process is determination of the vibration signature of the vehicle on which the contamination monitor will be mounted. The second step is determining the capability of candidate monitors to withstand the vibration levels of the carrying vehicle. The following paragraphs present the findings of the vibration signature investigation of the AHT-64 hydraulic test stand. The AHT-64 was selected as the vehicle on which to mount an in-line contamination monitor beek se, of all the mobile hydraulic test stands, it appears to experience the highest level of vibration. This high level of vibration is caused primarily by the diesel engine drive of its 3,000-psi, 28-gpm, nine-piston pamp. Also the AHT-64 is a high inventory test stand.

TABLE III. CANDIDATE MONITOR EVALUATION

	ENVIRONMENT/ONE		GAM RAD
TYPE DATA -	SIGNAL CONDITIONER/	HIAC	ENVIRO
COMPONENT	TRANSDUCER	PC 120	MONITOR
Volume: Analyzer Sensor Total	0.352 Cu Ft 0.015 Cu Ft 0.367 Cu Ft		0 445 Cu Ft 0.631 Cu Ft 1.076 Cu Ft
Weight: Analyzer Sensor Total	8.5 Lb 2.0 Lb 10.5 Lb	18 Lb 2 Lb 20 Lb	15 Lb (Approx) 12 Lb (Approx) 27 Lb (Approx)
Pressure: Operating Test	100 Psig 600 Psig	85-3,000 Psi -	250 Psi (Approx) 325 Psi
Operating Temperature: Analyzer Sensor	200° F 350° F	200° F	190° F 190° F
Input Power	117 V 47-400 Hz 10 W	110-240 VAC 50-60 Hz 40 W	117 VAC 50-60 Hz 150 W
Sensor: Shock Vibration	15 G 50 G at 2,000 CPS	-	-
Analyzer: Shock	15 G (on board model only)	-	-
Vibration	2.2 G at 3,600 CP3		-
Particulate Range	2 + PPM	0-100, 0-300, 0-1K, 0-3K PPM	50 PPB to 50K PPM
Flow-Rate Range	3-20 Gpm	Uniform flow rate	0-75 Gpm
Cost Per Unit	\$3,500	\$10,000 (PC-320)	\$3,150


NAEC-92-146

1. COMMERCIAL TEST COMPANY SELECTION. A number of commercial companies were contacted to provide monitoring equipment for use by NAVAIRENGCEN laboratory personnel. Response was extremely varied in cost both for purchase and rental of equipment with lead times extended and costs high. The NAVAIRENGCEN Test Department Electronic Division and a number of commercial testing companies were requested to quote on performing vibration signature analysis of candidate AHT-64 test stands. This service was provided by:

Vibration Specialty Corporation 100 Geiger Road, Philadelphia, PA 19115

The vibration signature analysis is reprinted in Appendix B.

- 2. VIBRATION SIGNATURE ANALYSIS. A vibration signature analysis of two AHT-64 hydraulic test stands was performed, one at Naval Air Engineering Center, Lakehurst, and one at Naval Air Station, Willow Grove, PA, (stand 143 and 117 respectively), to determine existing vibration amplitudes and frequencies.
- a. Vibration energy was monitored at seven locations on the test stand as shown in Figure 5. Signatures were recorded in the horizontal, vertical, and axial directions under idle (1,000 rpm), full-speed (2,400 rpm), loaded (3,000 psig), unloaded and transient conditions. Each signature (see Appendix B) shows vibration amplitude in G acceleration versus frequency in Hz. The amplitude (vertical scale) is logarithmic with full-scale equal to 1 G or 10 G as indicated. The frequency (horizontal scale) is linear from zero to 2,000 Hz with 4 Hz resolution. Described in the heading are test stand number, test position, total overall vibration level, various instrument settings, and test stand operating conditions.
- b. Vibration amplitude response varied by a factor of two or more between the two test stands due to structural integrity differences, not input energy differences. Vibration frequency response was consistent on both test stands that is, 360 Hz was the major source and response frequency.
- c. Basically all input energy was measured at positions 6 and 7, Figure 5. Test position 6, Figure 5, was the hydraulic pump, where loaded (3,000 psig) and unloaded (zero gauge) pressure variations were tested. Measured and recorded were the change in vibration energy levels produced by the two conditions.
- d. Stand 143 showed a considerable increase in vibration (almost double) with load (see Appendix B, Figures 20 and 41). Stand 117 showed very little increase (about 10 percent), as seen in Figures 60 and 77 of Appendix B. The major vibration frequency was 360 Hz, or nine times the operating speed (2,400 rpm = 40 Hz). It was determined that the pump had nine pistons working axially, which explains the high ninth harmonic response in 111 lest positions, predominantly in the axial direction.
- e. Test position 7, Figure 5, was the diesel engine on both stands, rotating at 2,400 rpm, with or without pressure load on the pump. The engine vibration levels recorded on each stand were very similar, and there were no appreciable changes with pump loading (Appendix B, Figures 22, 43, 62 and 78). The major frequency source from the diesel was the 40 Hz signal and the associated harmonics.

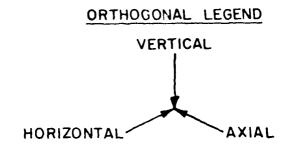

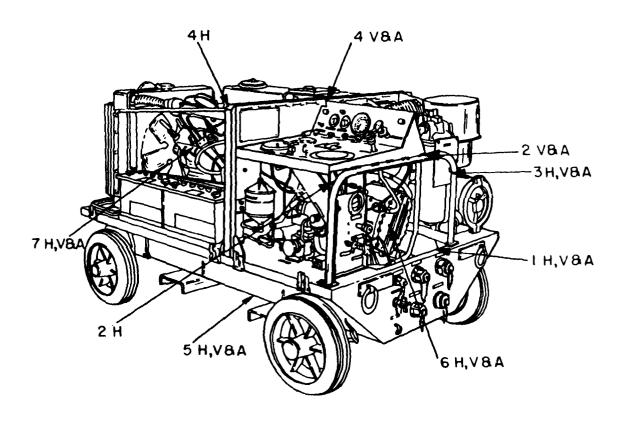


Figure 5. AHT-64 Vibration Test Positions

### NA 90 - 90 - 146

- f. Structural vibration response was measured and its frequency spectrum signature recorded at five different locations on the AHT-64 structure. Remember, the major frequency on all signatures on both test stands was  $360~\mathrm{Hz}$ .
- g. The highest amplitude response (2.2 G) on stand 143, was at position 5, Figure 5 (Appendix B, Figure 36), which is the underside of the base structure of the stand. A level almost equal to this (2 G) was recorded in the axial direction at positions 1 and 3, Figure 5 (Appendix B, Figures 26 and 32). Positions 2 and 4, Figure 5, showed levels around 1.5 G (Appendix B, Figures 29 and 35).
- h. In comparison, test stand 117 had the highest response (7 G) at position 4. Figure 5 axial (Appendix B, Figure 73). The next highest response on stand 117 was 3 to 4 G's (still higher than 143) at positions 2 and 3. Figure 5 (Appendix B, Figures 67 and 68). Positions 1 and 5, Figure 5, had levels around 1 to 2 G.
- i. The only explanation for this drastic difference in response between these two test stands would be the way the control panel is connected to the rib structure at those points. In other words, stand 143 is stiffened by the ribs being rigidly connected together by the control panel, and stand 117 is less rigid by being loose or possibly not connected at all, thereby allowing this center point to vibrate excessively. Upon examination, bridge-assembly mounting bolts were found to be loose and several welds on the bridge cracked.

### 3. ANALYSIS SUMMARY

- a. The excitation energy on each test stand was similar, producing a similar frequency response. However, the amplitude response was different by a factor of two or more. Therefore, the instrument package which is to be mounted on the AHT-64 structure must be able to withstand vibration frequencies around 360 Hz. However, the amount of vibration energy it must withstand is still in question.
- b. If we assume that test stand 143 had "good" structural integrity and needs no further reinforcements, etc., and we assume that test stand 117 cound be liked and/or reinforced enough to respond similar to 143, then the amount of vibration energy which must be withstood by the instrumentation would be 2 G's if mounted on the rear of the stand below the control panel (positions , 2 and 3 on Figure 5).

### K. VIBRATION TOLERANCE OF MONITORS

- 1. After determination of the vibration signature of the AHT-64 test set, a nondestructive test-bench setup was devised which would allow candidate contamination monitor components to be gradually subjected to increasing maplitudes at the critical frequency of the AHT-64. This test bench enables monitors to be tested for their ability to perform satisfactorily in the simulated vibration environment of the AHT-64.
- 2. These tests indicate that an in-line contamination monitor does exist which will operate satisfactorily at the AHT-64 hydraulic test-stand

vibration signature. Procedures, results and illustrations of this test-beach setup are included in their entirety in Appendix (... Of the three monitors selected as applicable, two were made available for tests. Of the two which were tested, one proved satisfactory and the other could not be tested adequately because it was determined to be inoperable prior to any vibration excitation. This model, the HIAC PC-120, is no longer manufactured and has been replaced by a Model PC-320 which can be provided with a signal closure device for automatic shut-off at a predetemined degree of fluid particulate decontamination. Vibration sensitivity of PC-320 is unknown.

### III. CONCLUSIONS

- A. Determination of the vibration signature of the AHT-64 hydraulic test stand provides amplitude and frequency data required to complete the hydraulic contamination monitor specification in NAEC-GSED-105, Development of a Procurement Specification for an In-Line Contamination Monitoring Unit.
- B. A commercial in-line contamination monitoring unit has been satisfactorily tested for operation at the critical frequency and amplitude of the  $\Delta \rm HT\text{-}64$  hydraulic test stand.
- $\mathbb{C}_+$  A contamination monitor package concept has been developed which is adaptable to the AHT-64 hydraulic test stand.
- D. The modification of AHT-64 test stands to incorporate an in-line contamination monitor is compatible with present operation and maintenance procedures of the test stand.

### IV. RECOMMENDATIONS

- A. Development of an in-line contamination monitor package is recommended. This will include assembly of primary components in a common enclosure, mounting on a test stand and operating for an engineering evaluation.
- B. It is recommended that concurrent with development of the in-line contamination monitor a modification kit be developed for adaptation of the monitor to the AHT-64 hydraulic test stand.
- C. The vibration signature data contained herein should be added to the procurement specification NAEC-GSED-105, Development of a Procurement Specification for an In-Line Contamination Monitoring Unit.

### V. REFERENCES

- (a) NAVAIRENGCEN Technical Report NAEC-GSED-105 of 14 Jun 1977: Development of a Procurement Specification for an In-Line Contamination Monitoring Unit, Final Report (Prepared by J.J. Coyle for NAVAIRENGCEN)
- (b) NAVAIRSYSCOM Technical Manual NAVAIR 17-15BF-66 of 1 Nov 1977: Portable Hydraulic Test Stand, Diesel Engine Driven, Operation and Maintenance Instructions with Illustrated Parts Breakdown (Teledyne Sprague Engineering)

### APPENDIX A

# MANUFACTURERS' DATA FOR CANDIDATE IN-LINE CONTAMINATION MONITORS

The manufacturers' data is presented in the following order:
Gam Rad, Inc32
Environment/One Corp38
HIAC Division, Pacific Scientific Co48
Leeds & Northrup Co55
Micro Pure Systems Inc62
Royco Instruments Inc67
Spectrex Corp72
Vickers Inc78
Wilmore Flectronics Co., Inc. 80

# ENVIRO MONITORING

over 20 different parameters, and 40 models

Gampadinc

This partial list of parameters indicates the many instrument systems available in the Enviro Monitor line. If your particular requirement is not listed, don't hesitate to contact the factory for recommendations.

**AMMONIA** CALCIUM CHLORIDE CHROMIUM, HEXAVALENT CONDUCTIVITY COLOR DISSOLVED OXYGEN DISSOLVED SOLIDS FLOW HARDNESS NITRATE NITRITE ORP ORTHOPHOSPHATE POTASSIUM RESIDUAL CHLORINE SELECTIVE ION SODIUM SULFIDE SULFUR DIOXIDE SUSPENDED SOLIDS TEMPERATURE TURBIDITY .

\* Meets EPA design criteria.


#### Introduction to Enviro Monitors

Enviro Monitor describes a series of water quantity instructions that are divided into three major categories.

Single Parameter Series 500 Multiparameter Series 1.50 Wet Chemistry. Series 2000

A single Series 500 and each channel of the Series 1000 Environ Monitor provides the same total capacity. These separate series are available to fulfill the need for single or multiparameter monitoring. The Series 2000 Wet Chemistry Environ Monitors are available for applications that require complex sample treatment or or to measurement.

Enviro Monitors offer single-source capability for monitoring all water quality parameters. This means total instrument requirements for measurement and/or control of influent effluent or process water quality can be satisfied by a single source. Sam Pad. Inc. Enviro Monitors utilize state of the art electronics and proven technology to provide the best optimum system.

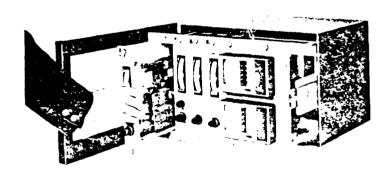

#### **Enviro Monitor Benefits**

Shopping around to mix and match instruments is a mind of the past. By specifying Enviro Monitors you benefit in many ways. For example, single source papability also means single source responsibility. You no longer have to be honderlied with incompatible instruments.

Further benefits are derived from continuity in backaging, electronics, materials, construction, power requirements, readout and output standardization instruction and service manuals, and most of all by integrated test rical assistance in keeping with this concept, we offer engineering specifications and appreciation data sheets.

For over ten years Gam Rad has manufactured instruments to meet customers, needs. That service is yours for the lasking. You don't have to settle for off-the-snelf instruments to meet special requirements. Enviro Monitors have been designed to offer custom instruments at off the-shelf prices.

a 1978 by Gam Rad. Inc

Now Not well of growing and production of the control of the contr

This was a street of the control of analyment of about the control of the control



#### GAM RAD IS ...

a diversified, multi-product company that has been producing water quality monitoring instrumentation for over a decade. With the expanded ENVIRO MONITOR line, we are now prepared to solve all of your water quality monitoring needs.

Our business is building these instruments, at competitive prices, to meet the needs of our customers.

#### ENVIRO MONITOR BENEFITS ...

Single source capability also means single source responsibility, and that means benefits like these:

Compatible instruments, physically and electronically

Continuity in packaging, electronic materials and construction

Standardized readouts and outputs

Standardized input power requirements

Integrated technical assistance

IF YOU'RE IN NEED OF OUR EXPERTISE IN WATER QUALITY MONITORING, CONTACT OUR LOCAL REPRESENTATIVE OR FACTORY PERSONNEL.

represented by

46101 Grand River Novi, MI 48050 313/348-1005

# Fuin Part Analyzers

GAM RAD, INC.

Monitor suspended solids (turbidity) in process streams with these accurate, dependable instruments. Designed to meet modern process application requirements. Ultra-pure mater als to sturries. Monitor and control your process with assurance.



#### Model 370-A Fluid Analyzer


IPPB To 50,000 PPM total range


The Model 370-4 is designed for applications demanding the utmost accuracy particularly with ultra-dure materials down to one part per billion concentrations. Optical system incorporates unique dual light beam dual petector arrangement for extreme sensitivity. Measures 90° scattered ight from suspended solids with almost instantaneous response. BULLETIN 7-200

#### Model 260 Fluid Analyzer

50 PPS to 50 INDIPAM Total range

The Model (60 incorporate a single light beamvisingle detector obtical system to measure 30% scattered (gnt. Luw end Sensitivity is 50 parts per billion. May also be set up to measure transmitted light (absorbance) when we set. Designed for laborations where less sensitivity and range is reduced. BULLETINE 100

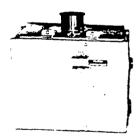

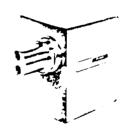


#### Model 150 Fluid Analyzer

10 PPM to 150,000 PPM (15% total range)

The Model (50 is particularly suited for heavier concentrations — Lp to 10 lp total solids. There are no similations on flow rate because of propertype style. Measure light scattered at  $130^\circ$  -back-scattered) from suspended solids. May be installed in process lines of any size or in tanks or ressels. BULLETIN T-300

#### Control Station

The Control Station provides readout, measuring and control circuitry, twen supply and output signal connections for each of the above Senting Stations of Can De Chated adjacent or remote cub to 500 rate away. Standard panel mounted style shown. Table top styles also by an able of eacures as solid state piccuitry of caut band meter and 10.00 millions output along with control switches and calibration controls.

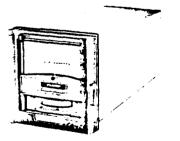

PATENTS PENDING

#### **General Features**

The Models 260 and 370-A are "flow thru" instruments rated at 75 GPM with less than 2" water pressure drop. 242" sanitary fittings are standard and flange fittings are optional. The Model 150 has no flow limitation. This is determined by the line size into which it is installed. It, also, is available with 242" sanitary or flanged fitting.

All Fluid Analyzers are rated at 250 PSIG pressure. Temperature maximums are 140° F for Model 260 and Model 150 and 190° F for Model 370-A. All may be equipped for up to 450° F service.

All models feature condensation proof windows, electronically controlled light source and temperature stabilized detector cells.

All wetted components are made of type 304 stainless steel. In addition, the flow chambers on the Model 370-A and 250 are "Teflon coated. Alternate materials and coatings are available."

All Sensing Stations are suitable for indoor or outdoor installations. Explosion proof housings are available for mazard outlocations.

Power requirements are 117 VAC. 50 60 HZ. 150 watts max. Output signal is 0-100 millivoits DC-adjustable. Milliampere or pneumatic outputs are available.

Other options and accessories to meet most process requirements.

# Typical Uses

FILTER EFFLUENTS
CENTRIFIERS
CLARIFIERS
DEMINERALIZERS
SCRUBBERS
POLISHERS
THICKENERS
MIXERS

CLARITY
EMULSIONS
CLOUD AND FOG POINTS
PRECIPITATIONS
REACTIONS
SLURRIES


BOILER FEEDWATER
HYDRAULIC OIL
SEER
FRUIT JUICES
POLYETHLYNE
RAW WATER
SPENT PICKLED L'OTION
ALUMINUM SILICATE
PLATING ELECTROLYTE
INDUSTRIAL WASTED
SILICON
SUGAR
SOLVENTS



GAM RAD, INC. , 46101 Grand River Novi, /dichigan 48050 Area Code 313-348-1005

## EQUIPMENT CONDITION MONITOR

(201 112011703)

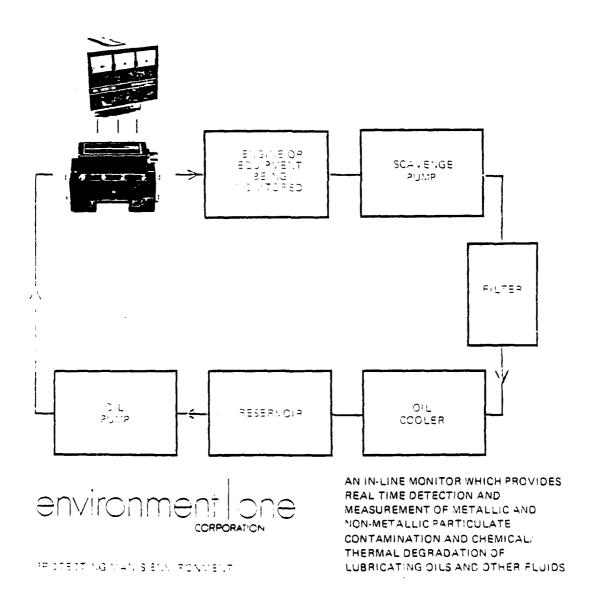

#### FEATURES

- In-line, real time indication of metallic and non-metallic particulate presence and chemical/thermal degradation in oil or other fluids
- Detects ferrous and non-ferrous particulates and dissolved impurities introduced from within or from outside the equipment
- Provides early warning and trending of equipment maifunction
- Automatically and continuously self-calibrating Long term, maintenance free, automatic operation
- Individual outputs for particulate presence,
- chemical/thermal degradation and flow rate

#### I FECIFICATIONS

#### MUSDUCER

#### Cat. #D-1012N-007

Operating temperature to 350° F Operating pressure to 100 PSIG\* Pressure drop 5 PSIG at 18 GPM Flow rate 3 to 20 GPM Shock 15 g's Vibration 50 g's at 2000 CPS Size 2.38" x 4.50" Weight 2.0 lbs. \*Tested to 600 PSIG

#### ALTU DITIONER DNEOHADÎ

#### Cat. #0-1012B-010


- Operating temperature to 200° F
- · Input Power 28 VDC at 0.3 Amps
- / Output 0 to 5 VDC each channel Vibration 5 g's at 2000 CPS
- Shock 15 g's Size 5.25" x 7.25" x 3.3"
- · Weight 3.0 LBS max
- Other configurations available


#### THAL CONDITIONER, TEST DELL REMOTE

#### Cat.#8-101-00002G2

Visual output on panel meters, 0 to 5 VDC each channel Input power 117V, 47 to 400 Hz, 10 Watts Size 6.5" x 8.5" x 11" Weight 8.5 LBS



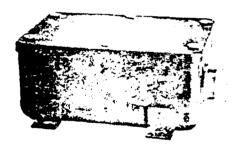

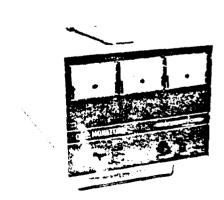

#### INTRODUCTION

The Equipment Condition Monitor is a field proven in line approach poster monitor which provides real time incipient failure prediction and degradation rate of pil-wetted parts, pil overheating, excess aeration, inadequate flow, seal failures and other approximal engine or equipment conditions.

The Equipment Condition Monitor's early warning and trending capabilities can effect genuine aconomies for the user by

- reducing or eliminating expensive damage to capital equipment;
  - minimizing equipment down time,
- reducing maintenance to an las needed basis.
- reducing sample frequency and analysis where S.O.A.P. or similar procedures are followed and
- predicting residual operational relate at a component,
- in addition to lubrication systems, the Educiment Candition Monitor is applicable for other fluids such as titles involved or processificids or theirs in a propulating system.

#### Profesionals of To

The Equipment Condition Monitor System consists of a Transducer mounted in the oil line and a Signal Conditioner located either on-board or at a remote station. For multipoint monitoring, if continual read-out is not required, one Signal Conditioner can accommodate several transducers on a time-share basis.

During operation the oil or fluid is monitored by measuring the light scattering caused by metallic particulates and light attenuation resulting from chemical, thermal degradation and non-metallic particulates. An output corresponding to flow rate is also provided. Unique design features which incorporate internal, stable references make the Monitor automatically and continuously self-calibrating over all system operating conditions.

Designed initially for aircraft gas turbine operation, the Equipment Condition Monitor can withstand adverse conditions of temperature, shock and vibration.

#### TR = 1.50 0.02R

The Transducer, designed to accommodate a broad range of flow rates, is normally mounted directly in the high pressure side of the main oil tine. In this location the effects of free air in the oil are minimized because most of the air is dissolved. As the oil passes through the Transducer incauses a rotor to turn. The rotor contains fluid passages and optical references which are alternately placed in an optical system as the rotor revolves. The optical paths utilize sealed fiber optics to conduct the light into and out of the oil and to produce a light beam parallel to the axis of the rotor. One

photo sensor is mounted radially, so that it views the light beam at 90% to provide the scattering output. The attenuation sensor views the axial component of transmitted light. The output of each sensor is a series of pulses alternating between reference and signal. These are fed to a signal conditioner which computes the ratio of signal to reference amolitudes.

#### SIGNAL CONDITIONER

In the signal conditioner, outputs from the scattering and attenuation sensors are transmitted to their respective, variable gain, current amplifiers which passionly the light puises and eliminate the DC component due to stray light and dark current. Reference channels compare incoming reference puises with a fixed voltage reference and provide control signals to change the gain of the current amplifiers thereby providing a continuous and automatic self-calibrating condition.

The outputs of the flow, scattering and attenuation channels provide from 0 to 5 voits do with a current output capability of 2 milliamperes. These outputs can be applied to condition monitoring multiplexers. A. D converters, recorders, cockpit indicators or other on-board of remote monitoring aguipments.

Two additional features include a test mode and a maifunction indication. The test mode will cause the Signal Conditioner to read out the measured scattering and attenuations levels of the Transducer references. This provides a check of the Monitor circuits as well as the read-out aquipment. The maifunction indication, which can activate a warning circuit, is initiated by component or power failure or low flow rate.

#### **APPLICATIONS**

Designed initially for use as an on-board real time indicator of the potical properties of fuul pation oils in aircraft gas turbines, the Equipment Condition Monitor Systemican be similarly used for continuous or periodic, on-board or remote monitoring of stationary gas turbines vehicular turbines, marine turbines, industrial machinery, gear boxes, fuel systems, transmissions, processing systems and other aguipment using circulating fluid systems.

#### AIRCRAFT



Military Engines and Gear Boxes Commercial Airlines Engines Helicopter Gear Boxes and Transmissions Business and private Jets

#### MARINE



Naval Turbines and Hydraulic systems

Bearing Lube Systems

Merchant Marine Equipment

Passenger Ship Turbines

Turbine Fuel Monitoring


ECM-3(1M)-6/75

#### STATIONARY



Gas Turbines for Power General on Pipeline Engines and Compressors Off Shore Or Lind Rips Mining Equipment Stand-By and Peaking Turbines

#### PROCESSES

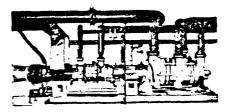

Flushing Cycle Manitoring

Filter Evaluation

Eliquid Chemical Monitoring
 Liquid Rood Monitoring
 Perroleum Evaluation

# ALSO FOR GAS TURBINES AND ENGINES IN LOCOMOTIVES OFF THE ROAD EQUIPMENT TRUCKS AND BUSES

Since the Equipment Condition (100 for 12) stem uses obtical techniques, factors such as field poacity enter into its feasibility for specific sociecations such as it see language fubricating systems or other reciprocating equipment. Contact us with your application requirements so that we can determine the Equipment Condition Monitor's suitable for your equipment. A simple test can make this seremination toward the application on or this cost saving system 100 2017 requirements.

ENVIRONMENT C = CORP 2773 BALLTOWN RD. SCHENECTADY, N.Y 12309 (518) 346-6161

#### THE IN-LINE OIL MONITOR AND ITS ROLE IN ENGINE CONDITION MONITORING

George F. Skala\*

Environment/One Corporation, Schenectady, N. Y.

#### Abstract

An Equipment Condition Monitor for the continuous in-flight detection of abnormal conditions of oil-wetted engine components has been developed. The system employs the principles of light scattering for particulate debris detection and light attenuation for chemical/thermal degradation. Long-term stability is obtained by an automatic and continuous self-calibration feature using internal references. An output proportional to flow rate also is provided. The system can withstand the adverse temperature, shock, and vibration ambients associated with jet aircraft applications. Flight tests on passenger-type, multiengine aircraft and on single-engine military aircraft have been conducted. A bearing failure on an endurance test engine was predicted by abnormal oil condition readings prior to any other indications of failure.

#### Introduction

Until recently, an on-board real-time condition monitoring system has been a conspicuous missing link in airborne engine instrumentation systems. In addition to its functions of lubricating and cooling, the oil is a messenger carrying information which, if heeded, can help prevent some of the 30 to 35% of engine failures caused by oil-wetted components. Engine-installed oil monitoring at present generally is limited to the use of magnetic chip detectors and screens which are periodically examined for collected debris. In some cases, this is supplemented by the Navy pioneered Spectrometric Oil Analysis Program (S.O.A.P.). This can be effective as a preventive maintenance tool if all the human factors from sampling, to analysis, to reporting, to interpreting, and finally to taking corrective action are carefully controlled.

In recognition of the need for continuous oil monitoring, there have been several recent developments which utilize a form of trapping device, such as a magnet or screen, coupled with an arrangement to produce an electrical signal which is a function of the collected debris. The signal is usually generated by a change in resistance, capacitance, or magnetic properties produced by the collected material, or by a pressure transducer monitoring the drop across a filter.

<sup>\*</sup>Manager.

#### GEORGE F. SKALA

These can provide information only on what they have removed from the oil. Also, in order to produce an output which can indicate the start of an abnormal condition, it is necessary to know the rate at which the debris is being collected. This requires the use of some form of differentiating, or rate of change, circuit that would be difficult to design for sufficient accuracy on a real time basis. Finally, all forms of trapping device require regular maintenance in that they must be periodically cleaned or replaced.

#### Requirements

For sufficiently early warning, the oil-monitoring system must have adequate sensitivity and long-term stability to detect a significant departure from a long-term trend. For most jet engine applications, this minimum detection level should be no more than the equivalent of about 10 ppm.

To present a true "on-condition" indication, the detection capabilities should encompass all forms of undesirable oil conditions. These would include the detection of wear metals from the engine, dirt from outside the engine, and degradation of the oil. It also would be desirable if the source of contamination could be identified. However, the qualitative analysis techniques that this entails would, at the present state of the art, require an overly complex approach, or a severe limitation of the kinds of contamination that could be detected. For example, the use of radioactive isotope tagging would eliminate the detection of contamination originating from outside the engine. With a universal detector, once an "off-condition" situation develops, conventional ground-based analysis, such as S.O.A.P., can be used to identify the contamination. A truly effective oil-monitoring system also should require little or no maintenance or attention. Sin. e one of the ultimate objectives of engine condition monitoring is to eliminate unnecessary maintenance, the components of such a system should not contribute to any required maintenance. Other, more obvious requirements are that it be reliable small, lightweight, and reasonable in cost.

#### Design Approach

Because optical sensing is universal, and can be sensitive, this technique was selected for the oil monitoring system developed by Environment/One Corporation. Scattered light is used to detect particulates, and the attenuation of a direct beam detects dissolved impurities.

Optical methods have been in use for some time as sensitive fluid monitors, one example being the measurement of water turbidity. The instruments employed for this purpose are relatively large and often fragile, or mechanically complex, so that a new design concept was developed to meet aircraft requirements.

The major considerations in obtaining stability are to prirect for the large temperature coefficients of solid-state photo detectors, and the changes in illumination due to light source variations and window deposits. An optimum

#### IN-LINE OIL MONITOR

configuration is to use a single optical path, with means to introduce alternately the oil and an optical reference. This is done by mounting the optical references on a rotor which is turned by the flowing oil. In addition to providing the reference function, this causes the light received by the photo sensors to be chopped, so that a.c. amplification, which eliminates effects of stray light and dark current, can be employed.

The references are of glass, designed to duplicate the scattering and attenuation characteristics of partially contaminated oil. Fiber optics are used to transmit light into and out of the oil and to change its direction by  $90^{\circ}$ . The fiber optics are sealed, so that conventional windows are eliminated. Also, because of the collimating properties of the fiber, lenses are also eliminated.

The light beam is parallel to the axis of the rotor. One photo sensor is mounted radially so that it views the light beam at  $90^{\circ}$  to provide the scattering output. The attenuation sensor measures transmitted light. The output of each sensor is a series of pulses alternating between reference and signal. These are fed to a signal conditioner which computes the ratio of signal to reference amplitudes. Since the same light source, fiber optics, and sensor are used for the reference and signal, all variations in these components are canceled out.

The transducer, shown in a cutaway view in Fig. 1, is 2.4 in. wide, 4.5 in. long, and weighs 2 lb. In addition to scattering and attenuation photo-transistors a third one is used to generate a gate signal that is used by the signal conditioner to separate the measuring and reference pulses. Because the photo-transistors' peak response is in the near infrared region of the spectrum, the effect of normal oil color variations on the attenuation output is minimized.

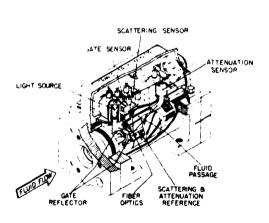


Fig. 1 Transducer.

The transducer is normally mounted directly in the highpressure side of the main lube supply line. In this location, the effects of free air in the oil usually are eliminated because the air is dissolved in the oil. In one engine installation. in which aeration in the high-pressure line was evident in ground tests, it disappeared at altitudes above 18,000 ft where the air separator was more effective.

The signal conditioner can be mounted

#### GEORGE F. SKALA

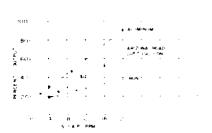


Fig. 2 Equipment condition monitor scattering output; oil temperature, 180°F. Flow = 9 GPM.

in any convenient location. Its size is about 5 x, 7 x, 8 arc, and it weighs 2.5 lb. It in over the separate 0 to 5 y decouputs proportional to scattering and attenuation. Also, because the rotor frequency is directly related to oil flow rate, a third output of flow siso is provided.

The circuit presents a mai function indication in the event of a component failure in the transducer or signal conditioner power failure, cable failure, or loss of oil flow. There is also a self-test feature by which the

correct operation of the oil monitor and its associated read-out equipment can be checked automatically. The signal conditioner circuits also can be supplied on two circuit boards about 3  $1/2 \times 7$  in, for incorporation in the same enclosure with other condition monitoring circuits.

#### Results

A typical calibration of the scattering channel vs S.O.A.P. is shown in Fig. 2. This does not imply a unique relationship between scattering and ppm content because the size and shape of the particles determine the relative amounts of optical scattering. Another difficulty in correlating with S.O.A.P. is the question of its sensitivity to purples vs dissolved materials. For example it was necessary to add about 250 ppm of the Arizona Road Dust to obtain a S.O.A.P. reading of 16 ppm, although some of this could have been due to set thing out of the large particles in the test oil loop. Figure 2 does not represent

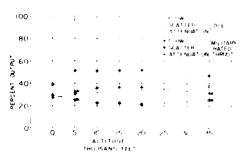


Fig. 3 Equipment condition monitor output; aircraft A7A No. 2658, NATC Patuxent River, Md., Flight No. 1, April 27, 1971.

the maximum sensitivity of which the system is capable. A several-tim, s increase in sensitivity is possible for applications in hydraulic systems when complete airframe condition monitoring becomes a reality.

Figure 3 represents the ora a on the first flight of as the conducted on an account of a conducted particles, Biver, Md. Tests were at altitudes from sea.

#### IN-LINE OIL MONITOR

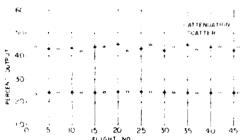


Fig. 4 NADS computer output; equipment condition monitor, aircraft type A7A No. 2658, NATC Patuxent River, Md.

level to 35,000 ft, and at engine speeds from idle to military rated thrust (MRT)' The data show no significant altitude effect but only a change in flow at different engine speeds.

Data at MRT at 5000 ft from other flights of this series are shown in Fig. 4. Most of the flights were of 2- to 3-hr duration, al-

though some were longer, representing cross-country flights to California. Considerable oil was added, although data on how much and when are not available. The flight program was continued for a total of 163 flight hours, with no unusual readings except when oil foaming was deliberately induced by subjecting the aircraft to negative g loads. Carrier arrest landings were also part of the test program. After completion of the flight tests, the oil monitor was removed, and its calibration checked in a test loop. No shift in calibration was detected.

A similar series of tests is now being conducted in which the oil monitor is part of a complete engine condition monitoring system (IECM). In this installation the oil-monitor circuits have been incorporated into the Signal Analyzer Unit of the IECM system.

Figure 5 represents data on a TF41 endurance test engine. This engine experienced an LP compressor thrust bearing failure that was accompanied by high attenuation and scattering readings that occurred prior to other evidences

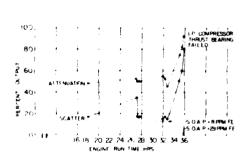


Fig. 5 Equipment condition monitor output; TF41 endurance test, engine S/N 141050 BU9, Oil MIL-L-7808, May 20, 1971.

of malfunction. The S.O.A.P. analysis showed an increase in iron content from 8 to 29 ppm when the engine was shut down. The engine was repaired, and a second endurance run of 1065 hr was completed. Again the oil monitor system was removed and checked on a test loop, with no evidence of degradation or calibration shift.

#### GEORGE F. SKALA

To date, an estimated minimum of 5000 hr of engine running the bas been accumulated by Environment/One's oil-monitoring systems. It is  $\epsilon_1$ ; for some problems due to faulty commercial power supplies in early rightly sindictioners, there have been no reported failures, malfunctions, or false alarms of properly installed systems. In addition to the TF41, the engines on which the monitor has been tested include the TF30, CF6, GE4, F101, and 357. Evaluation testing on the HLH engines, LM2500, TF39, and others is being planned

#### Conclusions

A field proven on board real-time oil monitor for use on jet engines, either by itself or as part of an over-all engine monitoring system, is now available. In addition to warning of incipient failure of oil-wetted components, other benefits include:

- 1) Early detection of failure modes, on development engines or component test rigs, before complete destruction of the failed components. This will allow better analysis of the cause of failure.
- 2) Because of the ability of the monitor to detect excess air under flight conditions, it can be an aid in the development of air separators.
- 3) Possible warning of low oil supply by the resultant increase in trapped air.
- 4) Engine oil changes only when needed, instead of on arbitrary time schedule.
  - 5) Extension of time between overhauls.

# Model PC-120 Confamination Monitor

#### & Analog Particle Counter

For continuous on-stream measurement of particles per second, with high or low concentration limit alarm. Four pushbutton ranges: 0-100, 0-300, 0-1000, and 0-3000 particles per second.

#### Typical applications:

Hydraulic systems clean-up litra riean solvents Deionized water supplies ntravenous liquids Turbine lubricating oils JP-4 manufacturing

Edter units, systems (one sensor upstream, one downstream) obricating oils

#### Hydraulic fiulds

Solvents Fill carts, flush stands, and lest stands

#### Description:

The PC-120 is a single-channel particle counter with an adjustable particle size threshold and a continuous analog output proportional to particles-per-second through the sensor. Outputs can be used for analog. meter display, strip chart recorder, automated data acquisition system, and the alarm system (panel lamp or remote device) The automatic alarm circuit signals when upper or lower pre-set concentration limits have been exceeded

Input may be from the standard HIAC "CM" sensor powered by the PC-120 (with sensor as remote as 1 000') or by other HIAC counters (PC-305, PC-320 or PC-420). Four pushbuttons on the panel face select particle


The PC-120 is portable and can be half-rack mounted.

#### Features:

- Read and plot (with recorder accessory) particle concentration continuously.
- Automatic concentration limit alarm.
- . Direct dialing of particle size threshold.

#### PC-120 Flexibility:

- . Connected to the PC-305, PC-320 or PC-420 (short BNC to BNC coaxial cable), it receives the signal from their sensor and provides analog output. Also can be used with 420 "SB" Series sensor through PC-120 sensor cable
- · Can be 'prime calibrated' in the field.
- Digital count equivalent on strip chart recorder very close to actual, if flow rate and elapsed time are known.
- Selected interval recording leave PC-120 on; connect strip chart recorder through ordinary percentage timer.
- Multiple sensor selector switches are available.
- Sensor can be remote to 1,000°. Standard cable is 6° long.
- Sensors rated to 3000 psi and 200°F.
- No adjustment required for varying colors of liquids.

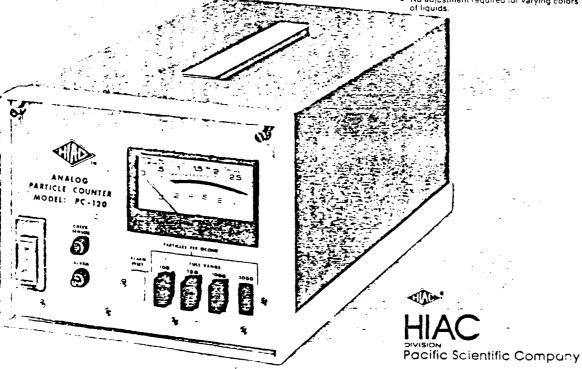

# The 14100400 Anglog Perfiels Count or

#### & Conformination Monitor

# SPECIFICATIONS: Input From standard enAC TM Month censor. From BNC connect in at rear of PC 305, PC 305 or PC 420 paticle ocunters. Output Analog many display On this representation chart reporter CSM for action at a finitive position system Alamics grad where confirmination is greater or less that pre-set limits. Range, particles per second diagonal particles per second diagonal conduction. Calibration Runtim electronic Power ind-240 vec 30 60 Hz. Cize

٠,	ing income service of the service of			
	for the following that the first section is the			
	4 1 See See Stage of Contract			
	1 S Terranight vanishing			
	1 1 1 100 120 JA - 10 63 HA			
В	2   200 040 VAID 50-00-00-0			
	Actestorica			
	1 E 14			
	The page of the			
Certainer To a For				
	Converse Kill The Indies.			
	Î Ghart Paper Gingrei⊓en 11 Pitis			
Chart Paper, Dual Fig. 13 Reds				
	Becorder Pens. Black 10 rach			
-	Additional Sensor 2-50 mis printers		1.1.7	
	i Additional Series 3 30 micrometers		714	
	Additional Sensor, 4-120 th Gram Pters	•	11,4 3	
	Additional Sensor, 1 150 minimaters		(2) ₹	
	Additional Seriant, 12, 00 mins meters	•	<b>1</b> ,4	
	i Špares Kir. (M. 179)	•	Sec. 1964	
	Section Mounting Stand	4	43.75	
	Add nonal Straight in the Serso Correct		1	
	ំអ៊ី <del>e</del> atur sire kittig 🔒 ខាក់ស្មាស់ 😘 🕾 🕾			
_	max spects thad			
	Extra Houth Spinson is	1.		
	Action was a second to the contraction			

#### NO "E

5" x 8" x 14"

10 bs approx

A special cable (AO)1 is required for a remote alarm.

For strong acids or caustic solutions, special sapphire windows and shields are available.

Demonstration units are available at many HEAC Division offices




HIAC

Pacific Scientific Company

P.O. Box 3007 4719 West Brooks Street: Montclair, California 91763

#### Pacific Scientific International

227 Finchiey Road London N.W. 3

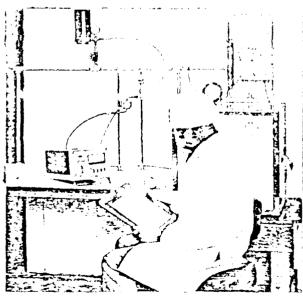

HIAC INSTRUMENTS DIVISION
PACIFIC SCIENTIFIC

OFFICE AND TAKE FINA STREET
PACIFIC SCIENTIFIC INTERNATIONAL
PAUP STRASSE 132
CHARASS SASSAGE SWITZERLAND




Bulletin 7633

PC-320 SERIES "CRITERION" LAB or FACTORY USE

# "CRITERION", MODEL PC 320 PARTICLE COUNTING AND SIZING ANALYSIS SYSTEM

#### **EXCLUSIVE FEATURES**

- Designed to be the nucleus of an integrated particle analysis system
- Six full channels may be expanded to nine or even twelve channels
- "Direct Dial" size thresholds
- Full range calibration in every channel
- Six digit display with built-in timer-
- Sample may be defined by volume, time, or pre-set particle count
- All solid state construction including photo defector.
- Samples may be run wet or dry with no electrolyte needed
- Data is available in print out form if required.
- Total/Delta operation with the flip of a switch.

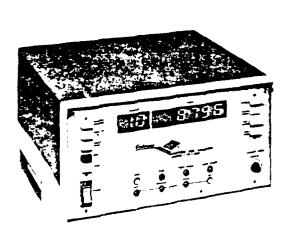

The PC 320 "Oriter on liparticle size analyzer is the most advanced instrument of its type average on todays market."

It not boly measures particles by 929 and counts them in as many as tivelye different 929 groups) but does it all surpmatically?

The PC CCO will operate with full afficiency on liquids of totterent corollal censity and color without any operate to ustrain in a cost on in has an integral to dator content warms of large change in censor operation due to craft at withdow prockage or change in the fluid water.

The Orientan Black has a SCO purput where will intercent with data unodessing equipment or for individual scotssories.

Sensors are compact (2" x 2" x 5") with ultral inear calibration. Sensors can be located as far as 1000 feet from the counter if necessary in addition, multiple sensors with selector switch can be used. Special sensors for use with corrosive iduids are also available.

no addition to these features the Model PC 320 is suited to either sample bottle or an atteam analysis. Every unit is factory call-prated and electronic and reference standards are available.


arrings from 1 to 3000 microns can be accurately counted and sized swith the proper sensor). Circuits are of modular construction for easy Cofugin i replacement or service.


#### LABORATORY PC-320 SERIES "CRITERION"


		Record of <b>enso</b> carrier of 19,100 to 19,000 to 3,000 to			
e .	3	en jorkenske En geme Tal Distriction	Section 1999		
	•	With Samore Timer	4 Carlotte State		
•3	2	With Sample Timer and Recycle Timer	i i i i i i i i i i i i i i i i i i i		
•c		100-1057AC, 50 60 Hz	the second		
0	2	200 250V AC 150 60 Hz			
		CMB 1.3 III.20 micrometer Lizing cacal in	ing on our one of		
	2	IMB 1.6 in 5:30 m prometer sizing hadauling	PACIFIC SCIENT PC		
•9	3	OMBID 1-2 120 micrometer sizing in place to	in the last		
	4	CMP I v 2 5 150 m in amerek i zing laciko in			
		COME of 15 000 min lawren it in present the			
	-	ວ່າ ຄວາມປ່າ 10 ຄົນທີ່ monimeter actical care of the			
	2	E 20 - 20 - 500 micrometer - zing Japach fil			
	8	£ 45   45/2500 m grometer   z ng (apabilit)			
	3	E 150 (150-9000 micrometer uiting capacity)			
	.<	With CMH Sensor (specify little)			

#### ACCESSORIES

tern	Maria Later e	
Additional Standard Sensors	CMB 1 2 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	
Alam tilangi Standard Sensors	<u> </u>	
Alto the will standard Sensor	E 20, 45 197	•
to the Country of Section of		
High Capperingtion Sensors		
AC Fine Tage State Sign near in	The state of the s	
A mean growing	·	
Makimush spieses to the		
Printout 5 stem		
Sensor Rejector Station		-
Sensor Selector Switch	AK 733	* * * * * *
Sensor Selector Surren		
Sensor Selector Switch		
Gensor Selector Switch	48 66 70 5 7 36 7 9 7	

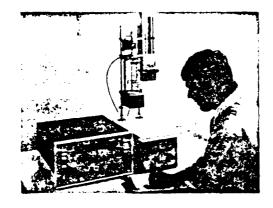

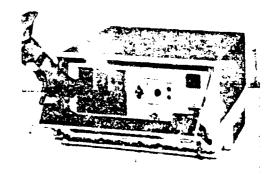

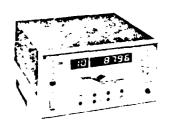



#### BASIC HIAC INSTRUMENTS



THE SECOND OF SPRING COMMON PARTICIPATION


HIAC instruments categorize particles suspended in a carrier medium held in sample containers or dowing in an on-stream system by size and number. They are categorized in from one to six size ranges, with an optional capability of up to twelve channels. These ranges are selected by the operator. Particles are measured accurately regardless of their makeup, size or color characteristics. The instruments count very rapidly approximately 4,000 particles per second and can analyze particles per fluid volume or size distribution alone.

Liquid containing the particles to be measured is passed through a sensor where the particles'

Channel 1 2 Size  $2.\overline{5.10}$ um 10.25um

· Telling Wind vi

HIAC instruments operate on the principle of signt blockage. A constant output from the photomode is maintained by passing a light through a passageway on to a photodiode. As a particle basses an amount of light proportional to its size is blocked. If recommended concentration levels are not exceeded. 4 000 particles second, there is may one particle in every ten measuring zone obtained in the particle is sized individually.

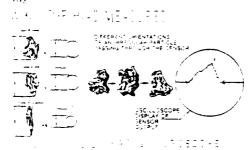


As you can see, the microscope measures all these particles as being the same, whereas the HLAC measures them as being different by the ratio of their areas. The HLAC method gives more information about the particle and is remainly a more realistic upproach to measuring the actual size of the particle.

size and number are sensed and sent along a cable to the counter to be displayed. Each sensor has a size measurement ratio of 1:60 from smallest to largest particle. Therefore, a 1 through 60 microm-

etre sensor can measure particles from 1 to 60 micrometres; a 2.5 through 150 micrometre sensor from 2.5 to 150 micrometres. The instrument operator programs the display channels for any size distribution within the capability of any one sensor. For example using a 2.5-150 Sensor the operator could select the following size distribution:

HLAC measures the maximum area of the particle exposed as it passes through the measuring zone.

The area is equated to spheres in the HIAC calibration tables for a single dimensional reference.

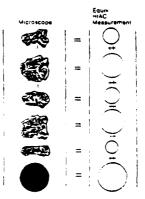

The geral is pass the bottle simple to be analyzed into the sample upiding winder. The analysis is initiated by pushing them be start button. Filtered air is automatically pumped into the bolding with fer and for is the sample through the source and for is the sample through the source and for a metering device which stors the test when the desired strip will be to so when the desired strip will be an analysis results appear at the test conclusion on the automatic particle counter display. Typical test time, me inputte.

#### Age to the

The postream sampler is attached to the dewine to be tested. The pressure from this one is used to force the liquid through the ensure making incline attacks with door matter. The perature sets the door native to a given flow rate and outshes to be ensured from in the rounter. This partially is not to be a finally and it as a consequence of the end of that time, the aroan to research are displayed on the rounter.

The operator attaches the in-line system with flow controller by means of quick disconnects to the equipment to be tested. The pressure from the system forces liquid inrough the sampler at approximatels 500 oc min. Of that 50 oc min. Is directed through the sampler). This flow rate is adjusted by the operator using the flow control adjustment in conjunction with the Delta P gage. The reset button on the counter is pressed and a one-minute analysis begins. At the conclusion the numbers are recorded and the quick disconnects removed.



#### 

Air rate fix draunes . Film Emulsions . Parercerati Schations • Hapodermic Syringes, Viaisand Ampules • Runher St. opers and F. asares • Manufactured Petroleum Products . Hydraulic Fluids • Micro-Circuits Manufacturing • Missile Systems . I gel Systems . Hydraunc Test Stands. · Trucks, Tractors, Hydraulic Systems · Synthetic Fibers . Nickel Plating Baths . Deionized Water . Construction Vehicles Hydraulic Systems · Magnetic Memory Hydrautic Systems · Pumps and Vaives . Turbine Bearings . Aircraft Engines · EHC Fluids · Freon Flush Solvents · Jet Engine Fuel . NC Machinery Hydraulic Systems. Size Control Of

Dental Polymers . Latex Forms . Totanium Di oxide paint & white wall tires! . Dve Stuff Manufacturing.

Seed and Spore . Rust Nodules (suft water portosson research) • Alzae • Naciest Eaet Cranules . Orster Spal . Shrimp Spann . Powders

Parenterai Solutions . Foods & Beverages . Manufactured Silicon Oils

Monitoring D.I. Water and Solvents . Cancer Cell. Studies . Oil/Witter Separation Research . Filter Test Evaluation . Corporeal Blood Filter Evalua-!ion

- (1) No electrolyte or special sample preparation necessary
- (2) Light blockage principle
- 13) Built-in Timer
- (4) Manual or automatic control, remote or local.
- · 5 Indicator lamps
- Si Total solid state construction including photo
- a) Printout system
- bi Calibration kit
- c) Sensor selector switch
- d) Spares kits

An automatic system for counting and azing particles in Juids with a memory to store 5. For 12 channels of information and with a linkle 5. figit display

- A. From CMB Senes Sensors
- 8 from (MH Senes Sensors
- A <u>BNC</u> = 7 contribuse level gensor analogue b <u>Server</u> For censor ABS Automatic Bortle Sampler
- D. Lumo Voltage: For lump adjustments, replacement E. Printout. 3-3V 3CD for Printer of ITL Logic Circuitry
- F. Accessories (a) Remote Display

- Br Remote aniotf fer Computer data acquisition
- (d) Simultaneous display

Direct dial electronic threshold size adjustment to set each channel inviwhere within the size limits of the sensor.

Factory prime catibrated using spherical standards with calibration coart provided

1-99 seconds


1-99 minutes

OFF 100, 1K, 10K, 100K To indicate blockage, lamp maifunctions, optical density changes. 115-230 VAC ± 10% 47-63 HZ, 40 Warts Size: (3"W x 9% "H x (3"D Weight: 40 lbs.

## HIAC INSTRUMENTS DIVISION Pacific Scientific Company

P. O. Box 3007 • 4719 W. Brooks St. Montciair, California 91753 Telephone: (714) 521-3965

#### L&N MICROTRAC Suspended-Solids Monitor (\$500)

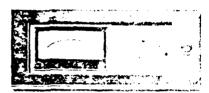

- For accurate continuous monitoring of the true concentration of suspended solids in a
- Independent of color and particle size.
- Direct readout in parts per million
- \* No calibration material required, cambration can be checked against standard (ab. procedure on real samples.
- . Output signals for process control, recording or alarm
- \* Designed for high reliability in rugged environments
- Remote, unattended operation . . low maintenance requirements
- . Optional particle-size output (Volume Mean

The Microtrac Suspended Solids Modifor at loads to deep inheron of ownlangle Solids Modifor at loads to define the matter in too long to deting the matter in too long to deting 190m (deep earning at a matter of an inhere is so gain to late in a size of a size of loads to deep earning at 3 gain to late in late with or any loads to leave the size of a size of loads to load to loads to load to load

The live of the rule obl**imet**ry measuralment in the uspendent Burger and the control of the con

#### APPLICATIONS

The Armstral of the second of

ALL CONTROL OF THE CO

Taffic Town (Town of American State of American المراجعين

emiliar The All Index (group of the Carlos of the Carlos

UESCS & NUMBER DO LADIANCED BUSINESS LE LUL A tretulo de la con-

#### **OPERATION**

Alliquid stream to be monitored is passed through an rtegral sambre de livinich is i cuminated by a continuous. aser source. Suspended solids in the stream scatter ght as they bass through the delf the scattered light is objected by a lens which focuses the light on a proprietary Compumask'\* octical filter. The octical filter passes. a selected portion of the light, which is then focused by another ensignto a photodetector

The light received by the detector is proportional to the so ume or particles in the hould stream. The instrument automatically corrects for the attenuation of the laser due. to light scattering and normal tesithe output signal to the incident intensity. These lautomatic corrections permit reading a true linear volume response independent of ight absorption by the nost guid

In training operation is extremely simple. A zero ad-ustment is made with clean water truwing through the case. The sample stream is then switched to the instrument, which continuously measures the amount of sus-

A thertime single-point palibration using gray metric data taken on a process sample from the instrument out-

et is used to adjust for true mass loading. Routine operation consists of checking the zero with clean water cusually once a day) and cleaning the sample be with the punger provided lusually once a week! Decide each ng and zero adjustment are both accomplished without entry into the instrument, and take only a few minutes to

Compared to other monitoring techniques, the SSM offers significant advantages including


- Direct measurement of zonumetric occidentration or mass loading after a single lone-point calibration
- Linear dynamic response, independent of particle size in the suspended-solids range.
- True continuous analog of the gravimetric method. avoiding the inconsistent relationships between turbidity and suspended solids
- No routine calibration only an occasional zero check required
- Optional putput signal representing average particle. size can be provided often useful in checking performance of control or process equipment
- Automatic compensation for variations in transmission, unaffected by color of riquid.

#### TURBIDITY AND SUSPENDED SOLIDS


These two measurements are widervilued in water and wasterwater processes. Turbidity is related to the visual Larity of a stample, and depends upon the prossivent that area or the particles the concentration or dankers and the point of hands to displaced 50 or so measurement or band to a trocentration in the language and the point band to the contraction in the language entire to total and demeadle 50 or The measurement is referenced against the gray metric of tration technique and must therefore be independent or size-test out on over this range.

Prior to the introduction of a true suspended-solids monitor furbidimeters were employed to mony suspended solids sometimes having scales marked in pains per million. The relationship between turbidity and true suspended solids is consistent only if particle-size. distribution and host-liquid to or are constant and if colpidal particles are low in concentration compared to the suspended solids, ever


Turdidity, and suspended solids are each userullulare measurements with different uses, and come action between them should not be attempted.

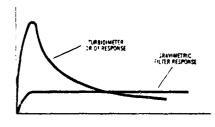

In singure, lustrates the response for a ruroldity particle-areas instrument, with constant cading and variable dampe size vinie of the rup diseases is colained vinies of the rup dimeter lust cadxisplatter convardispatter or 30 water representations.

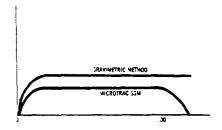

This tigure il ustrares the litter moot the Microtrad SSM victime Of litesconse to the gravimetric method. After a chevilme single-count dat oration intese curves would be cound bent over a range of about 100 microns.

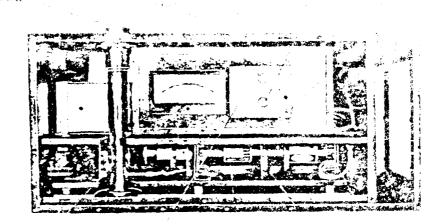

AMPLETON TAMPLE N STAN 1979 HAT NOT NOT A STAN HAT

#### SPECIFICATIONS

and the property of the second second

Sensit vity

Sample Temperature Range Typical Flow Rate: Computation of the second of the second


Controls larger with the control of the control of

#### Mercor

OPTOMS ARAB.		
-1 ure	2:42.5	****
41.41.4	. •	
ets to the second		
* 401 - 652		gram to greet
	1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1	rander existing of
**************************************	X	The second secon
	**	

#### Leeds & Northrup

#### Typical Plumbing Connections for Microtrac SSM

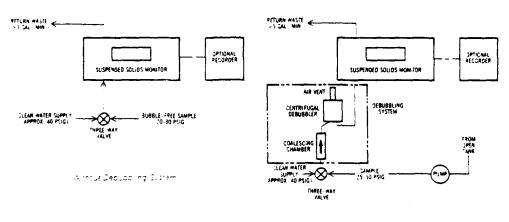

win Declicaling System

Aisp avaitable

#### 7991 MICROTRAC Particle-Size Analyzer

for particle-size analysis in the laboratory

- Designed for plant and quality-control lab analysis.
- Available for wer success and dry powders suspended historic with optional ability to measure on powders in air.
- Patric e-size range in 3 to 178 or 3 3 to 300 microns.
- Unlike totical system sample tell and processing electronics offering the following features.
  - 13-channel histogram bulbul via htegral digital printer
  - -- Coerator independent insensitive to sample concentration or density factory calibrated
  - Summary data on size distribution and surface area
- Repeat analyses every 3 to 800 seconds new sample every 2 minutes

Ask for Data Sheet 34 T12477P

#### 7981 MICROTRAC Particle-Size Monitor

- Designed for on-line real-time process monitoring and control
- Available in two standard configurations, wet sturny or dry powder.
- Uses same optical system sample behand processing electronics as Microtrac Analyzer drus
  - On-line sample-conditioning system
  - Digital or analog outputs with local digital display
- Rugged NEMA 12 naustrial enclosure
- Internal security system to dermit remote unattended operation
- Provides same data output forms as the T991 Microrad. Analyzer: digital or analog, plus any three oustomer-specified percent-bassing channels analog outrent outputs or printer obtional.
- Usable on-line in process monitoring or off-line in routine analysis.

Ask for Data Sheets C4 T122-TP and C4 T126-TP


Questions about applications should be directed to the Advanced Business Development Department Leeds & Northub Company from Males P4 (9454)



JATA JHFFF 1 12 55 HZ 378

PYRIGHT 378 LEEDS A NORTHRUP TOMPANY

MINTED NUSA

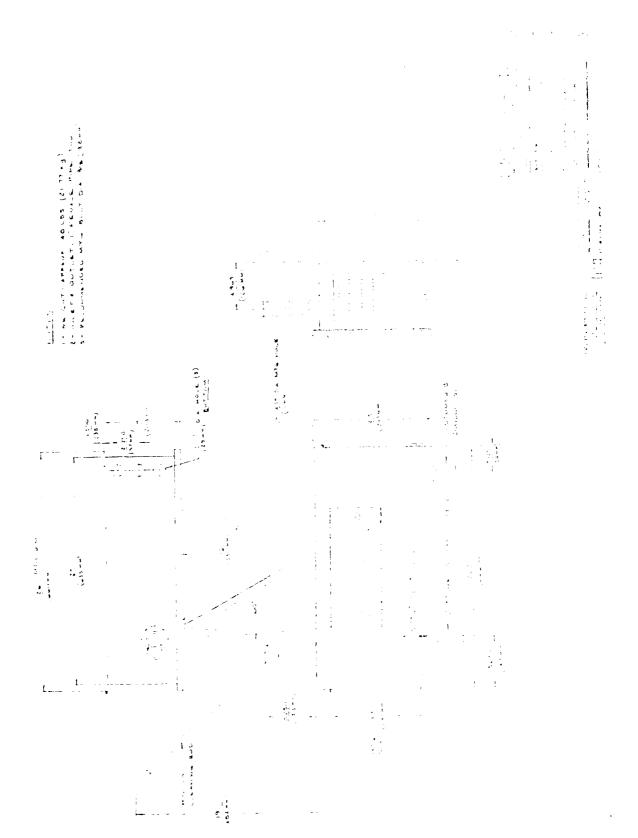

59 (A - 39)

i

ţ

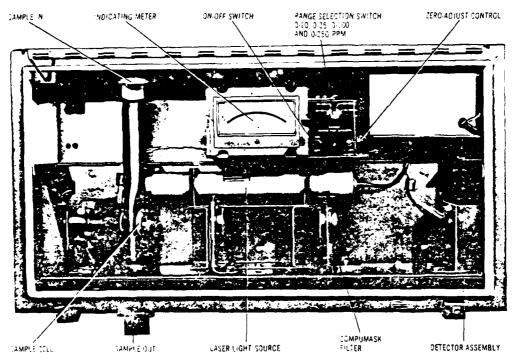


Figure 9: Interior of Suspended Solids Monitor


	LEEDS & NORTHRUP COMPANY Dickerson Road - North Wales Pannis, an a fed a MICROTRAC To Suspended Solids Monitor - Abbreviated Price List
	Sales Work Sheet
	Load Range   \$3880 (-10) Delivery 8 weeks   2. 0-2000 ppm   \$3880 (-20) Delivery 8 weeks
	Sample Cell Materials   1. Brass/Copper   Standard (-10)   2. Stainless Steel   S300 (-20) Add 1 week
	Window Materials   1. Optical Crown Glass (0° -60°C)   Standard (-10)   *2. Fused Silica (Hi Temperature) (0° - 120°C)   \$370 (-20) Add 2 weeks   *3. Sapphire (Hi Abrasion)   \$240 (-39) Add 2 weeks
	Sample Conditioning None (-00)  *1. Debubbler Std Mtl \$450 (-10)SS \$750 (-11)  *2. External Sample Pump Cast Iron \$450 SS \$1150  *3. Laboratory Sample Conditioner \$3950 (-40) Add 2 weeks
	Size Measurement None (-00)  *1. Mean Volume Diameter. 0-10V, 0-100mV Output ( 5660 (-10)
AIAI OG NUMBER	Display  1. Analog Meter Standard (-10)  +2. Digital Meter S180 (-20)  +3. Remote Meters (Analog or Digital) See Catalog
CAIAI UG	Remote Outputs  *1. Non-isolated analog current and coltage (internal) 4-20 mA, 1-50 [] 160 []  *2. Isolated Analog Current (separate package) See Cat. [] 1150 1-30 Add 2 weeks  3. Recorder outputs 0-100, 0-100 mV [] Standard (-00)
	Remote Alarms  1. Remote Window Service Indicator Output Standard (-00)  *2. Alarms, Indicators and Controls. See Catalog
	Controls  1. Remote Manual Zero Adjust Input  *2. Remote Range Selection  *3. Automatic Zero Adjust. See Catalog  Standard (-00)  \$55 (-10)
	Line Connection  *!. 6-foot Line Cord and Plug 120V, 60Hz 515 (-66)  2. Conduit Entry, 120V, 60Hz Standard 220-60 120-50 (-26)  (-16) (-26) (-15) (-25)
	Mounting Provisions   1. Wall Mount   Standard (-10)   Standard (-20)   Add 2 weeks   T3. Floor Stand   S100 (-30)   Add 2 weeks   Mounting   Mounting   Standard (-10)   Standard (-10)   S100 (-30)   Add 2 weeks   S100 (-30)   Add 2 we
	Spares - Mone (-00) Recommended Spares (See Catalog).  * Available at additional cost. See Catalog for other options. Prices as of Dec. 1, 1978 are subject to change without notice.

TELEPHONE 215 643-2000 + DABLE ACCRESS (LEEDSWIJETH

#### MICRO PURE SYSTEMS INC.

Monitoring Contaminants in Closed Systems



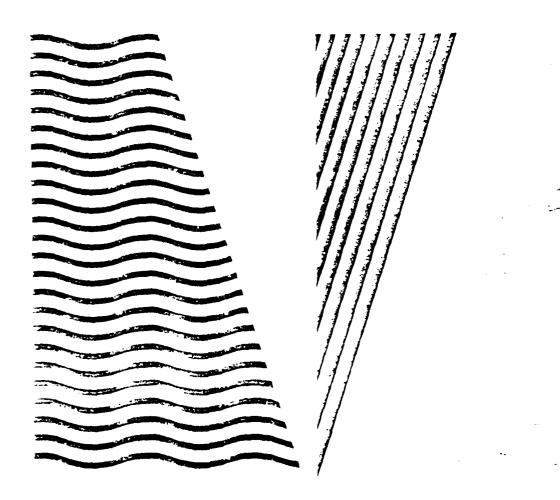


#### The Versatile System

Due to the nature of ultrasonics and the unique design of our discriminator and chamber the Micro Pure system and chamber the Micro Pure system and chamber the monitoring of most quids. The system operates independently of the fluid sithermal or electrical conductivity, viscosity or optical properties. Included are: Water bill atex acids dives links paints hexane and a variety of food stuffs. These applications would apply to the chemical food photographic waste water hydraulic and pharmaceutical industries as well as the manufacturing of integrated circuits and printing links.

#### The Operating Principle

The micro-contaminant monitor. Model 1100, uses ultrasonic wave reflection to detect microscopic particles and pubbles in a flowing liquid. This is accomplished by the use of two separate components, an in-process flow-through ultrasonic chamber and a pulser-receiver module or monitor.

A piezo-electric transducer element mounted in a chamber external to the fluid flow, receives electrical pulses from the MCM-1100 and converts them into acoustic waves. These waves are focused and passed into the flowing stream. Particles or pubbles in the liquid will reflect sound back to the transducer where the sound is reconverted to an electrical signal. This signal is then coupled to the receiver module.

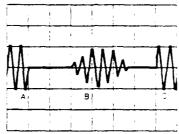

Oscillogram Al-Source wave from transic liver Bi-Reflection from contaminant Cl-Reflection from champer wail

The MCM-1100 amprifies and converts the return signal into a series of digital impulses which are processed to determine the size and number of contaminants measured. A separate logic function discriminates between microparticles and micropubbles above 50 microps.

#### The Chamber

One of the most in the Number 2 is of the Micro Plyre 3, the history of the Micro Plyre 3, the history of the Micro Plyre 3, the history of the number of each term. The history of the number of the head and the property of the mead and the monitoring of the history of analysis is a micro plant of the history of the hist




Staak onsmeer

The raot that the translaturer element does not directly contact the monitored fluid and that the chambe matter at can demark the chambe so in elementate at can demark the contact escolled elementate heroid process in spection sustem sold the contact can demark even Tas or chamber the and upward user to process the demark that the contact can demark even to the contact can demark the candidate of the contact can be contact to the contact can demark even to the contact can demark even the contact can be contact to the contact can be contact.

#### The Pulser-Receiver Modules

. Zoro bri mimie tri i z Pur**e** uzski . مَنْ يُسْرِينَ مَا مُعَادِينَ فِي جَامِينَ مِنْ رَفِي رَامِينَ فِي مِنْ مُعَادِينَ فِي رَامِ عَظِيمَ الْمِعَا en in Justice de Berting in Europe in Seminary (1995), and the care in the care in the seminary of the seminar car number or sambles an 1,336 aved separate viusing LED readouts. An tok-edred information is also inade avail at elarmeresricane atine l'orrument as each of seal out of the control of the control of the control of the constant monitors of the control of the pperargricar set an upper i <del>n</del>ititori either particles or oubbies in the imit slekueeded altront bairer, ght is acti-Lated and altive Locksignal is sent to the rear panel that it aviadable plas a promassion from a ghairo shunti redy-tiet i rerministe a production processi

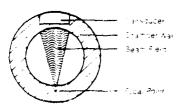

tumna inigracija







#### The People Behind the Technology

Leigh R. Abts. Mr. Abts had served as Bio-Medical Engineer for the Department of Cardiovascular Surgery at Rhoge Island Hospital since 1973, Amember of rne Appustical Society of America and Sigma X he has numerous publications in the tierd of utrasonic detection of micropanic es and micropubbles. He has served as a consultant to microbubbies the has served as a consultance upon many major manuracturers or blood of sygenator devices this investigation in the field or extractiporeal monitoring for microamobiled to his developing the particle seed in the jutrasonio measurement of particles in flowing liquids

Presently: Mr. Abts serves as President of

Micro Pure Systems and is actively involved in the lumber development of our technology

Robert T. Beyer, Ph.D.


Professor Beyer has been a member of the Physics Department of Brown University since 1945 and served as its Chairman between 1968-74. He holds two U.S. patents, is the author of several books and over one hundred and les or serval count and over the more dark of an open or paid, in the field of vitrasonics, Heina's supervised 20 Ph.D. Theses in this field in 1968-69 he served as President of the Acoustical Society of America and is currently Chairman of the international Commission on Acoustics He has been an agrisor to the Micro Pure Research Program since 1974 and is a member of the Board of Directors

Karl E. Karlson, M.D., Ph.D.

Or Karlson has been a member of the staff at Rhode Island Hospital since 1971 and now Indiae Island Hospital since 1977 and how serves as Surgeon-in-Charge. Division of Cardiovescular and Thoracic Surgery. He has had eaching appointments at three universities sites. Surventivine is Professor of Medical Sciences at Brown University and Adjunct. Professor of Biomedical Engineering at the

n diesast via dinimatical regiment gracing as in a diniversity of Rhode Island meinas had an interest in extraoproporeasistic quartion for many years, particularly with the function or plood divigenators and the production of microembols by these devices in single-est in this field provided the impetus for the development of the ultrasonic methods of derection employed by Micro Pure.

n August 1979 he was the U.S. representative in cardiovascular surgery for a National Council for U.S.-China trade delegation to the Peoples Republic of Chinal Presently Or Karlson serves as Chairman of the Board of Micro Pure Systems, no

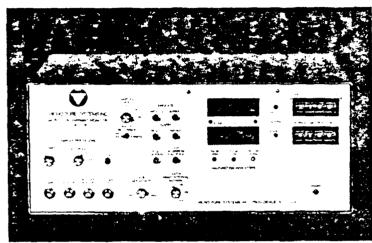

ne vicivi.

#### Manufacturer's Specifications for Model 1100 Micro-Contaminant Monitor

PIJUSER Spike type butbyt with intrimum in 300 regardve up its pro-50 phins imbedance. Width ratinal amortivoe documents solve tray vary from 100 Grosco this to 50. namesendrias terending Lingop ination RECEDVER Broadband with a low cignar in Live rapid and rast recovers from it en Lab Bandbass rominarly 3 to 12 MHs.

Controls

SAMPLES PER SECOND Temer 1.1

con was actions to the end of America, as the end of the control o

A DAY SERVICIONI STANDA CORRESPONDE CONTROL CO

TEST RECORDERS FULL SCALE. T DIGITAL PRINT INTERVAL Print Intervals offine 3 60 600 seconds may be selected. ALARM RESET This push outline is an AUAHM MEDIC TO TOS BURGITUR DE COMO TOS TRADAMENTOS DE COMO SERVICIONO DE COMO TOS PEROPERSONAS DE COMO TOS AUAHM DISABUEZ COMO SU DE COMO TOS ABUEZ COMO SU DE COMO TOS ABUEZ COMO TOS AB

ALARM DISABLE IT 18, Delites (acide in make a systems) with which fact various in the systems (acide in section in the system) and the system in the system is a system of the system in the system in

Use 10049
SIZE SENSITINATION TO a pomor percure
messor of experiorme discrimination loa-Ler demonstrate discrimination Positivo A IS and Chare kelo potrololation Tillaows a rear panel 10 rum Jernier to deused

DIRTUE DIVING 4000 OF 1889 SI BANGAR The HAM SELECTION And Decided to the second of t

#### Indicators and Cutputs

BUBBLE AND PARTY of Court, BUBBLE AND PART TO SHAPE AND P

as wed as an output invitorment a info

as decided as a composition of the control of the c

RECEIVER MONTOP TO A THE wave Toggern Lington Historie E. 1. . Langue Toggern Lington Historie E. 1. . Langue

.gna. ANAUQG Dulfor, TS Triane ........ de intage www.sinniproties in ne. fet Living

STAL PRINTER TO SERVICE

WITH THE TOTAL SERVICE

WHEN TO SERVICE

WHEN TO SERVICE

WHEN TO SERVICE

WHEN TO SERVICE

WHEN THE TRANSPORT

WHEN THE

Live on the map steamers of which is a case of sections of the contract of the



A Breakthrough in Technology.

Micro Pure Systems. Inc. introduces a new era in the monitoring of micro-contaminants in fluids. The employment of new techniques in focused uitrasound has led to the development of a patented system for the in process detection of particles and bubbles below 1 micron in diameter. Discr mination between microsolids and microbubbles is achievable down to 50 microns.

This innovative technology is the culmination of years of research by an outstanding team of engineers, physicists and physicians at Brown University and Rhode Island Hospital. The MCM-1100, featured here, evolved through an effort to monitor gaseous and particulate contaminants in the heart-ung bypass circuit utilized in open heart surgery.

The combination of the research and development endeavors of the scientists at Micro Pure with our high quality of manufacturing, has resulted in products of high integrity. As a result of its adaptability and capacity, the range of applications is substantial. The MCM-1100 is the most reliable, accurate and versatile micro-contaminant monitor available today.

Micro Pure is interacting with numerous Fortune 500 companies and is actively engaged in responding to their quality control needs. Micro Pure's scope of activity and dedication to your quality control functions will assure the success of your efforts to maximize product reliability.

1 - 1A 3/4

TO SOC FRITAL CAPABILITY IN PARTICLE COUNTING

#### THE CAPABILITY

and Can Robust 1.

This is the composition of susteiner and constructed at infor every over the country of the construction of

#### THE - ACILITY

The content of the second of the standard recondend in the heart of the San Hallos of Protocologists are condend to the complex covers 27,500 of are rest and condend to the manufacturing administrative scientific and some interest and condended to the standard recondended to the standard through the standard recondended to the standard

In the second of the second of



#### THE TECHNOLOGY

Fig. 1, as an open-use of open-plan suspension scatter and or absorblight in a control of the transport of the suspension of the suspensio

The light outside this misus or particle is zero content atom measurement techniques of several months of a police transfer of applications on the content of the content of a police transfer of several programs.

es unique de la comparta del comparta de la comparta del comparta de la comparta del la comparta de la comparta del la comparta de la compart


 In the property of the part of the factor phase of stand of the part of the part of the factor of the part of the

Fig. 3 in the Hall of the Whele of Imposition of the particles in a sign of the particles in the Hove of Strame fation of Exing the right-specific of the mineroed for a summer size resolution of the mineroed for a summer size resolution of the mineroed for a second particles of sustaining the mineroed in compassion size and obtain properties, a way on the writter of the rear forward scatter potical system will accept the strain of the control of the co

analyte particle in the and concentration, in liquid suspension, a Royco my ryment based in a light absorption total scatter system will be most effective.



To facilitate and implement the technology of particle counting. Abyco has developed and offers the automatic systems, extrumentation and schoology gages in ladd ton to the broad lange of chandard natrunents shown in our lateral gages and the second to the proad lange of chandard natrunents shown in our lateral gages and the second to the proad language of the proposition of the proposition

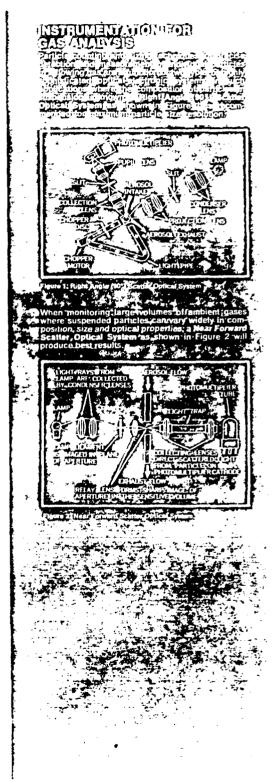

# SPICIFICATIONS SUMMARY OF SPECIFICATIONS MODIFE 203

Particle Size Sensitivity Sample Flow Rate Particle Concentration

The second of th Readout

Calibration

Power Requirements

Environment

Applied Service of the Control of the Con Dimensions: 10 0 1 2 0 0 4

Sensor and Sirk of the Compiler.

Readout Micercognistics and in the sign of Mounting

# SUMMARY OF SPECIFICATIONS -- MCDEL 229

Optics 3 byth Angle 901 spatter

Particle Size Sensitivity: 3.5 micrometer in 1 kmeter and larger size facilities to 3 micrometer sensitivity available on special lifet.

Sample Flow Rate:

Particle Concentration Readout.

Weight

Serial work and review of Special (2) is subject to the control of the control of

See Table 1 to / 1 tag

Both other traction is with indication of seed to Proper Property (1997)

153 watts into visit a firm of the first Section of small of the Section Calibration:

Power Requirements Environment

Dimensions:

Weight May be rack printed that more and

# SUMMARY OF SPECIFICATIONS MODEL 18

Wall Holder والمعادية والمراجعة Sensitivity ing its man (vil) park in a line Concentration: Air Flow Pate:


Particle Size Ranges Digital Display


Sample Time Duration Cambration

Fig. 100 (100 kg 0, astroller is a control to off rober letter on the control of cooper letter on the control of cooper letter of control of cooper letter of c Power Options .


With case ~ 25 (bs. including pattern viation 18 inches (45 (2 only 3 + 1) not est (3 of 0 only 4 only 4) and early with case. The under allocational dear Weight in Acres (maying )


Standard Accessories: A complete family of con-erchanding appressiones is available for Polyco Bomi-Angle (gr.) Charter on a five of owners Custom organisms. Please see Page 7 and 8 for a full history of available units.

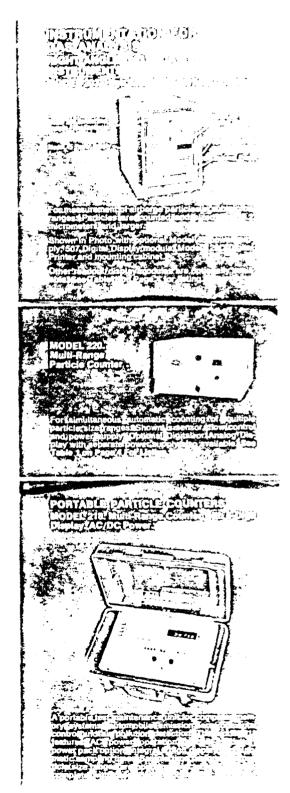

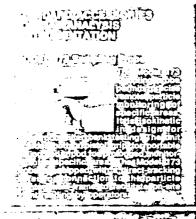



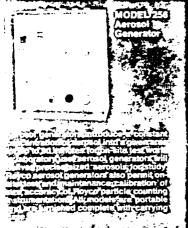

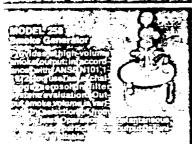

The standard acceptances model in this pale are not use with either Proyog instrumentation for gas unallysis or liquid analysis as indicated. She Page 8 for a numb afer unit of general ເຮືອຂື້ຂື້ສູ່ຂໍຮູ້ໃນກໍລິການກໍລະພິດການ alt general ເຊິ່ນກ່ອນຮອ້ອຍເຂົ້າປະການເອກ common to both gas and liquid instrumentation.

Gree Page 3 for a rand always in 1, 1 general Curbuse accommon to both gas and figurid instrumentation.

Figure 1 (CATUONS) Introduced Accommon to both gas and figurid instrumentation.

Figure 2 for Analysis incident and Accommon to the figurid instrumentation.

10.31 Joseph Analysis incident and Accommon to the figurial and figurid instrumentation.

20 for Analysis incident and figurid instrumentation and figure in Power Commonwhere the figurid instrumentation and figures and

SPECIFICATIONS - Standard Accessories for Liquid Analysis. Instrumental on MODEL 763 Liquid Batch Sample Feeder

Samo e Gize (175) 196 Samo e now Bate (4) 1964 (1964) MODEL 366 Volumetric Batch Sample Feeder

MODEL 366 Volumetric naturi Sample Fee

Some e Volume

Sample File File Sola 135 - Sola


MODEL 373 In-Line Sampling Section

Mudet, 373 Internet symptomy section.
Special right Pressure. A mounterent of a section of the pressure of the section of the

MODEL 148 Contamination Control Center
Orientions: Overall Size 170 comps of a control Center
Work Surface Size 3, the region of 34 control Center
A Fordamon 15 control Center 18 control Center
A Fordamon 15 control Center 18 control Center
Type 15 Control Center 18 control Center
Type 15 Control MODEL 146 Contamination Control Center

Power Requirements Privar Requirements

To some interest of the particle Analyses for the المعاجمة فالوحات جادوا

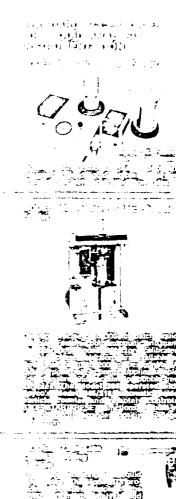



# ATT. TRAL PURPOSE ACCESSORIES COMPATIBLE ITH ALL ROYCO INSTRUMENTATION

The accessory equipment described on this page is compatible with Royco's full family of particle counting and sizing instrumentation for both gas and liquid

#### MODEL 107 Alarm Module

Analog Alarm Module for audible signal and meter reading indication that a pre-set particle count level has been exceeded. Reset and audible cutoriots are provided. Operates on 115/230 VAC at 50/60 Hz. 6½ inches (16.5 cm) H x 8 inches (20.3 cm) W x11 inches (27.9 cm) D. Weighs

## MODEL 145 Instrument Cart

The Model 145 instrument cart is designed to provide a movable multi-level mounting for Royco particle counting systems. The unit is fur-nished with 5 AC convenience outlets and full width storage drawer.

#### MODEL 129 and 129C Digital Printers

Royco's Model 129 digital printers are medium speed, parallel entry units that scan and print out data stored in multi-channel memories. Operation uses reliable inked ribbon and standard paper. Optional clock (Model 129C) time dates printed data.

## SPECIFICATIONS - Model 129 and 129C Digital Printers

Printing Speed: 2.5 lines per second; 9 characters per line.

Print Format: 8421 BCD format.

115/230 VAC at 50/60 Hz. Power:

51/2 inches (14.0 cm) Hx71/4 inches (19.1 cm) Wx141/2 inches Dimensions:

(36.8 cm) D.

20 pounds (9.1 kg)

## **GENERAL INFORMATION** Terms of Sale and Shipment

Royco particle counting instruments and systems are priced F.O.B. Menlo Park, California, Alf prices are subject to change without notice. Terms are Net 30 days

# Leasing Agreements

Leases with option to purchase are available to meet the specific requirements of each user. You are invited to contact our Menio Park Headquarters for full details.

# Warranty

Weight:

All Royco products are warranted All Royco products are warranted against defects in materials and work-manship. This warranty applies for 1 year from date of delivery, or in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period provided they are returned to Royco. No other warranty is expressed or implied. Royco is not liable for conseplied. Royco is not liable for consequential damages.

# Maintenance and Service

Royco recognizes its responsibility to provide each user with the technical support required to assure the full economic life of each Royco product. Royo service centers provide repair and replacement service to users of Royco equipment both during and after the new equipment warranty period. Each service center maintains a fully trained staff and an inventory of tested replacement service. ment parts.

Repair labor and parts are charged at the current catalog rates then in effect for all out-of-warranty service performed at a Royco service center. Field service for on-site repairs will be charged at the current catalog rates in effect for all out-of-warranty repair labor and parts. All travel, meals and lodging will be charged at cost for both in-warranty and out-of-warranty service.

# Preventive Maintenance and Calibration Service and Contracts

Routine preventive maintenance and calibration will greatly extend the useful out-of-warranty instrument life. This service is available on a "demand" basis or under service contracts. For detailed information, contact your local Royco Sales office.

FIELD ENGINEERING OFFICES AND SERVICE CENTERS ROYCO U.S.A.

Boston Telephone 617/891-5320

Chicago Telephone: 312/428-7794

Los Angeles Telephone: 213/257-5340

San Francisco Telephone: 415/325-7811 Telex: 34-8323

# ROYCO INTERNATIONAL

Gelman Hawksley, Ltd. 12 Peter Road Lancing, Sussex, BN 15 3TN, England Talephone, 2815-6 Telex, 37134

Royco Instruments, Inc. Dennis Hasiop, European Marketing Mgr. 9 Cambridge Rd. Brighton, Sussex 8N3-IDF, England Telephone, 774238 Telex: 87323 HASLOP

Royco Instruments, Inc.
Uwe Jessen, European Sales Manager
Hertigstrasse 51
7250 Leonberg-2, W. Germany
Telephone, 07152/47375

Beckman Instruments, Lapso Division P.O. Box 3100 Tullerton, California 92634 U.S.A.

ondoh Industries Eld. 16 13 Higashi-Minemachi Ohta-Ku, Tokyo, Japan Telephone: 404/8781-5 Telex: 0242-3320

141 Jefferson Drive Mento Park, California U.S.A. 94025 Tefephone: 415/325-7811 - Tefex: 34-8323



# **PROTOTRON PARTICLE** COUNTER

# MODEL ILI 1000

- Makes in-situ, quantitative particle counts of bottled
- . Uses scanning laser beam with all solid state electronics
- Provides automatic digital readout after a scan of 10 cc in approximately 15 seconds
- . Detects the number of particles above a manually set threshold between 1 and 100  $\mu m$
- . Can be used to count particles in liquids flowing through transparent pipes

# **APPLICATIONS**

- . Quality control of hydraulic fluids & oils
- Particle count of air filters
- Monitoring continuous flow operations through glass pipe
- Inspection of pharmaceutical solutions
- Water quality testing for semiconductor industry
- Quality control for bottled beverages
- .... and many other applications.




# DESCRIPTION


The standard Prototron Particle Counter includes both Reads any bottle with a 20 to 200 mm inside diameter particulates, and a seanning laser beam for detection of particulates, and a seanning laser beam for detection of small particulate matter.

... The 31 pound, compact unit (12" X 24" X 18") houses the laser tube, scanner and photo detection electronics. A front panel knob allows setting of a particle size threshold limit between 1 and 100  $\mu m$ . Particle counting and illumination are controlled by front panel pushbuttons. A simplified schematic of the instrument is shown in Figure 1. The laser beam focuses inside the bottle in a 2 cm long "sensitive zone" as shown in Figure 2.

The secondary lens picks up scattered light (in the annulus around the target) from all particles in the path of the scanning laser beam. However, the photo detection electronics only registers those particles in the "sensitive zone", which are larger than the size specified by the threshold setting. Usually, dust particles on the bottle wall do not affect the count, as long as the wall is not in the sensitive zone. However, optical discontinuities should be avoided.

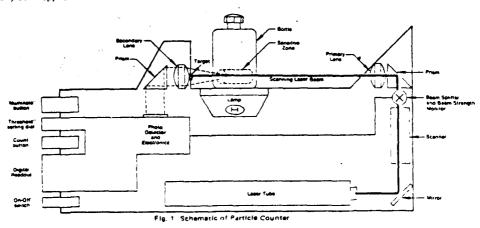

72 (A-42)

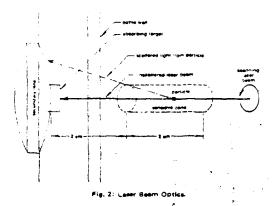

Once the count button is pushed, the revolving laser beam scans a total volume of 10 cc in 15 seconds, and the digital readout displays the average number of patticles with sizes above the threshold limit in one cc of liquid.

By taking sequential measurements, qualitative size distribution data can be developed, or the threshold selector can be locked to provide statistical quality control data at one setting.

# MAINTENANCE

The Prototron Particle Counter is fully covered by a one year warranty and the laser life is rated at 10,000 hrs. The warranty includes replacement of the illumination lamp and the faser tube. Other than such normal replacement, the uncit is virtually maintenance free.

# **OPERATION**

The operation of the Prototron Particle Counter consists of three steps. (1) Gently agitate the sample of bottled liquid to produce a uniform suspension, (2) Place pottle in the "V" notch and rotate to a point where the laser beamenters and leaves unobstructed, (3) Press the "Count" button, Within 15 seconds, the total particle count per cell displayed on the digital readout.

In addition, by pressing the "filluminate" button, a light table may be used to visually detect particles larger than 40 microns. The light table goes off when the "Count" button is pressed.

# SAFETY

The laser used in the Proton and document of a one milliwatt, and even erale only and a color of primary liens. Virtually, all liaser be allowed by the larget. The Electric virtually as a sorbed by the target. The Electric virtually as a factor given that recommended that the due of factor given rearrand OSHA accept lasers will energies of factority watts or less, for relatively univestrated page. Therefore the degree toton Particle Countries is well within the special or safety regulations.

# **SPECIFICATIONS**

SI CON TOATIONS	
	1811 (45-72 mm thigh - 211 (31 mm) omy, wide: 2411 (50 35 mm) heep.
Weight	31 pounds (14,66 kg
	115 volts 60 Hz manine not tied to 230 volts 50 Hz on pe
Marie Marie Carrier (Control of Control of C	oral-order)
Display	-3 digits
Outputs	Connections provided fine sub- nal alarm, printer, ashilloscope of pulse height analyzer
Bottle Size	20 to 200 mm inside diameter
Bottle Material	Transparent, scratch free gas $\sim \epsilon$ plastic
Read-Out Volume	1 cualc centimeter
Detectable Particle Size	. Cantinualisty admissionly from 10 to 100 um.
War arty	ीलह , इस उठ प्रवा

# ORDERING INFORMATION

The Prototron Particle Counter may be ordered alread from Spectrex Corporation. It may also be eased with an option to buy plant. To arrange a lease Law dollect (415) 365-6567. Quantity also outside a veriable. For more information, write or call Spectrex Corporation.





3594 HAVEN AVENUE, REDWOOD CITY, CALIFORNIA 94063


# SPECTREX

CORPORATION

1594 HAVEN AVENUE, REDWOOD CITY, CALIFORNIA 94063, (415) 365-6567

# PRICE QUOTATION

# LASER PARTICLE COUNTER and ACCESSORIES

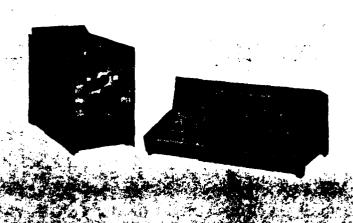

ITEM NO.	QUAN- TITY	DESCRIPTION	CAT.	PRICE
1	1	ILI 1000 Particle Counter (110V) including: (1) carrying case; (2) 3 bottles; calibrated check suspensions (3) neutral density filter.	67000	\$8200.00
2	1	Particle Profile Attachment Model 3. (Microprocessor with "mass distribution" and "settling scan" modes.).	67008	\$5500.00
3	1	Opacity Meter.	67012	\$ 350.00
		· , · · ·		

F.O.B. REDWOOD CITY, CALIFORNIA

THIS QUOTATION IS VALID FOR 60 DAYS

8/1/79 jmh/amk

PROTOTRON PARTICAL COUNTER

BEDWOOD CITY CALIF

APPLICATION NOTES

# **CLASSIFICATION OF HYDRAULIC FLUIDS**

Several standard classification systems have been established for hydraulic fluids based upon their particulate content. A typical one recommended by SAE is NAS 1638 which specifies in concentration limits for particles ranging in diameter from 5 micrometers to over 169 micrometers to over 169 micrometers. The Prototron ILI-1000 provides a quick method of establishing the class number of an unknown fluid.

First a 200 ml sample of the unknown is placed in a 250 ml beaker and stirred to establish a many particulate distribution. The sample is allowed to remain quiet for approximately 20 seconds so there is bubbles can example is allowed upon the FLI-1900 and five readings are taken, resetting the instrument threshold level between each reading. These readings would for example give the number of particles per milliliter greater than 100 micrometers, the number greater than 5. By substracting the second reading from the first, the number of particles in the range between 50 and 100 can be determined. In a similar fashion each of the other specified size ranges can be determined. These values are then compared with the maximum limits keeping in mind that many limits are given on the basis of 100 milliliters.

For very clean fluids an averaged series of readings at each level can be used to increase the statistical significance of the determinations. This is possible because the test is non-descriptive. This represents a significant advantage over other available automatic particle counting systems.

If the fluid is very dirty it may contain more than 1000 particles greater than 1 micrometer for milliliter. This should be checked and if it is the case the sample should be diluted with a well filtered clean solvent and the measured particle concentration corrected for this dilution ratio. Keeping the count less than 1000 will prevent excessive co-incidence counting from destroving the accuracy of the determination.

An example of a test of MIL-H-5606 hydraulic fluid — shich has been added 0.5 mg/liter of AC FINE test dust) follows:

Size Threshold	Reading	Differential part/ml	Class 8 Max Limits part/ml
5	227	> 227-35 = 192	640
15	35	> 35-11.5 = 23.5	114
25	11.5*	<b>&gt;</b> 11.5-2.4 = 9.1	20
50	2.4*	<b>2.4-0.</b> 5 = 1.9	3.6
100	0.5*	- 0.5-0.0 = 0.5	5 0.6

<sup>\*</sup> These readings are average of 10 counts to increase the statistical significance.

Because the differential values are all less than the Class 8 Max Limits we can conclude that this test fluid corresponds to Class 8 of NAS 1638.

I

# SPECTREX

3594 HAVEN AVENUE, REDWOOD CITY, CALIFORNIA 94063, (415) 365-6667

# COMPARISON OF THE SPECTREX "PROTOTRON" TO OTHER PARTICLE COUNTERS

The flies and the Royce Firmels of the country was control fight scattering overcomed the dynamic range limitation of the Coulter method, and liquids other than electrolytes can be examined. The flow cell still limits the flow rate but not as severely as does the Coulter orifice. The largest disadvantage of these optical particle counters is that the flow cells require windows and these windows become dirty with use. Dirt on the windows effects the accuracy of the calibration and usually forces the user to frequently clean the cell and re-calibrate the instrument. The rapidly moving liquid in the cell generates pressure waves which usually limit the smallest detectable particle to 2 microns.


The Prototron also uses optical light scattering but its method is unique in that the liquid is moving very slowly and therefore contains no pressure waves. The laser beam is moving rapidly to produce the necessary scanning. This accounts for the greater sensitivity of the ILI-1000 and permits measurement of particles as small as one micron. The time required for a single determination of these small particles is substantially faster than with any other counting method. The other unique feature of this instrument is the optical system which keeps the sample container walls out-of-focus and, therefore, counts only the particles suspended in the liquid. This feature permits the measurement of particulates in sealed containers.

When flow cells are used, a flow measuring system is also required, and the count accuracy is limited by accuracy of this flow measuring system. The ILI-1000 electronically times the scan period and, therefore, avoids inaccuracies in flow measurement associated with all other automatic particle counters.

9/24/74 amk



# OPACORN ACCUSES CARREST OF A

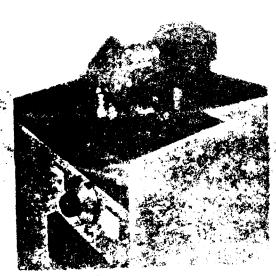


1.3.

pear in a since the part of the pear in a since the part of the pear in a since the part of the pear in a since the pear in a

laser beach and the collection of the advanced of the second of the seco

When the 1 1966 is experient to that he had not experient to the head of the head of the second to t



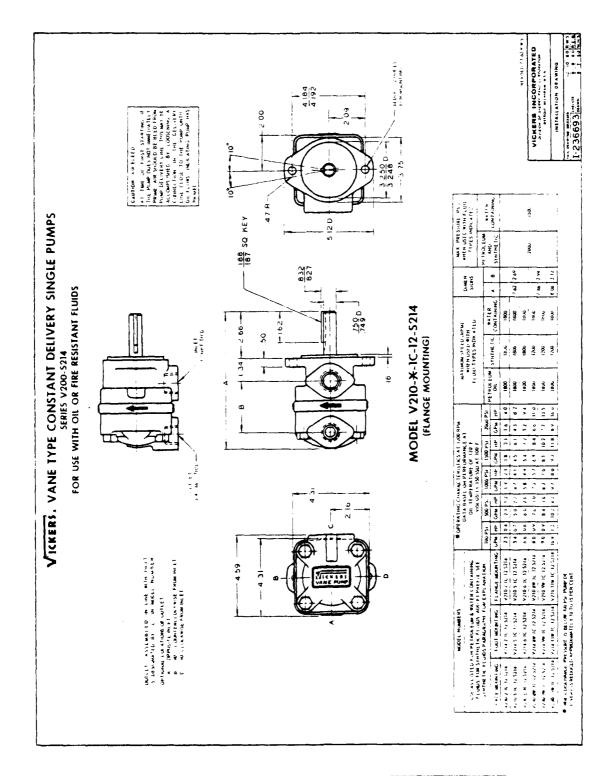

ن ن د 

1687 16 17



# SOLID-STATE POWER CONVERSION EQUIPMENT

STANDARD

CUSTOM

**INDUSTRIAL** 

**MILITARY** 

# **DC-TO-AC INVERTERS**

# **UPS/STANDBY POWER**

## MODEL 1057 300-WATT INVERTER

Economically priced and ideally suited for waveshape sensitive electronic equipment such as oscilloscopes, chart recorders and video tape recorders, the frequency stable 300 VA Model 1057 Inverter is an inexpensive atternative to sine wave power. The switching-mode wave-shaping technique yields a three-level step wave-shape which has approximately the same peak to mis-voltage ratio as a tive sine wave. The Model 1057 inverters are protected against overloads, short circuits and reversed poiently of dc input line. Versions for input voltages of 12 Vdc, 24 Vdc, 32 Vdc and 36 Vdc are standard. Outputs of 115 Vac/60 Hz or 230 Vac/50 Hz are also standard. All imodels are approximately 80% efficient from one-half to full load and have a frequency stability of  $\pm$  0.25%. The Model 1057 is packaged for portable or stationary use, with a convenient carrying handle. All versions are 8%" high a 11" wide x 8%" deep and weigh 25 pounds. Units are shipped from stock. Single piace price for all versions is \$374.00 each. Resale, 0EM, and quantity discounts are available. Request builetin 9091C.



MODEL 1057



MODEL 1172

#### **MODEL 1172 HEAVY DUTY INVERTER**

The Model 1172 is an inexpensive, rugged, 500-watt square-wave inverter designed to power heavy duty loads. This inverter will provide a 2-to-1 surge, approximately 1000-watts, for high-initish loads such as small power tools, refrigerator compressors and incandescent lights. The Model 1172 is a modular inverter and two units may be easily paralleled in the field for added continuous and surge power Versions for unity voltages of 12 Vide 24 Vide and 22 Vide are standard. Output voltages of 115 Vac or 230 Vac and 50 Hz or 61 Hz are also standard. All versions are more than 80% efficient for most of their output load ange. The frequency stability is ± 2 Hz and the output voltage is proportional to the input voltage. All Model 1172 inverters are 7" high x 8%" wide x 11" deep and weigh 32 pounds. The single piece price of all versions is \$335.00 each. Resale. 06M, and quantity discounts are available. Umts are normally shipped from stock. Request bulletin 1011A.

Wilmore Electronics manufactures other inveriers in the 15-watt to 500-watt sower range. Other squarewave-output inverters are available, and for those loads that are extremen wave-shape and frequency sensitive, regulated stepped-wave or sine-wave inverters are also available. Please contact our sales department for information.

# MODEL 1252 AUTOMATIC STANDBY AC POWER SUPPLY

Serious problems may result when commercial ac power is unexpectedly interrupted to sensitive loads, such as point of sale terminals, communication systems or monitoring equipment. Such interruptions are becoming more commonplace and many people are exporting point of use uninterruptible power supplies like the Wilmore Model 1252 to keep their systems operating. When commercial ac power fails, this standby ac power source continues to supply needed power to your load by switching to inverter operation. Upon restoration of ac power the Model 1252 automatically returns to normal line operation, and the internal battery charger reharges the batteries. Your basic versions are available, one providing a three-level-stepped wave approximation to a sine wave output and 250, waits of power, and the other supplying 500 waits of square-wave power. Standard battery ingut voltages are 12 Vdc and 24 Vdc. All units are 5%" high x 17" wide x 14" seep and weigh 45 pounds. They can be installed in a standard 19" rack or they may stand lain. The Model 1252 system consists of inverter, battery charger and switchover;protection circuitry. The battery is not included. The user has the flexibility to size and specify a battery to fit his particular system and desired face up time. Single piece price is \$575.00 each. Resale, OEM, and quantity discounts are available. The Model 1252 is normally shipped from stock. Request bulletin 6021.



MODEL 1252

- . 50 VA to 1 KVA
- High Surge Capability
- Frequency Stable
- . Rugged but Lichtweight
- Highly Efficient (80% Typical) and Low No Load Power Consumption

# **NEW INVERTER AND UPS PRODUCTS**

With models ranging in power rating from 50 VA to 1 KVA, the Series 1400 invariers considerably broaden Wilmore's dc-to-ac product line. To be introduced in mid-1980, these conservatively designed inverters represent rugged, rehable cost-effective solutions to a wide variety of needs for frequency-stable ac power. Their improved output waveshape, surge-handling capability, and ability to handle a wide range of load power factors ensures compatibility with most loads, even those normally considered to be "troublesome" for solid-state inverters.

Concurrently with the introduction of the Series 1400 inverters. Wilmore is introducing the Series 1401 Uninterruptible Power Supplies. As with the Series 1400 inverters, on which this UPS line is based, models

with the Series 1400 inverters on which this UPS line is based, mobile, within the Series 1401 range in power rating from 50 VA to 1 KVA. Normally sold writhout a battery. Series 1401 models feature a self-contained battery charger frequency stable inverter and line-to-inverter.

PO Box 1329. Millsborough. N.C. 27278 U.S.A. Telephone 1919) 732 9351

eem/1980

For Manufacturers Sales Offices rater to MANUFACTURERS AND SALES OFFICES DIRECTORY

3495

# APPENDIX B

VIBRATION SIGNATURE ANALYSIS OF AHT-64 HYDRAULIC TEST STAND

NOTE: The 19 figures presented in this appendix were extracted from a total of 78 charts. These are discussed in the analysis.

# VISPCO

# VIBRATION SPECIALTY CORPORATION

100 Geiger Road - Philadelphia Pa 19113 215) 598-3800

March 30, 1979

Mr. Idwin Roberts cancers a Thomas 1 0 20x 5 Lagran to 6 08730

Controlling to the training

The right of with the partmass order C-26024, our engineer tell to tell indictors and Willow Grove Naval Air Stations to the State of 1370 Our purpose was to perform a local mediance so it two AHT-64 hydraulic test stands of the control of the model of and frequencies.

The transfer of at seven locations on the test to be losed liagram. Signatures were recorded limited at end axial directions under idle led 1300 psig), unloaded lia h signature (see Figure A) shows to be learnton versus requency in hertz. The transfer with full scale equal led 1500 psig (horizontal scale) is led 1500 psig (horizontal scale) and the leg 1500 psig (horizontal scale) and test stand operating

100

The virtual interity de response varied by a factor of two or more offices, the two first stands the to structural integrity differences, a temper energy differences. Vibration frequency response was constant at ooth test stands - that is, 360 hertz was the major with meshouse frequency.

# DISCUSSION

Basically all input energy was measured at positions 6 and 7. Test losition 6 was the hydraulic pump, where loaded (3000 psig) and unloaded (zero gauge) pressure variations were tested. Measured and recorded were the change in vibration energy levels produced by the two conditions.

Stand #143 showed considerable increase in vibration (almost double) with load (see Figures 20 and 41). Stand #117 showed very

Mr. Edwin Roberts Sanders & Thomas

March 30, 1979

Page Two

little increase (about 10 percent), as seen in figures  $6^\circ$  and 77. The major vibration frequency was 360 hertz, or nine times the operating speed (2400 RPM = 40 hz). It was determined that the pump had nine pistons working axially, which explains the high ninth harmonic response in all test positions, predominantly in the axial direction.

Test position seven was the diesel engine on both stands, rotating at 2400 RPM, with or without pressure load on the pump. The engine vibration levels recorded on each stand were very similar, and there were no appreciable changes with pump loading (Figures 22, 43, 62 and 78). The major frequency source from the diesel was the 40 hz signal and the associated harmonics.

Structural vibration response was measured and its frequency spectrum signature recorded at five different locations on the AHT-64 structure. Remember, the major frequency on all signatures on both test stands was 360 hertz.

The highest amplitude response (2.2g) on stand No. 143, was a position 5 (Figure 36) which is the underside of the base structure of the stand. A level almost equal to this (2g) was recorded in the axial direction at positions 1 and 3 (figures 26 and 32). Positions 2 and 4 showed levels around 1.5g (Figures 29 and 35).

In comparison, test stand No. 117 had the highest response (7g) at position 4 axial (Figure 73). The next highest response on stand No. 117 who 3 to 4 g/s (still higher than No. 143) at positions 2 and 3 (Figures 67 and 68). Positions 1 and 5 had levels around 1 to 2 g/s.

The only explanation for this drastic difference in response between these two test stands would be the way the control panel is connected to the rib structure at those points. In other words, stand No. 143 is stiffened by the ribs being rigidly connected together by the control panel and stand No. 117 is less rigid by being loose or possibly not connected at all, thereby allowing this center point to vibrate excessively.

# CONCLUSION

The excitation energy on each test stand was similar, producing a similar frequency response. However, the amplitude response was different by a factor of two or more. Therefore, the instrument package which is to be mounted on the AHT-64 structure must be able twithstand vibration frequencies around 360 hertz. However, the amount of vibration energy it must withstand is still in question.

If we assume that test stand No. 143 had "good" structural integrity and needs no further reinforcements, etc., and we assume that test stand No. 117 could be fixed and/or reinforced enough to respond similar to No. 143, then the amount of vibration energy which

NAEC-92-146

Mr. Edwin Roberts Sanders & Thomas

March 30, 1079

Page Three

must be withstood by the instrumentation would be 2 g's if mounted on the front of the stand below the control panel (positions 1,2 and 31

# RECOMMENDATION

Assumptions were made in the last paragraph which we recommend be eliminated through further testing, inspections, and modifications. The future tests would not have to be as detailed in terms of frequency response, only amplitude response. Amplitude can be measured and recorded more easily than the previous tests using a transducer and an overall vibration meter capable of displaying at least two of the three engineering parameters - acceleration, ve. city, and displacement.

I would estimate four to six test stands could be monitored in one day, obtaining the orthogonal amplitude responses at the same seven locations on the stand operating in the pressure loaded midition. It would be advisable to inspect the test stands closely for loose bolts, cracked welds or structural members. This can be some with the same vibration meter with a strobe light attachment. If differences were found through this inspection, I would suggest arrective measures be performed if possible. In this way we would be assured of similar structural integrity between test stands.


Our charges for the engineering testing and analysis would be 1500 per day of on-site services. There would be no additional rarge for inalysis completed in our engineering center. Travel and per free expenses incurred during the test program are also included in the above price.

We thank you for the opportunity to provide our service. If a nave any questions, please do not hesitate to contact us.

Very truly yours,

WDK/om

WILLIAM D. KEELEY Field Service Manager

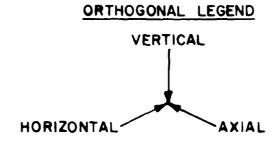




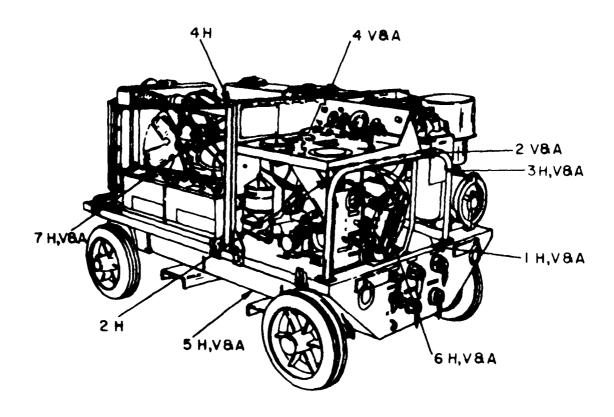


Figure A - Vibration Signature Positions

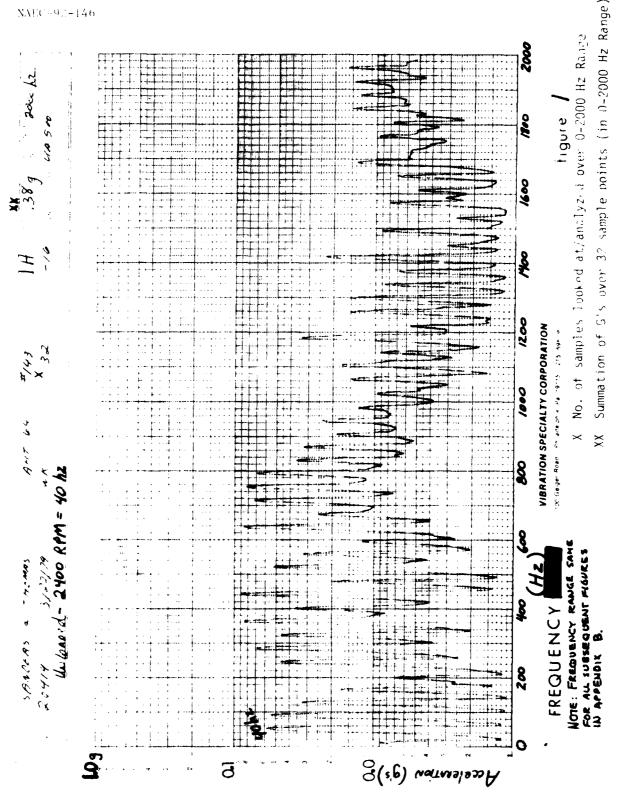

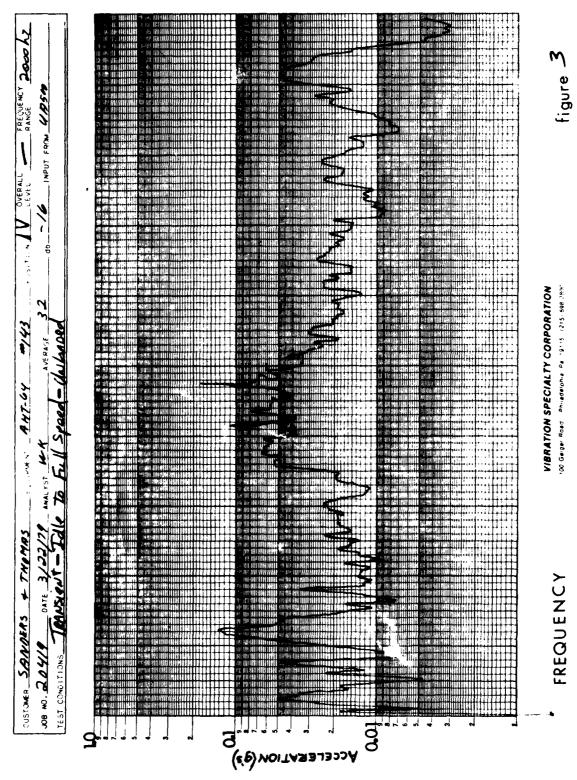


87 (B-7)

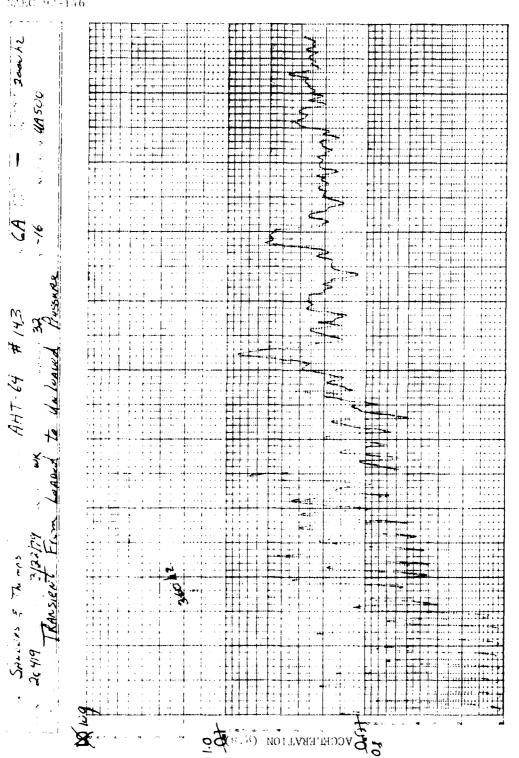

88 (B-8)

, 1	Embalandari Embalandari dirithan in 1880 an
1,5	
2000	
8	
\$50°	
a:	
3 2	
R	
( ) ( ) ( )	
. 2	
1	
\$ 0.00 m	
* * * *	
Ke Car	
20 x 12 0 x 0 x 0 x 0 x 0 x 0 x 0 x 0 x 0 x 0	
	general de Tambination (3)

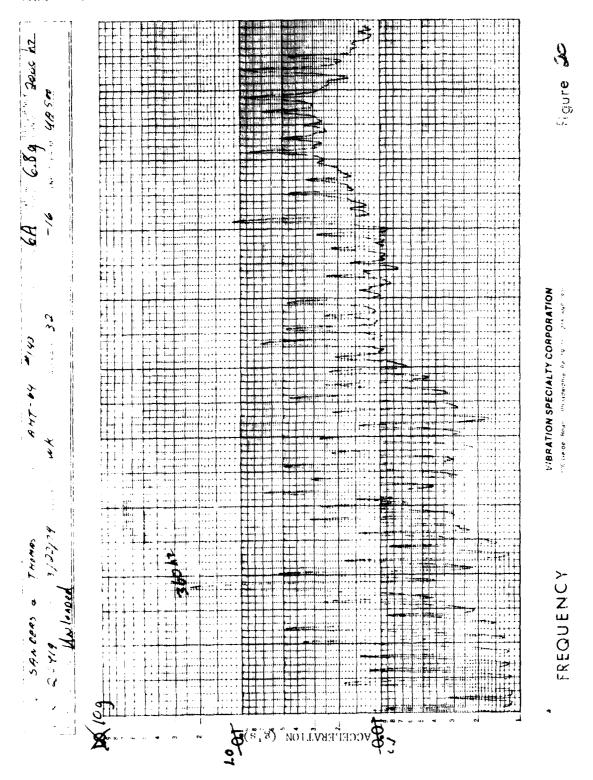

1

# (43

447-64

\*\*

SANDERS & THOMAS

いと思うの思さ


ing more 2000 Ţ ~ } 187725 £ 0

FREQUENCY

VIBRATION SPECIALTY CORPORATION 100 Gegen Road - Provide on a Parrick - 215 Half Control


figure 36


VIBRATION SPECIALTY CORPORATION

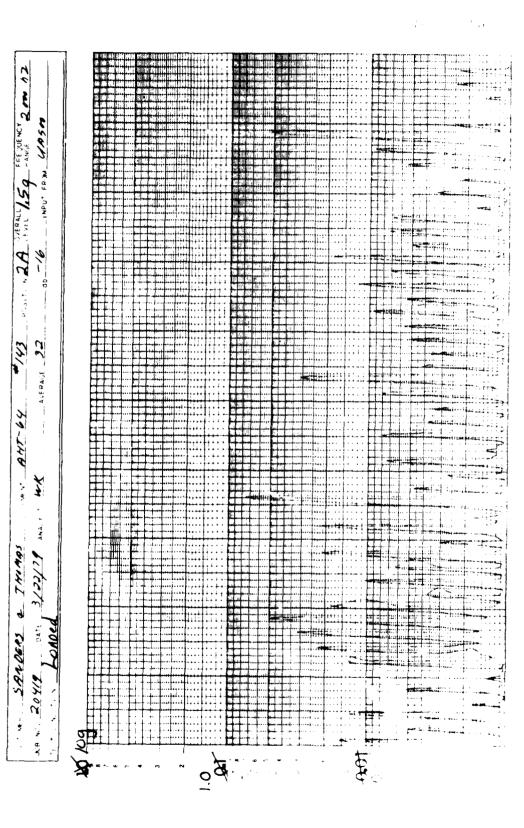

**PORBUCK** 

AD-A100 696	SANDERS A APPLICATI JUN 81 F	AND THOMAS IN ION OF AN IN- P M O'DONNEL!	NC POTTSTOWN -LINE CONTAMI L. E W ROBERT	5	N00140-	- <b>80-C-0</b> 053	4/2 ETC()
2 of 2				NAEC-92-146		ML.	
			END DATE FINATO 7 81 DOTE				

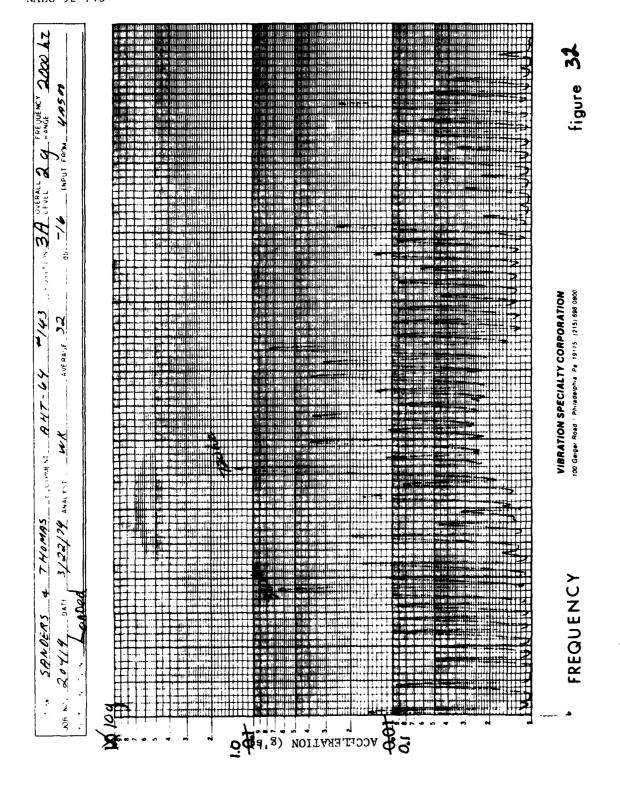

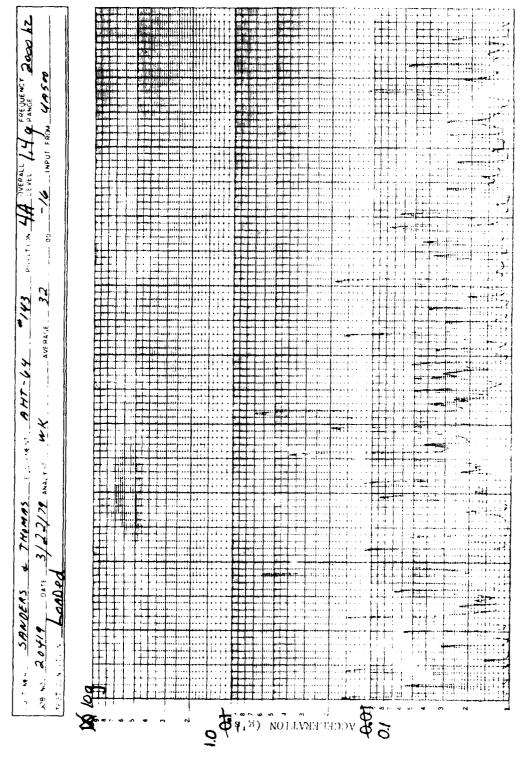

REQUENCY

VIBRATION SPECIALTY CORPORATION

95 (B-15)

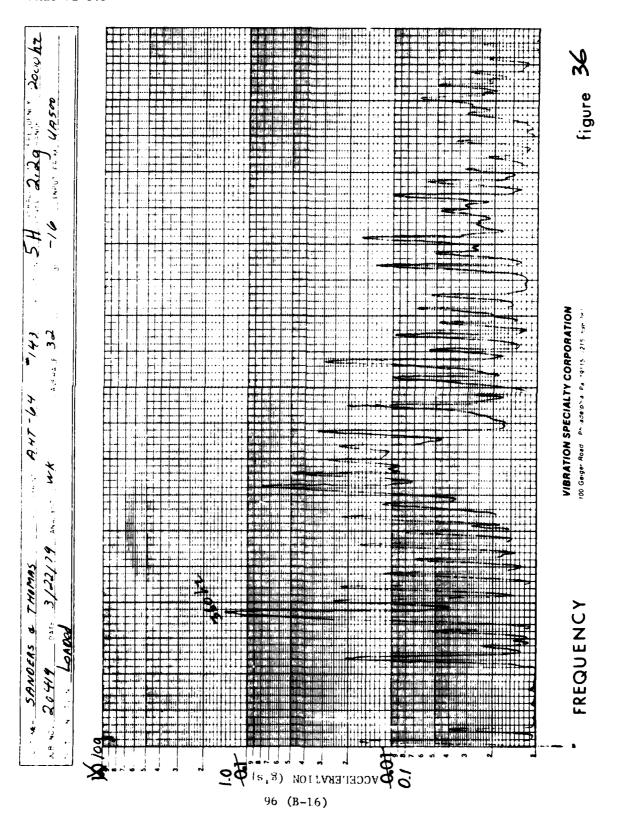



Figure.

TIN 6# WERALL 130 FREUTING 200 hz 140.07 FEIN 419 500 9)- H A. 5 84.16 32 Eh/# AHT-64 ž X 347 3/24/24 ans. SANDERS & THOMAS 20419


ुद्


FREQUENCY

VIBRATION LPE

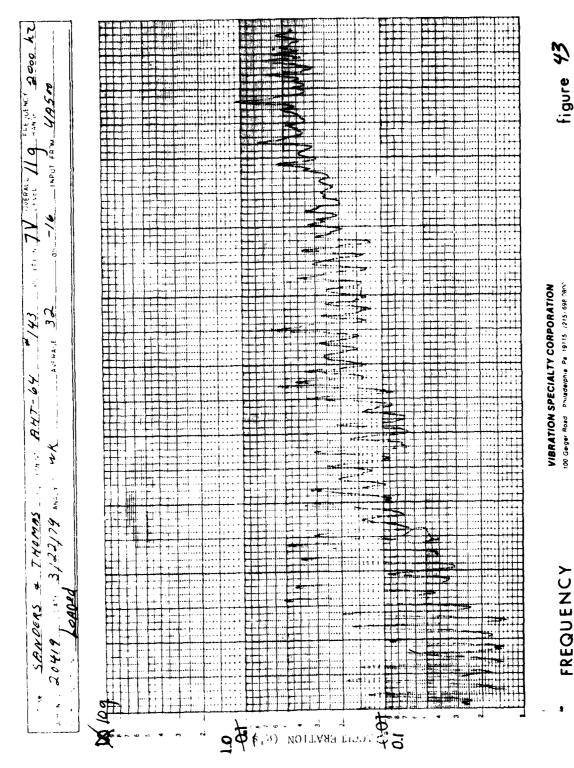


1 2000 A			
560			
sour =	No LARD		
· 8		<u>S</u>	

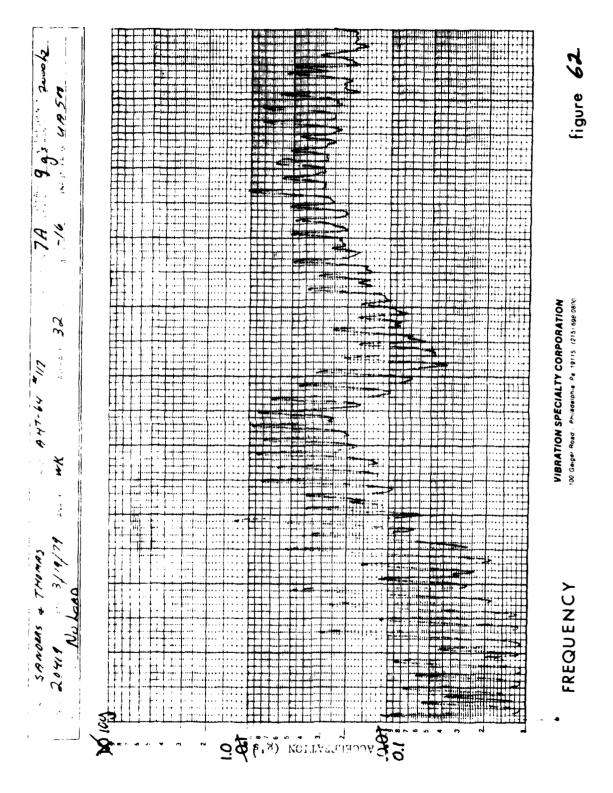

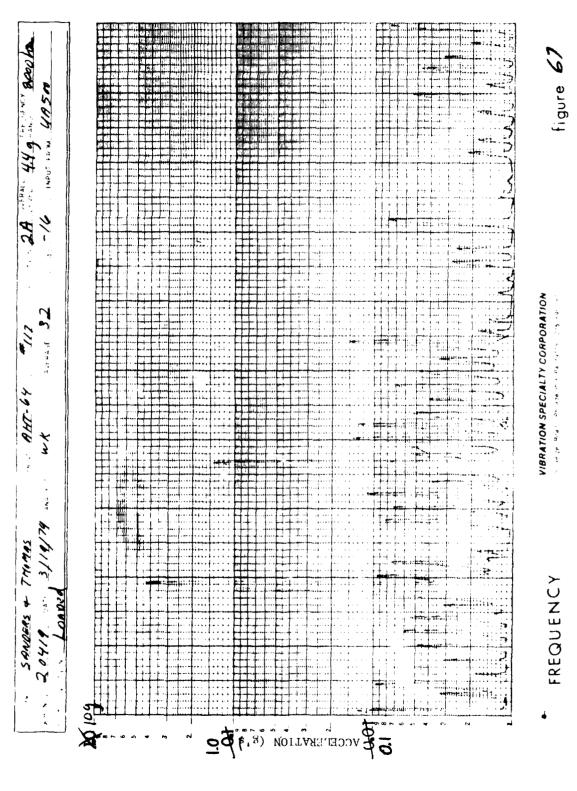


101 (B-21)

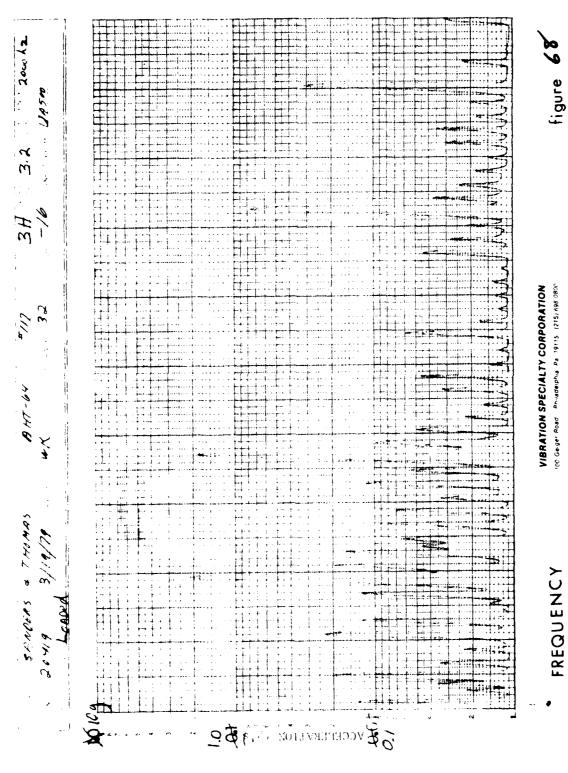


10 - (8~2.7)

Park to Garage

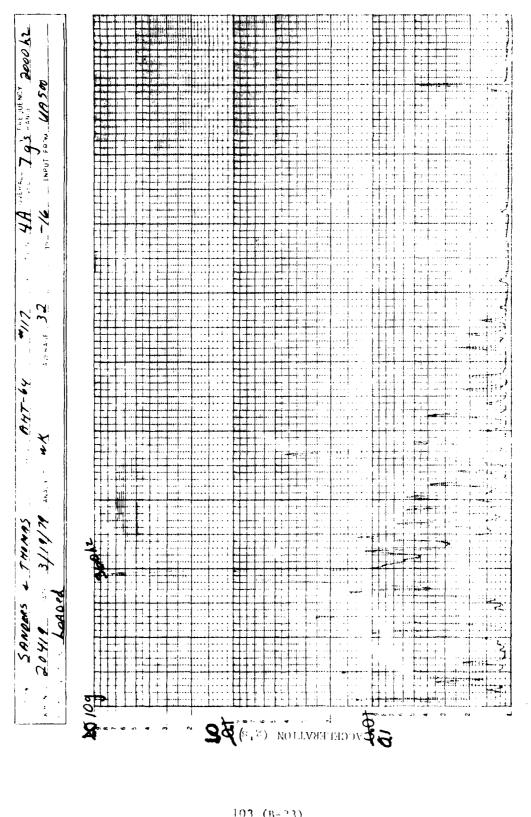

103 (B-23)

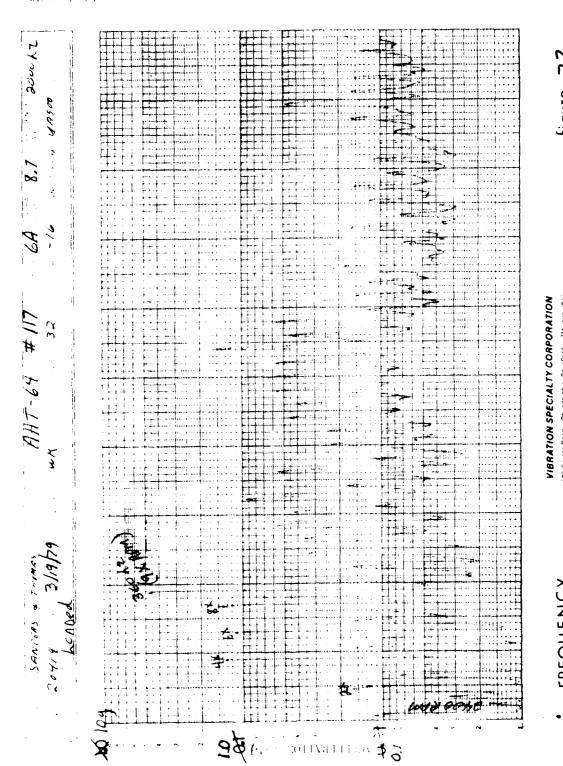

7H 10 45 4850		
74 10		
9/17		
847.64 W.K		
45 4 7 MONTE. 3/19/79 30.		
SANDE	31	ge out the state of the state o

ACG. ON SPECIALTY CORROTATION

としていつのはまして

# APPENDIX C

VIBRATION RESPONSE AND PERFORMANCE OF MONITORS AT VIBRATION SIGNATURE LEVELS OF THE AHT-64 TEST STAND

NAEC- 97-146



# VIBRATION SPECIALTY CORPORATION

100 GEIGER ROAD PHILADELPHIA PA 19115 - (215) 698 (280) - (200) 470 (1988

August 27, 1980

Mr. Edwin Roberts
Sanders & Thomas
P.O. Box 50
Lakehurst, New Jersey 08733

Dear Mr. Roberts:

Enclosed is the report of the test conducted on the two oil monitoring systems as furnished by you. We would at any time appreciate the opportunity to serve you again. If you have any questions, please call.

Very truly yours,

EUGENE J. SCHRAMM Manager of Engineering and Technical Services

EJS/mf

Enclosure

107 (C-2)

•

71 1 Freq. . .

The test was conducted in two phases; the first being the Environment One concept and the second being HIAC Pacific Scientific concept.

# A. TEST SET UP

The initial test setup is as shown in Picture No. 1 It contained an oil reservoir of approximately three gallons and a motor pump combination capable of delivering up to 10.3 gallons per minute at approximately 20 psi and 3.3 gallons at 100 psi. The piping system was set up with a bypass so that all or any portion of the fluid could be returned directly to the reservoir. Through this method we were able to flow from 1 1/2 gallons per minute up to the maximum of 11 gallons per minute by adjusting the control valve in this line. Two pressure gauges were inserted in the line to monitor the pressure and see if there was a substantial pressure drop through the sensing device. vibration was imparted to the test article by an electromagnetic shaker system mounted under a resonant beam that was tuned to 360 Hz. The control accelerometer was used to verify the vibration level and controlled to read 2.2 g's ± 5 percent.

During the initial attempts to calibrate and check out the Environment One concept, problems were encountered with air trapped in the system so that adequate flow and pressure could not be obtained. The reservoir and plumbing were altered slightly by increasing the volume of the reservoir and installing a stand pipe to bleed off any entrapped air. At the same time, the flex hoses were changed from a convoluted type to a smooth interior wall. This enabled us to obtain any flow or pressure combination we desired.

# B. TEST PROCEDURE

The following sequence was established for both systems. Due to problems with the HIAC concept, it was necessary to deviate from this procedure. The procedure used on the Environment One unit was as follows:

- with the unit installed and hooked up for fluid flow,
- 2) the sensor was positioned on the resonant beam and the controller on the nearby table. Oil was pumped through the system and the meters monitored for response. Approximately 10 minutes were spent at this configuration.
- 3) Still in the same position, the shaker was activated to impart vibration only to the sensor. The meter was monitored for any changes. Approximately five minutes were spent in this mode.
- 4) The controller was now positioned on the resonant beam and fastened to the beam.
- 5) The shaker was again activated and the meter monitored for any change. At all times, the force input was controlled to 2.2 g's. Approximately 10 minutes were spent in this mode.

The procedure for the HIAC was to be the same, but throughout any attempt which included vibrating the sensor, we were unable to obtain any indication that the unit was working. The light on the front of the panel labeled check sensor showed no malfunction as of the alarm. As a last resort, a large quantity of AFD was added to the fluid and pumped through the system for some time. Again, no reading of any kind could be seen. As a precaution, the cable was checked to make sure that it was intact.

# C. RESULTS

The results can best be illustrated by Pictures 3 and 4. Throughout any attempt to cause a deviation, the fluid flow test, the vibration test, the loosening and jingling of the sensor, rotating the sensor through 90° and 180°, the readings remained rock steady. The flow meter performed as designed. We reduced the flow to 1.6 gallons and it read 8 percent of full scale. We increased the flow to full flow and it read 52 percent of full scale, or 10.4 gallons. We repeated each condition several times, with it repeating the reading constantly.


Although no attempt was made to rotate the controller, you could pick it up by the handle and move it in any direction; up/down, back forth, with no effect.

The HIAC tests were discontinued at the direction of Mr. Roberts, since no data could be obtained.

# D. CONCLUSIONS

The Environment One unit performed as its specifications delineated and was not effected in any way by the 360 HZ at 2.2q.

The HIAC unit was judged to be unsatisfactory since it would not function at all.

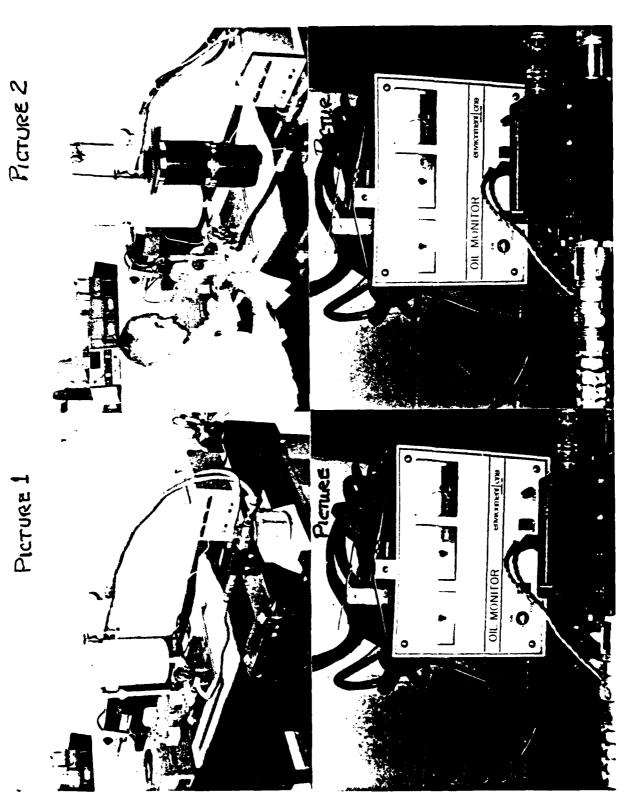

111 (C-6)

# DISTRIBUTION LIST

NAVAIRENGCEN	NAVAIRSYSCOM
1114 (2)	AIR-00D4 (2)
1115	AIR-340E (3)
9011	
9012	DTIC (12)
92A1B .	
92724 (44)	

# REVISION LIST

REVISION LIST		
PAGES AFFECTED	DATE OF REVISION	

4MD-NAEC 5213/3B (10-77)

# END

# DATE FILMED 7 - 8

DTIC