

DEFENCE



DÉFENSE

Testing of the Siemens EPD MK2 Final Report of Tasking W28476KR00X (DSSPM)

D.S. Haslip, T. Cousins, D. Estan, J.R. Brisson,
B.E. Hoffarth and T.A. Jones
Defence Research Establishment Ottawa

DEFENCE RESEARCH ESTABLISHMENT OTTAWA

TECHNICAL MEMORANDUM

DREO TM 2000-034

April 2000

DISTRIBUTION STATEMENT A

Approved for Public Release
Distribution Unlimited



National
Defence

Défense
nationale

Canada

DTIC QUALITY INSPECTED 4

20000809 027



Testing of the Siemens EPD MK2 Final Report of Tasking W28476KR00X (DSSPM)

D.S. Haslip, T. Cousins, D. Estan, J.R. Brisson,
B.E. Hoffarth and T.A. Jones
*Radiation Effects Group
Space Systems and Technology Section*

DEFENCE RESEARCH ESTABLISHMENT OTTAWA

TECHNICAL MEMORANDUM
DREO TM 2000-034
April 2000

Project
DSP00002199

ABSTRACT

Defence Services Procurement Project 00002199 tasked DREO to test the new Siemens EPD Mk2 (an electronic personal dosimeter) at DREO's various irradiation facilities. The dependence of the response on dose rate, energy, and temperature were all studied. This dosimeter was found to be comparable to the DMC 2000S electronic dosimeter produced by Merlin-Guerin Products (MGP), although each has some particular advantages over the other. This dosimeter is an appropriate product for use as an electronic dosimeter by the Canadian Forces in a wide variety of radiation fields.

RÉSUMÉ

Le Projet de Procurement de Services pour la Défense 00002199, a fait la demande à CRDO d'évaluer les dosimètres personnels électroniques Siemens EPD Mk2. La réaction des EPD en ce qui concerne la dépendance sur le débit de dose, l'énergie de rayonnement et la température a été évaluée. La performance de ces dosimètres est comparable aux dosimètres électroniques DMC 2000S, fabriqué par Merlin-Guerin Products (MGP). Cependant, chacun possède quelques avantages particuliers par rapport à l'autre. Le dosimètre Siemens EPD Mk2 est un produit bien adapté pour l'usage comme dosimètre électronique par les forces canadiennes dans une grande variété de champs de rayonnement.

EXECUTIVE SUMMARY

Background: DREO continues to provide scientific and technical services to Defence Services Procurement Project 00002199. The project recently received three of Siemens new EPD Mk2 electronic personal dosimeters for test and evaluation purposes, and tasked DREO to perform this evaluation. This report describes the results of this work.

Results: The dose-rate and energy dependencies of the response of this dosimeter were tested extensively at DREO's irradiation facilities. This investigation has shown that the response is sensitive to both dose and energy; this is not desirable, but is within the tolerance of this project's requirements. The dosimeter is sensitive to gamma radiation below 20 keV, a property not always found in electronic dosimetry.

The dosimeter's response falls steadily with increasing temperature, at a rate of about 0.12% per degree Celsius. This also is undesirable but is tolerable for the project. Apart from the change in response, the device's performance at low temperature is impressive, demonstrating full functionality down to -40°C .

Significance and Future Plans: The Siemens product is an electronic dosimeter that is appropriate for use by the Canadian Forces in the electronic dosimetry role, but not as a reconnaissance meter. It is largely equivalent to the MGP DMC 2000S tested previously at DREO, although each meter has advantages over the other.

Haslip D. S., Cousins T., Estan D., Brisson J.-R., Hoffarth B. E., and Jones T. A., Testing of the Siemens EPD Mk2: Final Report of Tasking W28476KR00X (U), Defence Research Establishment Ottawa, DREO TM 2000-034. April 2000.

SOMMAIRE

Étude Préliminaire: CRDO continue à fournir des services techniques et scientifiques au Projet de Procurement de Services pour la Défense 00002199. Le projet a dernièrement reçu trois dosimètres personnels électroniques Siemens EPD Mk2 afin d'effectuer une évaluation. Ce travail a été délégué à CRDO. Ce rapport décrit en détail les résultats de ce travail.

Résultats: La réaction de ces dosimètres en ce qui concerne la dépendance sur l'énergie de rayonnement et le débit de dose a été étudiée en profondeur en utilisant l'équipement de rayonnement disponible à CRDO. Les deux résultats en question démontrent un comportement non-linéaire. Ceci n'est pas souhaitable mais peut par contre être facilitées. Le dosimètre est sensible au rayonnement gamma en-dessous de 20 keV, un atout qu'on retrouve rarement en dosimétrie électronique.

Les données de débits de dose du dosimètre diminuent de façon constante en augmentant la température ambiante. Ceci représente un facteur d'environ 0,12% par degré Celsius. Ce comportement est également indésirable mais peut tout-de-même être facilité. Malgré ce changement dans les données de débits de dose, la performance du dosimètre à températures basses est impressionnante, démontrant un fonctionnement presque impeccable jusqu' à -40°C.

Importance et Futurs Projets: Le produit de Siemens est un dosimètre électronique qui est bien adapté à l'usage des forces canadiennes dans le rôle de dosimétrie électronique, mais pas cependant comme indicateur dans un rôle de reconnaissance. Il est en grande partie équivalent au MGP DMC 2000S évalué précédemment à CRDO, bien que chaque dosimètre possède quelques avantages particuliers par rapport à l'autre.

Haslip D. S., Cousins T., Estan D., Brisson J.-R., Hoffarth B. E., et Jones T. A.,
Évaluation des dosimètres Siemens EPD Mk2: Rapport Final du Travail
W28476KR00X(U), Le Centre de recherches pour la défense Ottawa, DREO TM 2000-034, Avril 2000. (en anglais)

TABLE OF CONTENTS

ABSTRACT.....	iii
RÉSUMÉ	iii
EXECUTIVE SUMMARY	v
SOMMAIRE.....	vi
TABLE OF CONTENTS.....	vii
LIST OF FIGURES	ix
LIST OF TABLES.....	x
1 INTRODUCTION.....	1
2 THE DOSIMETER	2
3 TEST RESULTS – RADIATION DETECTION	3
3.1 EPD Mk2 Dose-Rate Response.....	3
3.2 Energy Dependence.....	4
3.3 Dose Rate Fluctuations.....	5
3.4 Neutron Sensitivity	7
4 TEST RESULTS – LOW TEMPERATURE PERFORMANCE	8
5 CONCLUSIONS AND RECOMMENDATIONS.....	10
5.1 Response Dependence on Dose Rate and Energy	10
5.2 Dosimeter-Reader Communication	10
5.3 Low- and High-Temperature Performance.....	11
6 REFERENCES.....	12

LIST OF FIGURES

Figure 1: The Siemens EPD Mk2.	2
Figure 2: Ratio of measured dose rate to actual dose rate, as a function of actual dose rate for ^{60}Co gamma fields.	3
Figure 3: Ratio of measured dose rate for the EPD Mk2 to actual dose rate as a function of actual dose rate for ^{137}Cs gamma fields.	4
Figure 4: Relative response of the dosimeters as a function of gamma-ray energy.	6
Figure 5: Fluctuations in the reported dose rate from the EPDs for ^{137}Cs exposures. The error bars indicate the range of dose rates observed over a period of two to three minutes.	7
Figure 6: Measured dose rate for the EPD Mk2 in a ^{60}Co field as a function of ambient temperature.	8

LIST OF TABLES

Table 1: Gamma-ray energies and associated sources studied as well as the references used for spectroscopy and dosimetry for the purpose of characterising the energy dependence of the EPDs. Details on X-ray machine set up can be seen in [11]..... 5

1 INTRODUCTION

The “Low-Level Radiation” threat is becoming increasingly more important to militaries around the world. This threat comprises a number of scenarios, such as radiological dispersal devices and sabotaged nuclear reactors. Recent events in the Former Soviet Union [1], Kosovo [2], and Thailand [3] demonstrate that armed forces must be prepared to confront the radiation hazard.

Defence Services Procurement Project 00002199 [4] is set to procure a variety of radiation detection, identification, and dosimetry devices to meet modern demands. Electronic dosimeters (EDs) are one of the equipment suites to be purchased. In the project’s Concept of Use, electronic dosimeters will be issued to groups of two to sixty personnel, acting as both an in-theatre record of radiation exposure and as a “tripwire”, alarming when certain dose rates are exceeded. Aside from thermoluminescent dosimeters, this will be the most broadly distributed piece of equipment acquired by the project. As such, it must be rugged, easy to use, and reliable.

Siemens recently loaned several EPD Mk2 personal dosimeters [5] to the project for evaluation purposes. The project in turn has tasked DREO with evaluating this dosimeter in a manner similar to that used to evaluate several other dosimeters in 1999 [6]. This document is a final report on this work.

2 THE DOSIMETER

The Siemens EPD Mk2 (Figure 1) is the latest in Siemens' line of personal dosimetry. Considerably slimmer and lighter than its earlier models (such as the EPD-2E procured by DND under the Radiation Safety Project), its performance specifications are largely unchanged from previous versions. It is sensitive to doses down to 1 μSv and dose rates down to 1 $\mu\text{Sv/h}$, although fluctuations at these rates will be significant. It has both dose and dose-rate alarms, and measures both deep and shallow doses. It has a dose profile history capability that will store up to 579 dose records of up to 127 μSv . It is powered by a single AA battery, and can accommodate either a 1.5-Volt alkaline cell or a 3.6-Volt lithium cell. Siemens has also attempted to address the hypersensitivity of this dosimeter to electromagnetic fields (such as radars and cellular phones) [7].

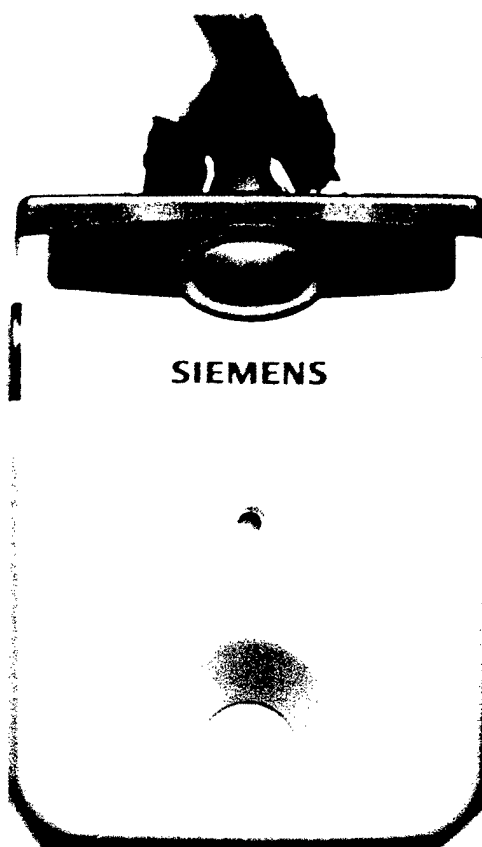


Figure 1: The Siemens EPD Mk2.

3 TEST RESULTS – RADIATION DETECTION

3.1 EPD Mk2 Dose-Rate Response

The objective of the first series of tests was to determine the linearity of the dose rate response for the EPDs. The first test was performed with ^{60}Co as a radiation source with dose rates ranging from $0.963\ \mu\text{Sv/h}$ to $10.2\ \text{Sv/h}$. Three different ^{60}Co sources were used: two calibrated sources (500 Ci and 10 Ci), and a pellet source ($\sim 1\ \text{mCi}$). For all measurements with the pellet source, a Microspec-2 gamma spectroscopy system [8] was used as a reference.

Figure 2 depicts the relative response of the EPDs in the ^{60}Co fields, as a function of dose rate. Included for each data point is an error bar, which represents the maximum deviation in the dose rate response between the three dosimeters being tested. The dose measurement in this and subsequent exposures is the deep dose ($\text{Hp}(10)$); the shallow dose is of lesser interest to the project and was not tested in this work. The dose rate was determined based on the activity of the calibrated source or on the reference measurements, as appropriate.

The response changes substantially over the device's operating range. There is a significant decrease in response around $10\ \text{Sv/h}$, but it should be noted that this is beyond the manufacturer's specification of $2\ \text{Sv/h}$. More important is the dip in response between $0.01\ \text{mSv/h}$ and $10\ \text{mSv/h}$. In this regime, the relative response falls by as much as 20% from its response at higher and lower doses. This was also observed in a number

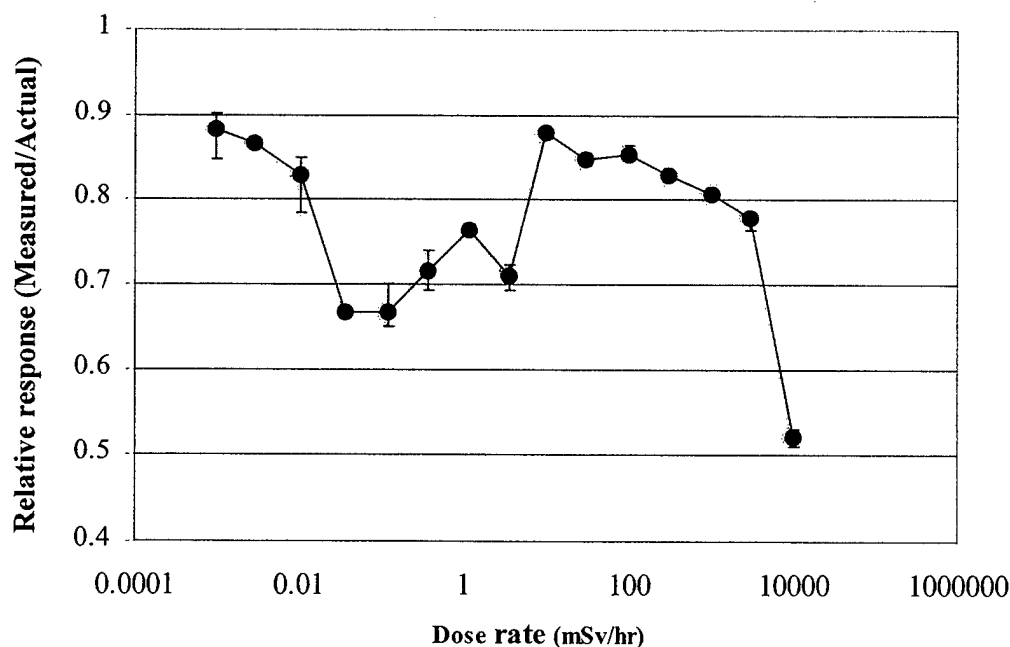


Figure 2: Ratio of measured dose rate to actual dose rate, as a function of actual dose rate for ^{60}Co gamma fields.

of Siemens dosimeters during the TTCP dosimeter intercomparison [9]. While this is not a monumental problem, it is important to note that such variations in response exist.

The response between EPDs was very consistent, even at low dose rates. The worst case deviation in the dose rate response between EPDs was 8%. On more than one occasion, all three EPDs gave exactly the same answer. Such reproducibility in response is obviously a very desirable feature in a dosimeter for the field.

The response of the dosimeters to gamma radiation from Cesium-137 was then investigated. For this investigation, DREO's UDM-1A Cesium-137 source (originally 120 Ci) was used. The response of the EPDs is shown in Figure 3. It is much flatter in this case. The worst case deviation is 20% occurring at over 3 Sv/h, once again beyond the manufacturer's specifications. This kind of response is more than satisfactory for this project, and even meets the stringent requirements of NATO Triptych D/104 [10]. The degree of consistency between EPDs, represented by the error bar associated with each data point, is high, with a worst case deviation no larger than 2%.

3.2 Energy Dependence

It is already evident from the previous section that the response of this detector varies with gamma-ray energy (relative response is as much as 20% smaller for Cobalt-60). Since the Canadian Forces might encounter sources with a broad range of gamma-ray energies, it is important to establish the response as a function of energy.

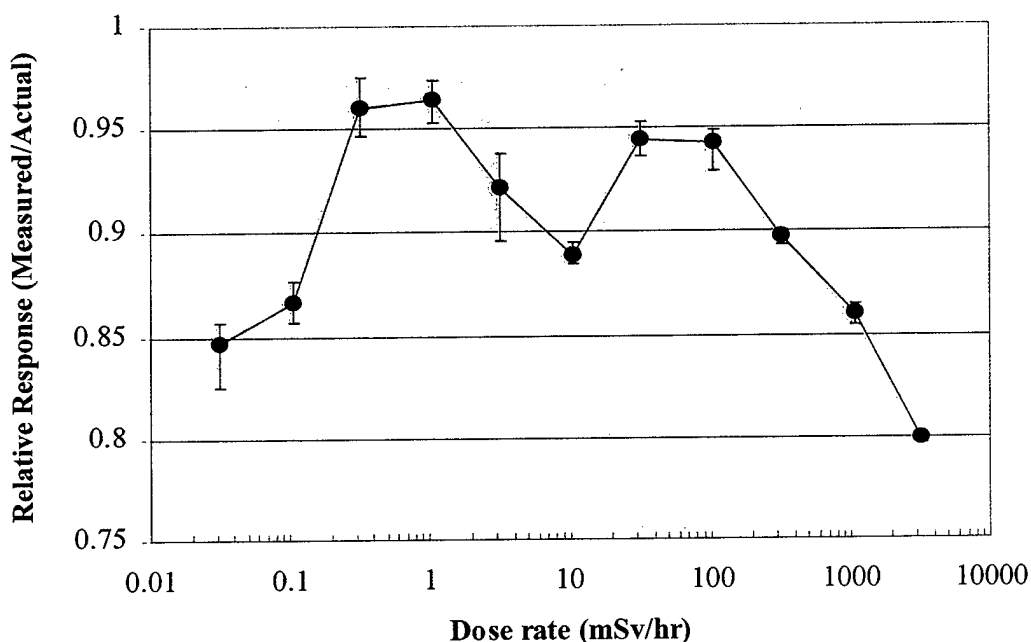


Figure 3: Ratio of measured dose rate for the EPD Mk2 to actual dose rate as a function of actual dose rate for ¹³⁷Cs gamma fields.

Table 1: Gamma-ray energies and associated sources studied as well as the references used for spectroscopy and dosimetry for the purpose of characterising the energy dependence of the EPDs. Details on X-ray machine set up can be seen in [11].

Energy (keV)	Source	Reference Spectroscopy	Reference Dosimetry
20	X-ray machine [0.2" Cu; $V_{app} = 30$ keV]	Microspec	Microspec
30	X-ray machine [0.2" Cu; $V_{app} = 54$ keV]	Microspec	Microspec
40	X-ray machine [0.063" Cu; $V_{app} = 47$ keV]	Microspec	Microspec
60	X-ray machine [0.126" Cu; $V_{app} = 71$ keV]	Microspec	Microspec
75	X-ray machine [0.2" Cu; $V_{app} = 88$ keV]	Microspec	Microspec
101	X-ray machine [0.5" Cu; $V_{app} = 120$ keV]	CdTe	CdTe
275	Mercury-203	Microspec	Microspec
662	Cesium-137		Calibrated Source
1253	Cobalt-60		Calibrated Source
1339	Van de Graaff [$d(d,n)^3\text{He}$, 1.0 MeV]	BGO	BGO
3124	Plutonium-Beryllium	BGO	BGO
4628	Van de Graaff [$^{19}\text{F}(p,\alpha)^{16}\text{O}$, 1.5 MeV]	BGO	BGO
5088	Van de Graaff [$^{19}\text{F}(p,\alpha)^{16}\text{O}$, 2.2 MeV]	BGO	BGO

The energy response of the EPDs was determined by exposure to a variety of gamma-ray sources. Table 1 lists all of the radiation sources used and their associated energies. To the greatest extent possible, tests were done at common dose rates to eliminate changes due to this variable. A few of the sources used are not mono-energetic and/or emit more than one significant gamma ray. In such cases, a mean energy is shown. The mean energy is a weighted average and is intended to serve as an approximation.

Figure 4 displays the response of the EPDs (averaged over the three dosimeters) as a function of energy. This response follows the same general trends of increase and decrease as claimed by the manufacturer [5], but the degree of change observed in this work is considerably greater. The dosimeter over-responds at very low energies (20-30keV), but significantly under-responds at around 60keV. The response then levels off and is relatively flat out to around 1200 keV, at which point it rises sharply. On the whole, the response above 100 keV is more or less the same as that of the MGP DMC 2000S dosimeter, and significantly better below (more constant and extending to lower energies) [6].

3.3 Dose Rate Fluctuations

Project 00002199 plans to deploy a large number of personal dosimeters and a relatively small number of reconnaissance and survey meters. Thus, there is a significant advantage to procuring a dosimeter that can carry out some of the roles of a reconnaissance meter (determining gamma-ray dose rates, locating sources). The chief

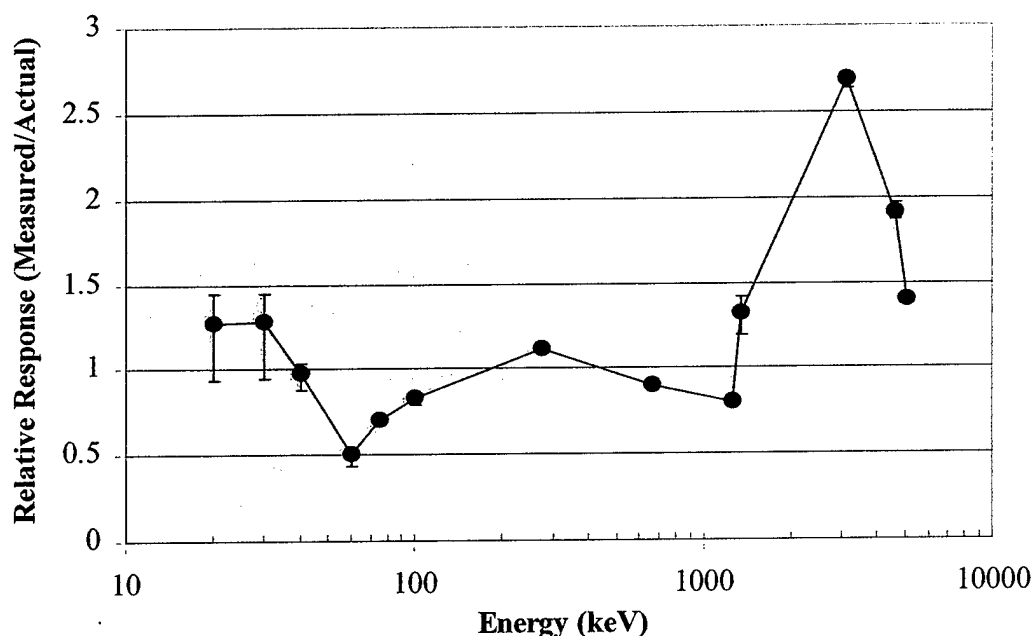


Figure 4: Relative response of the dosimeters as a function of gamma-ray energy.

factor mitigating against such a use is the sensitivity of the dosimeter. Dosimeters normally employ small radiation sensors; while these are sufficient for the purposes of dosimetry, they are often sufficiently insensitive to result in substantial fluctuations in measured dose rate at low rates.

Figure 5 shows the EPD's relative response to Cesium-137 as a function of dose rate (the same data as in Figure 3). The new element in this figure is the error bars, which represent the magnitude of the fluctuations of the dose rate display on the EPDs (worst case between three EPDs), as observed over a period of two to three minutes. There is no obvious trend in the size of these error bars; they are remarkably constant (± 10 -20%) over a large range of dose rates. This is in marked contrast to the dose rate fluctuations of the MGP DMC 2000S [6], which showed steadily larger error bars with decreasing dose rate, reaching $\pm 30\%$ at 0.1 mSv/h. This implies that the algorithm for displaying and updating the display of this dosimeter is substantially different from that used in the MGP dosimeter. That is, it seems likely that the Siemens dosimeter averages the displayed dose rate over a fixed number of counts. This will result in a relatively constant relative uncertainty in dose rate, but also a slow response time at low rates. The MGP dosimeter, on the other hand, likely recalculates the dose rate on a more regular basis, resulting in steadily growing uncertainties with decreasing dose rate. While there are pros and cons to both systems, since the inherent sensitivities (counts per millisievert) are the same for the two dosimeters, the fact remains that neither is suitable for a reconnaissance role.

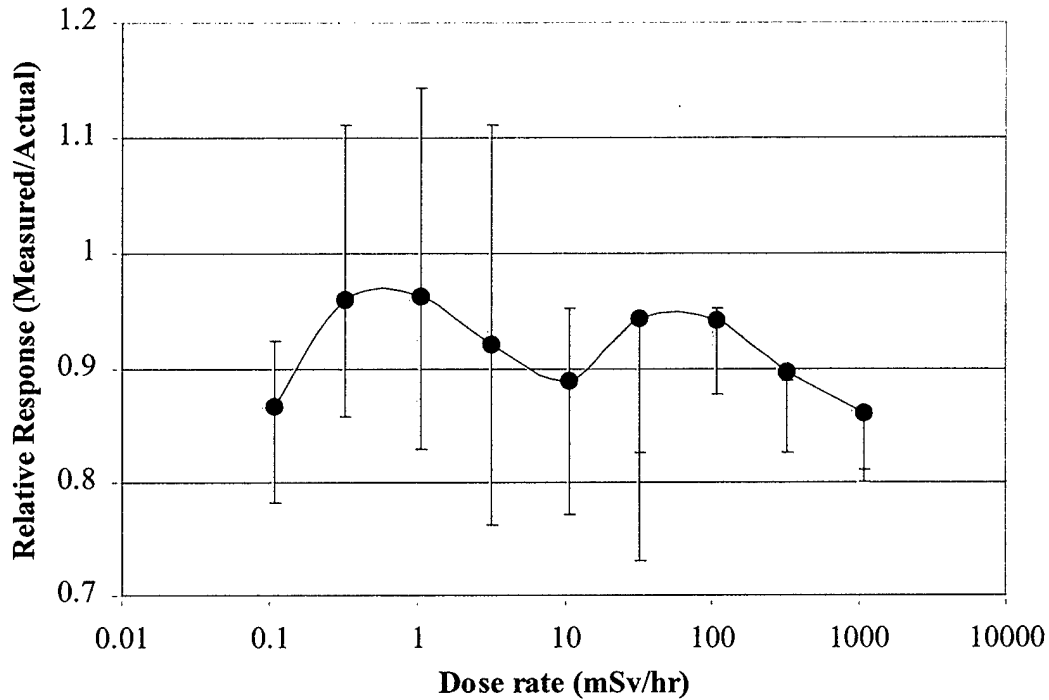


Figure 5: Fluctuations in the reported dose rate from the EPDs for ^{137}Cs exposures. The error bars indicate the range of dose rates observed over a period of two to three minutes.

3.4 Neutron Sensitivity

The sensitivity of the Siemens EPDs to neutrons was evaluated at the same time as the energy response testing was performed at the Van de Graaff accelerator. The experiment in which 1.0 MeV deuterons are directed onto a deuterium target produces 3.91 MeV neutrons where the dosimeters were placed. The dosimeters were exposed to over 1500 μSv of neutron dose (just over 200 μGy), at the same time as approximately 13.4 μSv of gamma dose from neutron activation. The dosimeters registered between 16 and 19 μSv , which we assume to be entirely due to gamma exposure with a slight over-response. It is possible that the 4 μSv of over-response is due to neutron dose, but even if this is the case, the dosimeters still under-respond to neutrons by a factor of almost 400.

Also, in the Van de Graaff run with 2.2 MeV protons impinging on a LiF target, 0.42 MeV neutrons are produced at the dosimeter positions. The dosimeters were exposed to almost 1200 μSv of neutrons, in addition to the 100 μSv of gamma dose. In this case, the dosimeters recorded just over 140 μSv , a significant over-response. However, given that the dosimeters over-responded to an even greater extent during the run with 1.5 MeV protons (in which there is no neutron production, but similar gamma production), it is likely that this response is due entirely to gamma exposure, and that the 1 mSv neutron dose was not detected.

4 TEST RESULTS – LOW TEMPERATURE PERFORMANCE

Canadian Forces personnel may operate in a wide variety of environments, with temperatures ranging from -50°C to $+50^{\circ}\text{C}$. It is obviously important for their equipment to operate under these conditions as well. However, most commercial equipment is not designed to operate under such a wide range of conditions. Siemens claims that their dosimeter will operate in ambient temperatures from -10°C to $+40^{\circ}\text{C}$, and other manufacturers make similar claims. It is therefore important to discover the extent of any failure at high or low temperatures so that doctrinal decisions can be made regarding their use.

To evaluate their response to varying temperatures, the Siemens EPDs were placed in an 8 ft^3 Thermotron environmental chamber that in turn was placed in front of a 500 Ci calibrated ^{60}Co source. The temperature inside the chamber was stepped from -50°C to 50°C in 10°C increments. At each temperature, the dosimeters were allowed to sit in the chamber for 30-60 minutes before the exposure began, so as to come into thermal equilibrium with their surroundings. All exposure rates and times were identical.

Figure 6 depicts the measured dose rate of the three EPDs as a function of the temperature inside the chamber. The graph clearly depicts that the response of the dosimeters decreases with increasing temperature. The average rate of change in response is approximately $-0.12\% / ^{\circ}\text{C}$, and approximately 12% over the range of temperatures studied. Exactly why this occurs is not known. It was not observed in the irradiation of the MGP dosimeters, which employ a very similar technology. It is consistent, however, with previous type testing of the Siemens dosimeter [12].

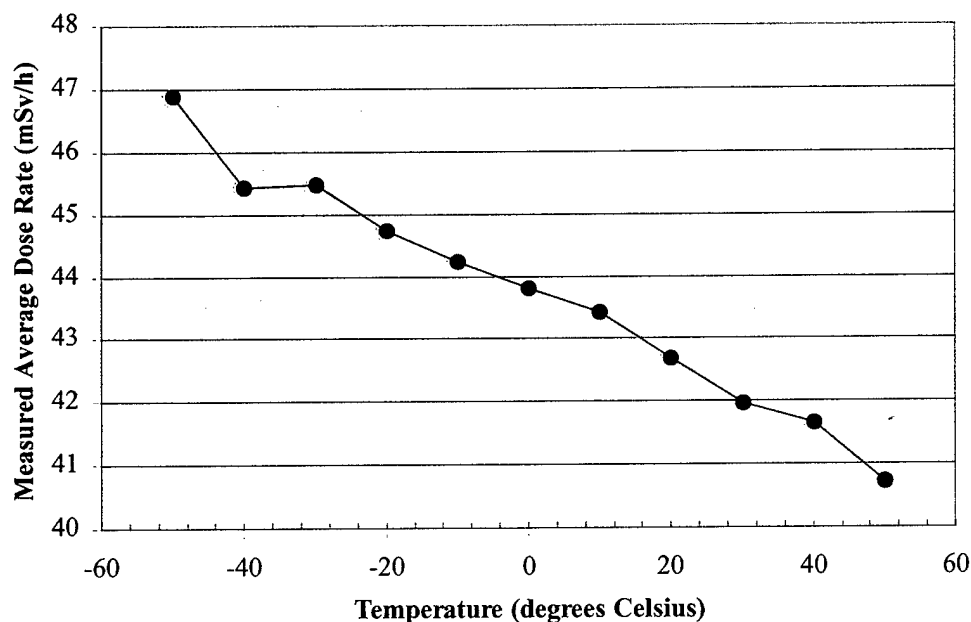


Figure 6: Measured average dose rate for the three EPD Mk2s in a ^{60}Co field as a function of ambient temperature.

As far as functionality at low temperatures is concerned, the Siemens EPDs fared quite admirably. The aspects in performance that were evaluated were

- the toggling of the LCD display in response to a button push, and
- the performance of the LCD display

Delays in toggling between display settings began to appear at -10°C where a slight (less than 0.5 s) delay was noted. At -20 °C, a 0.75 s delay was noted, at -30°C a 1.5 s delay was observed while at -40 °C, the delay exhibited was approximately 4-5 s. At all of these temperatures, the correct dose reading was perfectly legible.

At the extreme low temperature of -50°C, the display was frozen so that the correct dose reading was not displayed and the display would not change in response to button toggling. Furthermore, two out of the three EPDs displayed low battery warnings. After approximately 1-2 minutes at room temperature, the correct dose reading appeared on the LCD display despite some condensation. However, at this point, the display still failed to respond to a button push. After 3~4 minutes of acclimation at room temperature, the display did respond to a button push with a 1.5 s delay.

These results are very impressive, in that they suggest that these dosimeters could be used under a wide variety of temperatures, even wider than the manufacturer suggests. The temperature-dependence of the response is also valuable to know, just as the energy dependence is worth knowing. It should be noted that all of these tests were performed with lithium batteries in the dosimeters (as supplied by Siemens). Performance with an alkaline battery would surely be much worse at low temperatures. However, given the lifetime advantages of using lithium versus alkaline batteries (manufacturer claims 5 months versus 2 months), it is suspected that DND will use the lithium batteries in these dosimeters.

5 CONCLUSIONS AND RECOMMENDATIONS

This report has described some very thorough testing of the Siemens EPD Mk2 dosimeter. The dosimeter itself is very capable and a suitable candidate for Project 00002199. Its most serious shortcomings are in the variation of its response with dose rate, energy, and temperature, but these factors are all relatively minor (although they are important to keep in mind).

This dosimeter is most comparable to the new MGP DMC and SOR dosimeters that have also been tested by DREO. By way of conclusion, the results of the tests of these two dosimeters will be compared below.

5.1 Response Dependence on Dose Rate and Energy

Both the Siemens and MGP dosimeters were tested over a wide range of dose rates with both Cobalt-60 and Cesium-137 sources. The MGP dosimeter's response was relatively flat over the testing range, whereas the Siemens product showed varying response depending on dose rate, with relative response varying by as much as 20% in front of a Cobalt-60 source. The MGP dosimeter also measures dose rates accurately up to 10 Sv/h, while the Siemens dosimeter's response falls off sharply beyond a few sieverts per hour. The MGP product is, therefore, superior in both respects.

Siemens, however, has a distinct advantage in terms of energy response. As discussed previously, the response of the Siemens and MGP products above 100 keV are essentially the same. Below 100 keV, they are very different. The MGP dosimeter response rises to 1.5 at 60-80 keV, and then falls rapidly to zero. The Siemens dosimeter response falls to 0.5 at 60 keV, but then climbs again, remaining around 1.3 down to 20 keV. While both systems have their shortcomings below 100 keV, the Siemens dosimeter has the advantage of non-zero response to much lower energies.

The two dosimeters are equally sensitive to radiation, but clearly have different algorithms for calculating dose rates. As a result, the Siemens product shows much less fluctuation at low dose rates, likely at the expense of longer response times.

5.2 Dosimeter-Reader Communication

Both dosimeters are used in concert with a reader. The MGP dosimeter uses a low-frequency magnetic coupling to allow the two devices to communicate, while the Siemens product uses an infrared wand. Neither method is perfect. The MGP system was prone to error, meaning that dosimeters would sometimes have to be read several times to transfer data. Similarly, we have observed that writing information to the Siemens dosimeter does not always work on the first try. The MGP system does have the advantage of greater range, although we observed during previous work that turning up the range of the reader resulted in anomalous behaviour of the dosimeter when it was brought too close to the reader. Overall, the advantage goes to the Siemens system. The

Siemens system also has the edge in terms of dose management software, where their system has been developed to a far greater extent.

5.3 Low- and High-Temperature Performance

Neither dosimeter was adversely affected by temperatures up to 50°C. However, based on DREO test results, the Siemens dosimeter is a much better system in terms of low-temperature performance. Testing of the MGP product showed that it was not reliable below -20°C, whereas this work has demonstrated that the Siemens dosimeter performs well down to -40°C. This is not to say that a different doctrinal approach could not overcome this difference in performance. It should also be noted that MGP has since developed a product with a higher-performance battery that is meant to improve the dosimeter's performance at low temperatures.

6 REFERENCES

1. "Report on Cs-137 exposure in Lilo, Georgia", presentation at the sixth meeting of NATO LG.7 WG.2, February 1998 (UNCLASSIFIED).
2. R. A. Wall, R. Hugron, and T. A. Jones, "Final Report on DNBCD Technical Assist Visit – Op KINETIC", DNBCD, March 2000 (UNCLASSIFIED).
3. S. Pongpao and S. Prakan, "Perilous Operation Continues", Bangkok Post, 20 Feb 2000.
4. "Project Charter Version 1.1 for DSP Project 00002199 (Nuclear Detection, Identification, and Dosimetry Project)", DNBCD and DSSPM, 8 September 1999.
5. "Siemens Electronic Personal Dosimeter EPD Mk2: General Specifications", Siemens plc, 1999.
6. D. S. Haslip, T. Cousins, D. Estan, T. A. Jones, and B. E. Hoffarth, "Buy & Try Testing of MGP DMC 2000S and NRC UDR-13A Dosimeters: Final Report of Tasking W28476KR00A", DREO TM 1999-109, November 1999.
7. J. Bliss, personal communication.
8. Bubble Technology Industries, "BTI Spectroscopic Survey System Microspec-2 for High-Sensitivity Radiation Surveying with Isotope Identification", 1998.
9. D. S. Haslip *et al.*, "TTCP CBD AG44 Low-Level Radiation Dosimetry Intercomparison", TR-CBD-AG44-1-2000, April 2000.
10. "Operational Characteristics, Technical Specifications and Evaluation Criteria for RADIAC Equipment for Use Under Low Level Radiation Conditions" Addendum to NATO Triptych D/104 (AC/225 (Panel VII) D/104), 1998.
11. T. Cousins, E. B. Horvath, and T. A. Jones, "Evaluation of Monoenergetic X-ray Production Capabilities within DND", DREO report for Project 2668 (FE 847696FCQ02), 1997.
12. J. Jevcak, private communication.

DOCUMENT CONTROL DATA		
(Security classification of title, body of abstract and indexing annotation must be entered when the overall document is classified)		
1. ORIGINATOR (the name and address of the organization preparing the document. Organizations for whom the document was prepared, e.g. Establishment sponsoring a contractor's report, or tasking agency, are entered in section 8.) Defence Research Establishment Ottawa Ottawa, Ontario K1A 0Z4		2. SECURITY CLASSIFICATION (overall security classification of the document, including special warning terms if applicable) UNCLASSIFIED
3. TITLE (the complete document title as indicated on the title page. Its classification should be indicated by the appropriate abbreviation (S,C or U) in parentheses after the title.) Testing of the Siemens EPD Mk2: Final Report of Tasking W28476KR00X (DSSPM) (U)		
4. AUTHORS (Last name, first name, middle initial) Haslip, Dean S.; Cousins, Tom; Estan, Diego; Brisson, Jean-Roch; Hoffarth, Bernard E.; Jones, Trevor A.		
5. DATE OF PUBLICATION (month and year of publication of document) April 2000	6a. NO. OF PAGES (total containing information. Include Annexes, Appendices, etc.) 12	6b. NO. OF REFS (total cited in document) 12
7. DESCRIPTIVE NOTES (the category of the document, e.g. technical report, technical note or memorandum. If appropriate, enter the type of report, e.g. interim, progress, summary, annual or final. Give the inclusive dates when a specific reporting period is covered.) DREO Technical Memorandum		
8. SPONSORING ACTIVITY (the name of the department project office or laboratory sponsoring the research and development. Include the address.) Defence Services Procurement Project 00002199 Directorate of Soldier Systems Program Management (DSSPM) National Defence Headquarters, Ottawa, Ontario K1A 0K2		
9a. PROJECT OR GRANT NO. (if appropriate, the applicable research and development project or grant number under which the document was written. Please specify whether project or grant) DSP 00002199 (FE W28476KR00X)	9b. CONTRACT NO. (if appropriate, the applicable number under which the document was written)	
10a. ORIGINATOR'S DOCUMENT NUMBER (the official document number by which the document is identified by the originating activity. This number must be unique to this document.) DREO Technical Memorandum # TM2000-034	10b. OTHER DOCUMENT NOS. (Any other numbers which may be assigned this document either by the originator or by the sponsor)	
11. DOCUMENT AVAILABILITY (any limitations on further dissemination of the document, other than those imposed by security classification) <input checked="" type="checkbox"/> (X) Unlimited distribution <input type="checkbox"/> () Distribution limited to defence departments and defence contractors; further distribution only as approved <input type="checkbox"/> () Distribution limited to defence departments and Canadian defence contractors; further distribution only as approved <input type="checkbox"/> () Distribution limited to government departments and agencies; further distribution only as approved <input type="checkbox"/> () Distribution limited to defence departments; further distribution only as approved <input type="checkbox"/> () Other (please specify):		
12. DOCUMENT ANNOUNCEMENT (any limitation to the bibliographic announcement of this document. This will normally correspond to the Document Availability (11). However, where further distribution (beyond the audience specified in 11) is possible, a wider announcement audience may be selected.) Unlimited Announcement		

13. ABSTRACT (a brief and factual summary of the document. It may also appear elsewhere in the body of the document itself. It is highly desirable that the abstract of classified documents be unclassified. Each paragraph of the abstract shall begin with an indication of the security classification of the information in the paragraph (unless the document itself is unclassified) represented as (S), (C), or (U). It is not necessary to include here abstracts in both official languages unless the text is bilingual).

Defence Services Procurement Project 00002199 tasked DREO to test the new Siemens EPD Mk2 (an electronic personal dosimeter) at DREO's various irradiation facilities. The dependence of the response on dose rate, energy, and temperature were all studied. This dosimeter was found to be comparable to the DMC 2000S electronic dosimeter produced by Merlin-Guerin Products (MGP), although each has some particular advantages over the other. This dosimeter is an appropriate product for use as an electronic dosimeter by the Canadian Forces in a wide variety of radiation fields.

14. KEYWORDS, DESCRIPTORS or IDENTIFIERS (technically meaningful terms or short phrases that characterize a document and could be helpful in cataloguing the document. They should be selected so that no security classification is required. Identifiers such as equipment model designation, trade name, military project code name, geographic location may also be included. If possible keywords should be selected from a published thesaurus. e.g. Thesaurus of Engineering and Scientific Terms (TEST) and that thesaurus-identified. If it is not possible to select indexing terms which are Unclassified, the classification of each should be indicated as with the title.)

radiation
electronic dosimeter